
REPLACEMENT PARTS


QMJ High Density Fusible Switchboards

INDEX

QMJ Fusible Switches	Page
30 Ampere Series E1	2
60 Ampere Series E1	3
100 Ampere Series E1	4
200 Ampere Series E1	5
400 Ampere Series E1	6
600 Ampere Series E1	7



QMJ Fusible Switch – Series E1
Branch Units – 30 Ampere

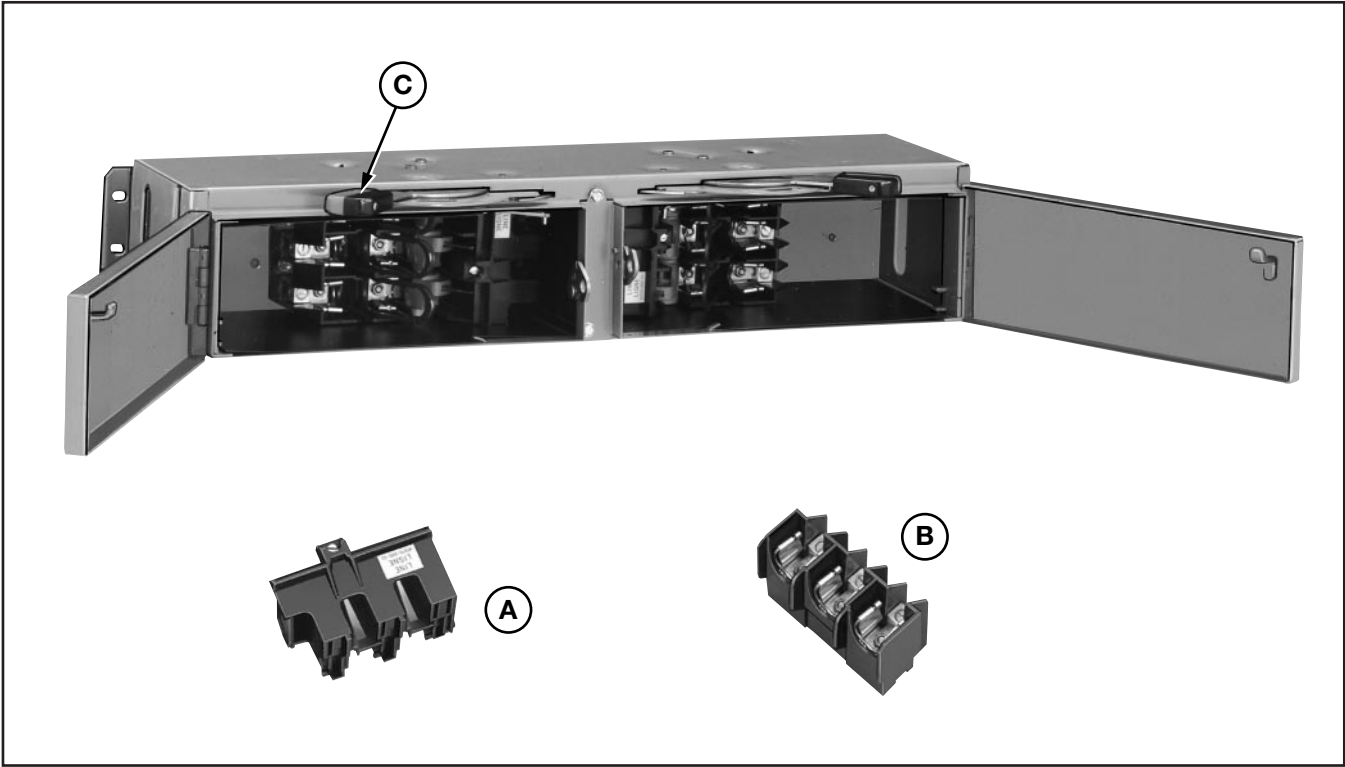


Parts shown in the table are only available as replacements.

Code Letter	Description	30 Ampere
		QMJ361T
A	Arc Suppressor Assembly	40512-534-50
B	Load Base Assembly	40560-025-50
C	Handle Knob Kit	40283-437-50
	Lug Assembly	40251-016-51
	Lug Mounting Screw	21963-171-80
	Load Base Mounting Screws	21427-171-61

**DANGER:** Hazard of electrical shock or burn. TURN OFF POWER supplying equipment before working inside. Replace all parts and close covers before energizing. Failure to follow these precautions can result in death or personal injury.

QMJ Fusible Switch – Series E1
Branch Units – 60 Ampere

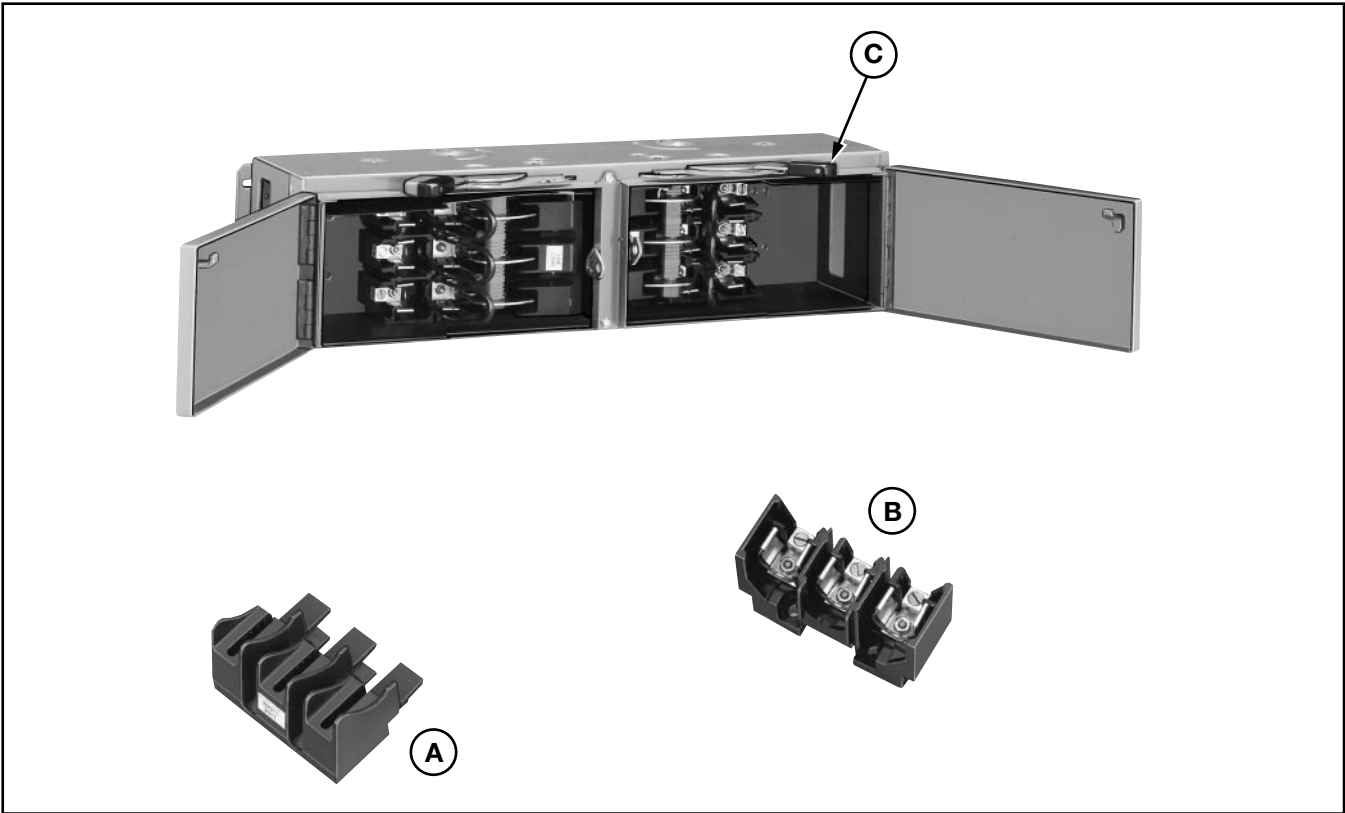


Parts shown in table are only available as replacements.

Code Letter	Description	60 Ampere
		QMJ362T
A	Arc Suppressor Assembly	40512-399-50
B	Load Base Assembly	40512-411-50
C	Handle Knob Kit	40283-437-50
	Lug Assembly	40251-016-51
	Lug Mounting Nut	23425-017-00
	Load Base Mounting Screws	40205-065-01



DANGER: Hazard of electrical shock or burn. TURN OFF POWER supplying equipment before working inside. Replace all parts and close covers before energizing. Failure to follow these precautions can result in death or personal injury.

QMJ Fusible Switch – Series E1
Branch Unit – 100 Ampere

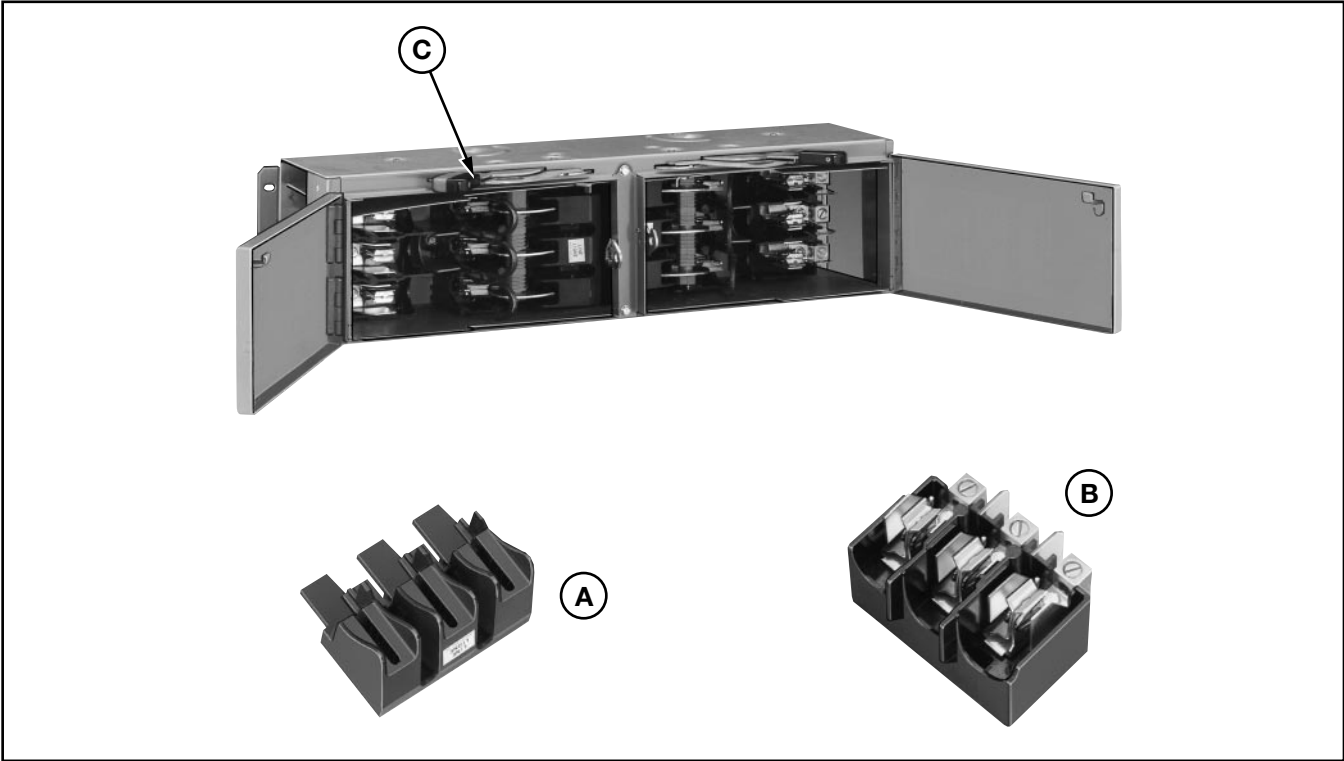


Parts shown in table are only available as replacements.

Code Letter	Description	100 Ampere
		QMJ363H and QMJ363T
A	Arc Suppressor Assembly	40512-399-50
B	Load Base Assembly	40521-077-50
C	Handle Knob Kit	40283-437-50
	Lug Assembly	40251-018-50
	Lug Mounting Screw	21926-203-20
	Load Base Mounting Screws	40205-065-01

 **DANGER:** Hazard of electrical shock or burn. TURN OFF POWER supplying equipment before working inside. Replace all parts and close covers before energizing. Failure to follow these precautions can result in death or personal injury.

QMJ Fusible Switch – Series E1
Branch Unit – 200 Ampere

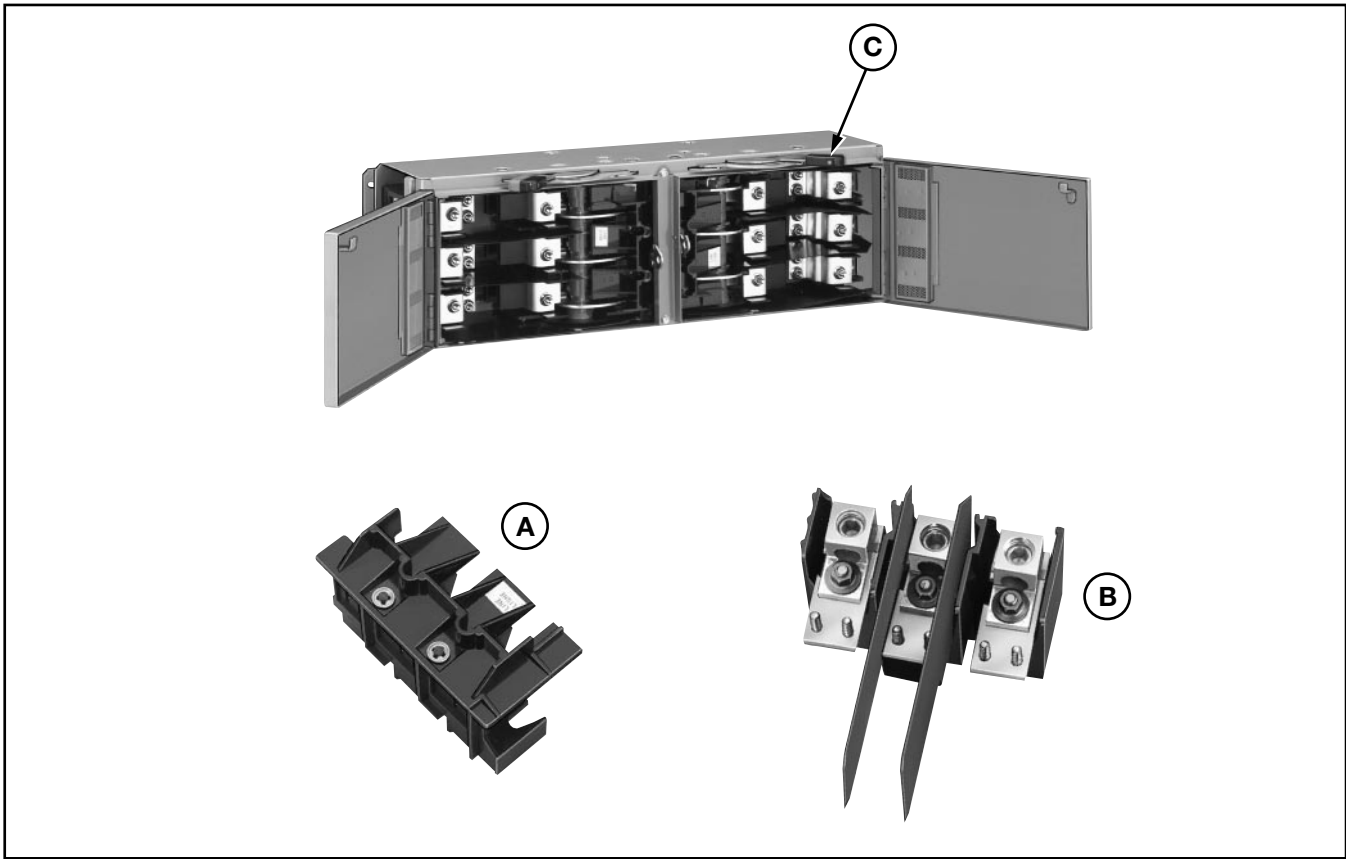


Parts shown in table are only available as replacements.

Code Letter	Description	200 Ampere
		QMJ364H and QMJ364T
A	Arc Suppressor Assembly	40520-838-50
B	Load Base Assembly	40521-070-50
C	Handle Knob Kit	40283-437-50
	Lug Assembly	40251-162-50
	Lug Mounting Nut	23427-022-00
	Base Mounting Screws	40205-065-01



DANGER: Hazard of electrical shock or burn. TURN OFF POWER supplying equipment before working inside. Replace all parts and close covers before energizing. Failure to follow these precautions can result in death or personal injury.

QMJ Fusible Switch – Series E1
Branch Units – 400 Ampere

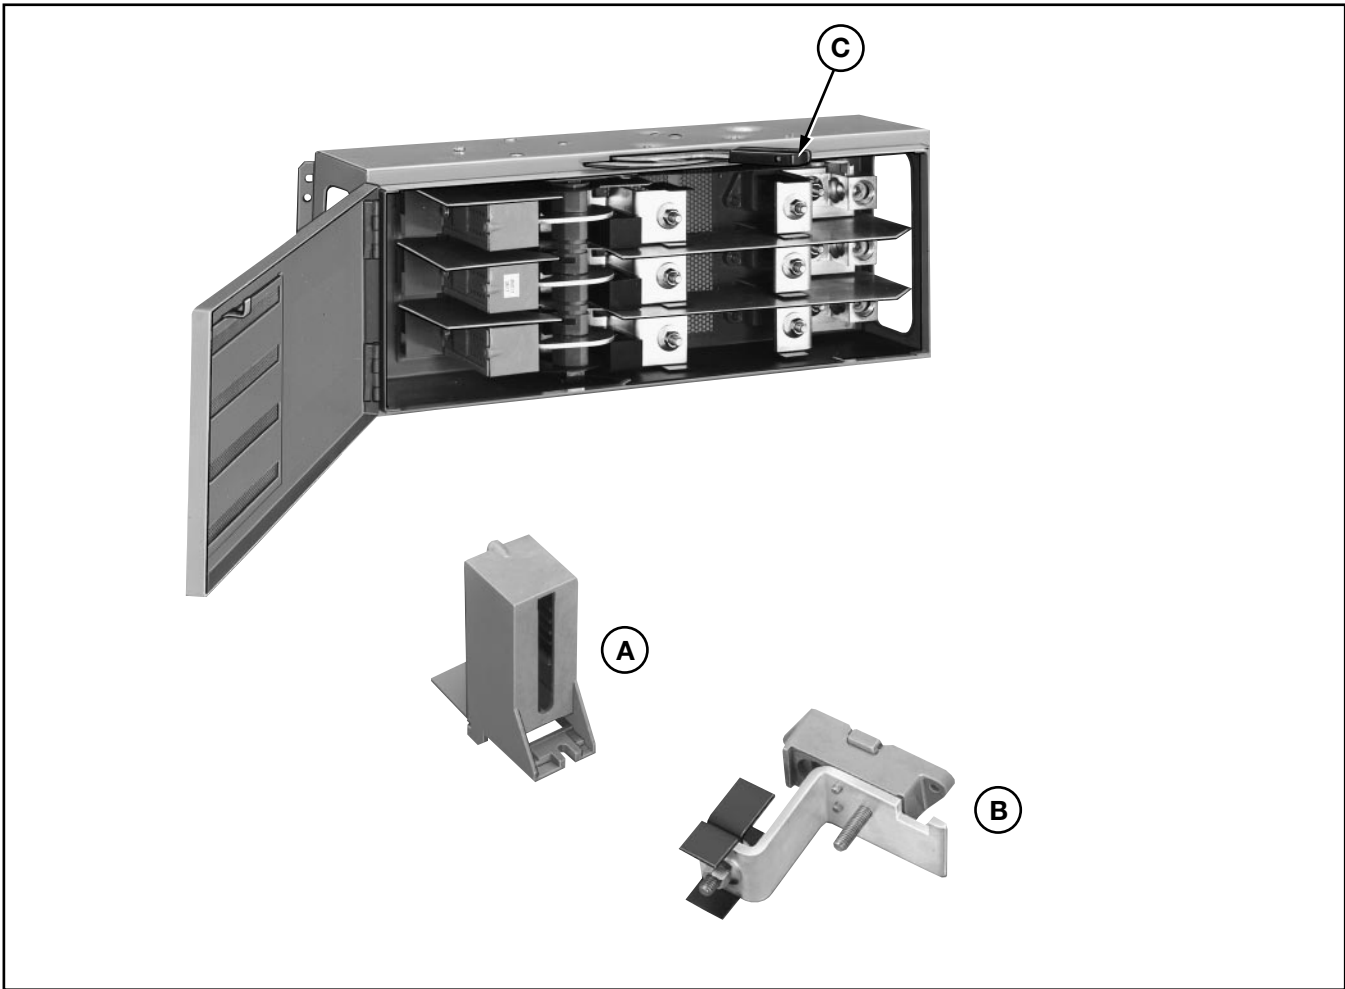


Parts shown in table are only available as replacements.

Code Letter	Description	400 Ampere
		QMJ365
A	Arc Suppressor Assembly	40520-289-50
B	Load Base Assembly	40521-089-50
C	Handle Knob Kit	40283-436-50
	Lug Assembly	40251-136-50
	Lug Mounting Nut	23427-024-00
	Load Base Mounting Screws	40205-065-01

 **DANGER:** Hazard of electrical shock or burn. TURN OFF POWER supplying equipment before working inside. Replace all parts and close covers before energizing. Failure to follow these precautions can result in death or personal injury.

**QMJ Fusible Switch – Series E1
Branch Unit – 600 Ampere**

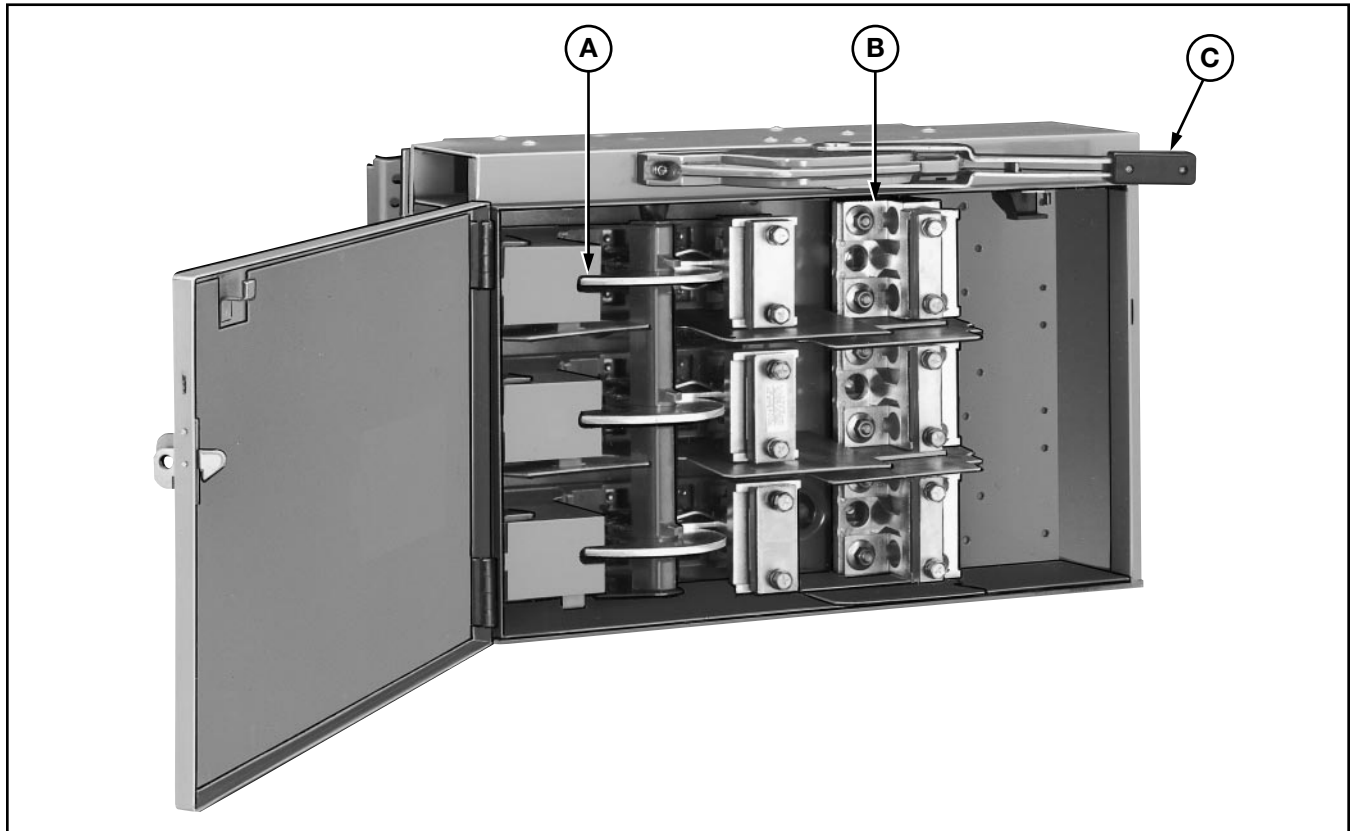

Parts shown in table are only available as replacements.

Code Letter	Description	600 Ampere
		QMJ366
A	Arc Suppressor Assembly	40520-318-50
B	Load Base Assembly	40521-120-50
C	Handle Knob Kit	40283-435-50
	Lug Assembly	40521-287-51
	Lug Mounting Nut	23427-024-00
	Load Base Mounting Screws	21427-202-41



DANGER: Hazard of electrical shock or burn. TURN OFF POWER supplying equipment before working inside. Replace all parts and close covers before energizing. Failure to follow these precautions can result in death or personal injury.

 and Square D are Registered Trademarks of Square D Company.

