

Special Micrologic® Trip Unit Instructions

Retain for future use.

CAUTION


HAZARD OF EQUIPMENT DAMAGE

- Do NOT install this trip unit in Compact NS1600b–3200 H Interruption Rating or PowerPact RJ/RL Circuit Breakers with date code of 09011 or earlier (A, Figure 1).
- For Micrologic P/H trip units to be installed in equipment for ground fault protection or alarm systems which include MDGF module(s), follow the trip unit setting instructions in this instruction bulletin.

Date Code Check

Confirm date code on faceplate of circuit breaker (A) is later than 09011.

Figure 1: Date Code Location

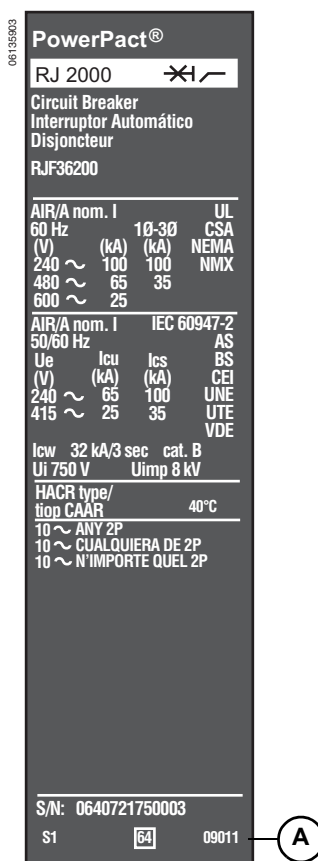

- i. Hourglass screen will appear momentarily. Protection menu will appear after save is complete.
- j. Press the Protection Menu button twice to return to bar graph screen.


Figure 2: Ineutral Protection




2. Set System Type:

- Press Maintenance Menu button. History logs is selected.
- Press Down button until Metering setup is highlighted. Press Enter button.

Figure 3: System Type

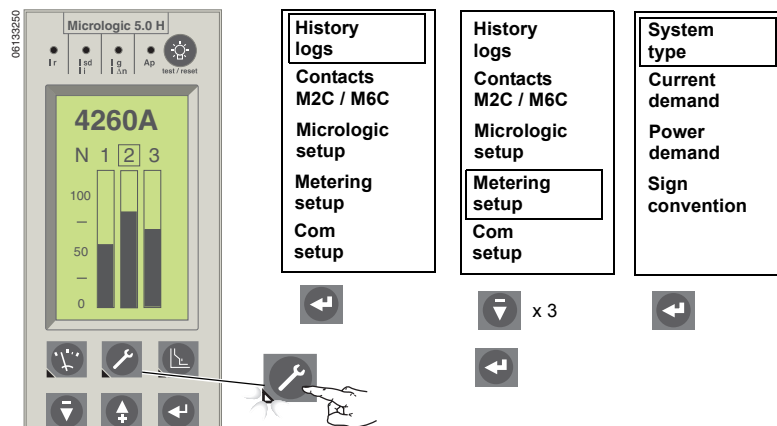

- System type is selected Press Enter button.
- Press Enter button to highlight System type selection. Press Down button until 3Φ4W 3CT appears in the window. Press Enter Button.
- Press the Maintenance Menu button to save settings.
- When Save settings screen appears, press Down button to highlight Yes.

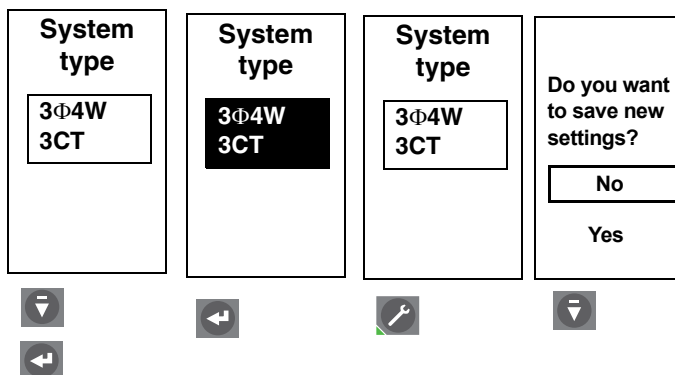

- Press the Enter button to save settings
- Hourglass screen will appear momentarily. Maintenance menu will appear after save is complete.
- Press the Maintenance Menu button twice to return to bar graph screen.

Circuit breaker can now be installed in equipment which include MDGF module(s).



Schneider Electric USA
3700 Sixth St. SW
Cedar Rapids, IA 52404 USA
1-888-SquareD (1-888-778-2733)
www.schneider-electric.us

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.