


Netcfg


To use Netcfg successfully, any EnerSure xD meters trying to be located/programmed, need to be on the same network, and/or directly connected to the computer running Netcfg. Close all virtual Ethernet connections on the computer. If any virtual connections exist, Netcfg may not be able to locate any meters.

Using Netcfg

Open Netcfg by clicking on Netcfg.exe. Clicking the **Discover** button will bring up all EnerSure xD meters on the network as shown below.

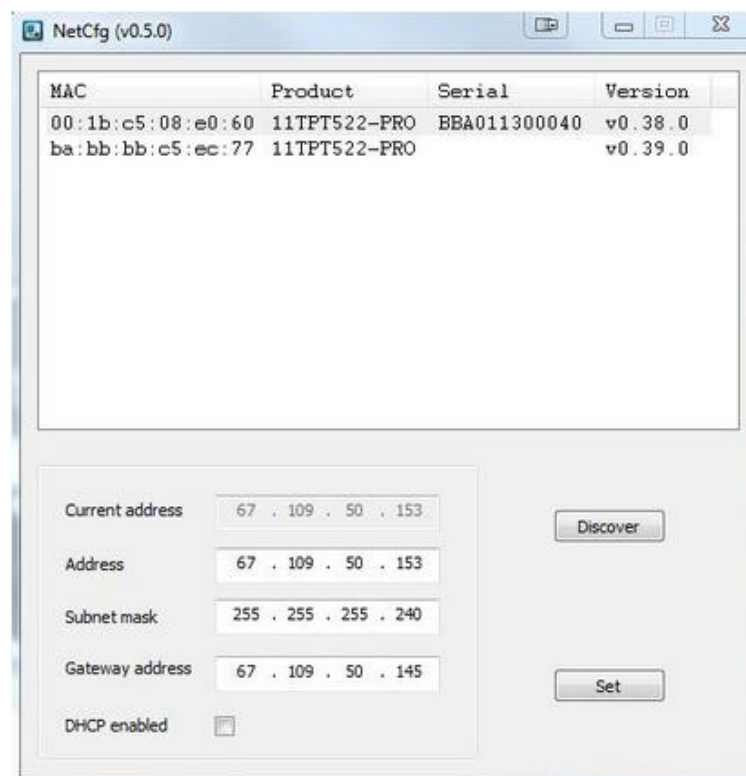

Clicking on a device will bring up the current IP settings for the device. The IP settings for the selected device can be easily edited and sent to the device by clicking the **Set** button after making the desired address changes. To finalize the new settings, enter the password in the screen that appears, shown below.

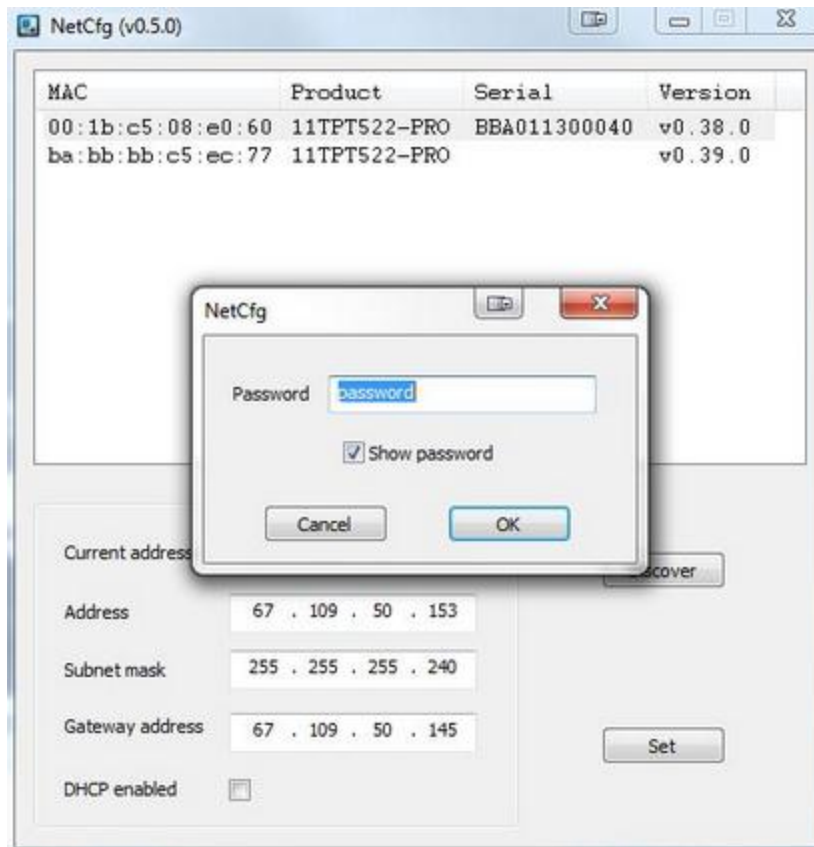

The password to save the new address settings is the same password used to log into the web interface. The default password for the web interface is **password**.

IP address changes take effect immediately after the password is accepted.