

LED status on ACE850

? means the state doesn't matter

P1 Lk Act	P1 100	P2 Lk Act	P2 100	Sts	On / Fault	Signification
						No power supply
?	?	?	?			Initialization in progress
?	?	?	?			Connection with the Sepam is not established
						(1) CPU failure (offline)
						(2) SRAM failure (offline)
						(3) SDRAM failure (offline)
						(4) PLL failure
						(5) Watchdog expiration
						(6) Fatal error (online)
						(7) Audit stack error (online)
?	?	?	?			ACE850 is operational but Ethernet link is not established
?	?	?	?			ACE850 is operational, CID file analysis in progress (fast flashing, max duration: 60 secondes)
?	?	?	?			ACE850 is operational, Ethernet link is established
?	?	?	?			ACE850 is operational, flashes burst on STS: <ul style="list-style-type: none"> ➤ 3 flashes : Ethernet link lost ➤ 4 blinks : duplicate IP address ➤ 6 blinks : Invalid Ip config
?	?	?	?	?		ACE850 is operational but link to Sepam base is lost (visible for 15 secondes maxi then reboot occur)
		?	?	?	?	Link on P1 not established and port configuration is 10 Mbits/s or not set (autonegotiation)
		?	?	?	?	Link on P1 not established and port configuration is 100 Mbits/s
		?	?	?	?	Link on P1 established at 10 Mbits/s
		?	?	?	?	Link on P1 established at 100 Mbits/s
	?	?	?	?	?	Traffic on port P1
?	?	X	X	?	?	Port P2 identical to port P1

Note: on ACE850FO P1 100 and P2 100 are always on after initialization period, whatever a FO is present or not on the port.