

Open Somove 2.0 connect via Bluetooth or USB cable.

You have to be connected live to the ATV32 drive before you can assign or program your Safety inputs.

**Configuration of Safety Functions**

Information	STO	SLS	SS1	Input / Output
-------------	-----	-----	-----	----------------

Date:

Device Type:

Drive Reference:


Device Serial No:

Machine Name:

Company Name:

End User Name:


Comments:

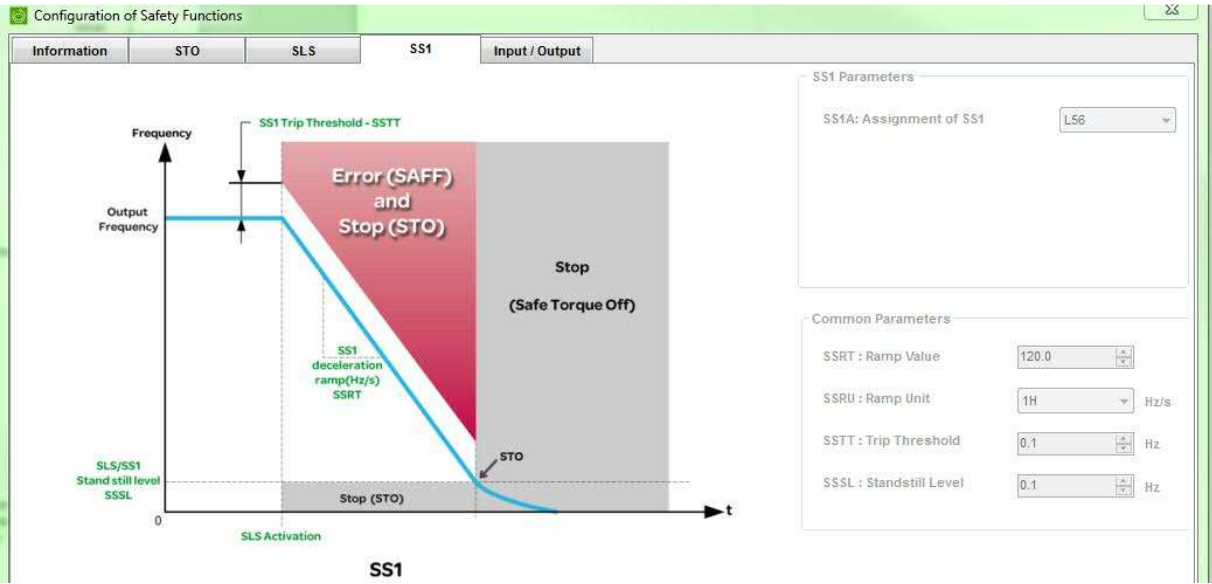

Below make sure if the drive has safety inputs already programmed you click load from device and correct. If you store to the device you might override your program including your safety inputs.





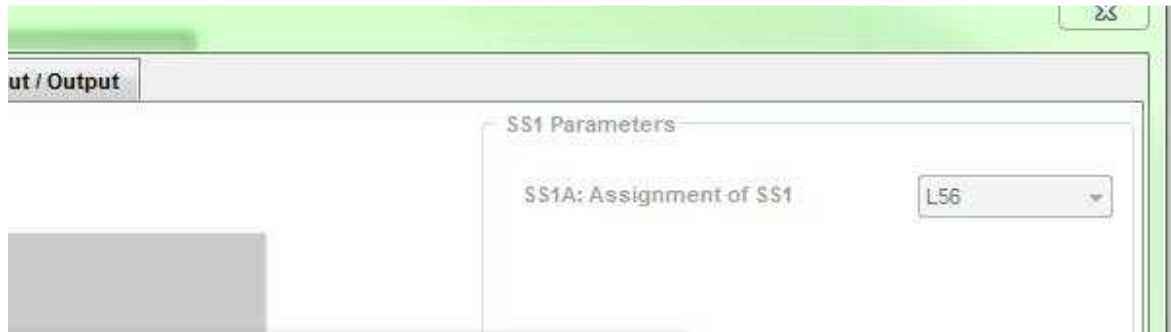

If you look at the Status of LI5 and LI6 on the face of the drive it will show  
Inactive if its not assigned or STO if the SAFF safe input is turned on.