


Question: In Sepam series 20 what does it mean “Setting group A and B “in selection of active group in SFT2841 setting tool? When do we use this setting?

Setting group A AND B means that both groups are active. In fact by this setting in Sepam series 20 the concept of having different groups is eliminated. We use this option whenever we need to set phase overcurrent or earth fault protection with more than 2 setting elements. In Sepam series 20, when we have just one set of group activated (for example setting group A) we can just set 2 elements for current protections. Anyhow if we need to set 4 elements then it is mandatory to choose setting group A AND B.

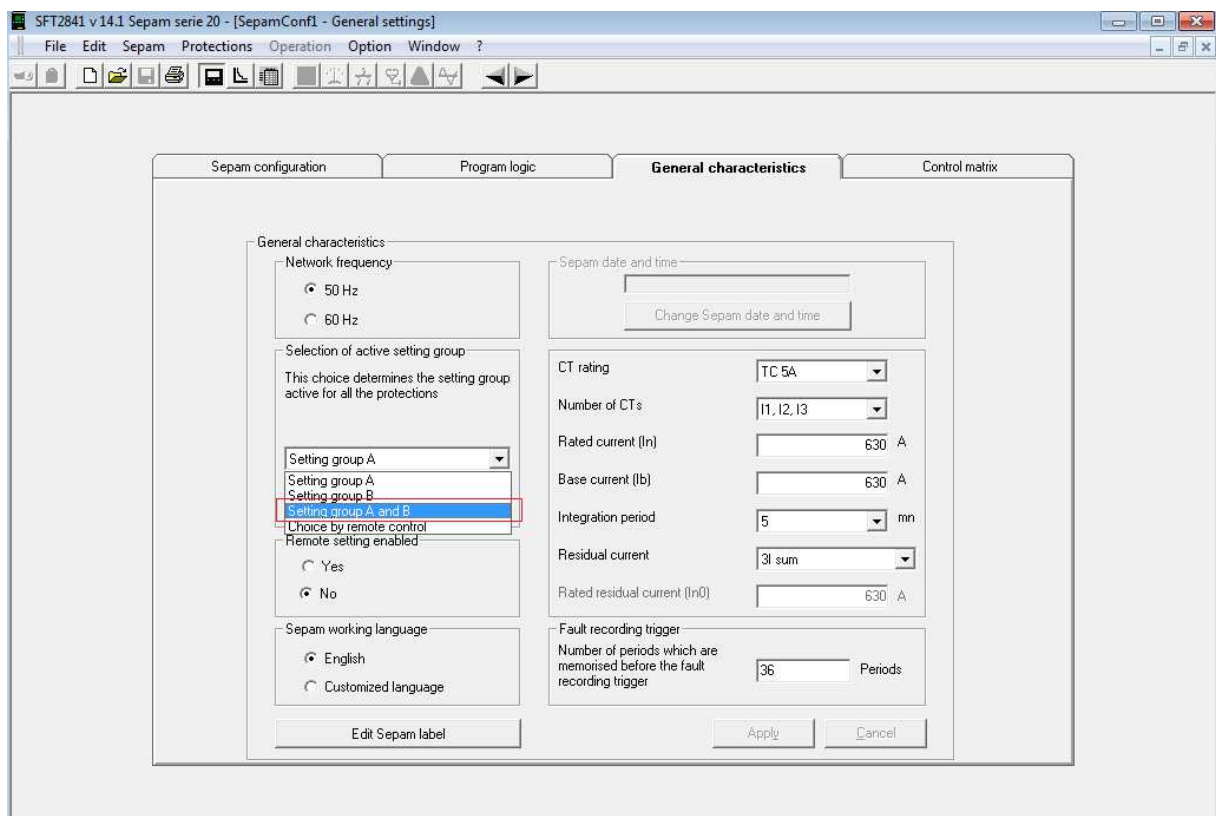

This option is only available for Sepam series 20. Checking other series (40, 60 and 80) this option is not included in selection of active group area. By default Sepam series 40, 60 and 80 have got 4 elements or more for phase and earth over current protections.

AEDL3