

Menu: SETTING / CLOCK

Use this menu to change the time and date settings.

MENU Level 1	MENU Level 2	MENU Level 3 ¹	Meaning
		EXIT	
4. SETTING	7. CLOCK	Tm 10.34 A	Time: am/pm
		Dy 12/23	Month/day
		Yr 2009	Year
		DST auto	Daylight saving time: auto/off (North America time zones only)
		EXIT	

¹ Factory settings are shown on the right-hand side of this column.

Menu: SETTING / PASSWORD

Use this menu to change password protection.

MENU Level 1	MENU Level 2	MENU Level 3 ¹	Meaning
		EXIT	
4. SETTING	8. PASSWRD	PSWD ***	Password range: 000–999 Factory setting: 807
		LOCK on	Password protection activated (on) or deactivated (off)
		EXIT	

¹ Factory settings are shown on the right-hand side of this column.

Menu: SETTING / FACTORY SETTING

Use this menu to reset the device to factory defaults.

NOTE: Once the device is reset to factory defaults, it cannot be restored to any previous state automatically. Any important changes to settings must be re-entered.

MENU Level 1	MENU Level 2	MENU Level 3 ¹	Meaning
		EXIT	
4. SETTING	9. FACT.SET	F.SET no	Keeps current settings
		yes	Restores settings to the factory defaults shown on page 17
		EXIT	

¹ Factory settings are shown on the right-hand side of this column.

Menu: SETTING / SERVICE

This menu is intended for service by Schneider Electric only.