


You can assign /enter the text as per the below procedure:

Please click matrix available in the tool bar.



Please Click on the message & you will get the below screen

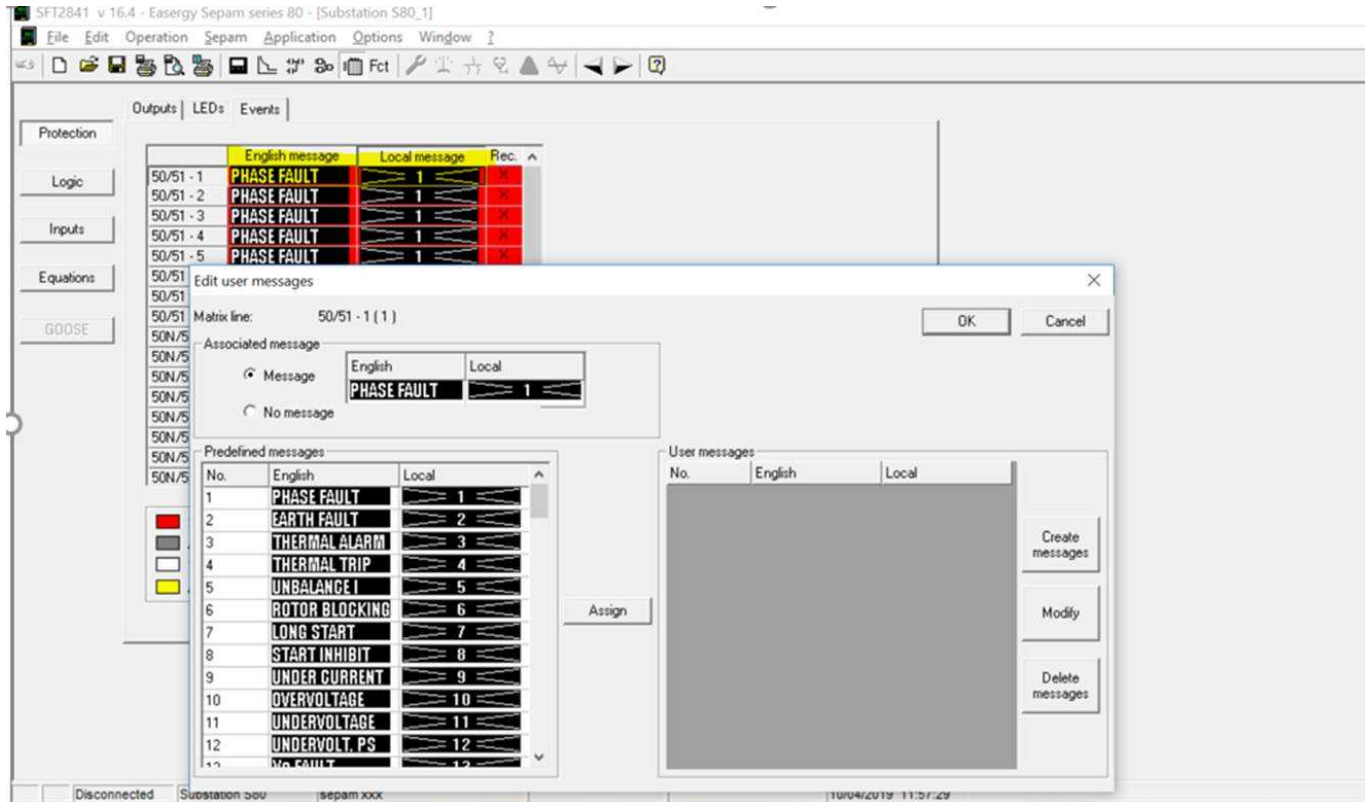

Then click on the create messages .You will get the details in the user messages as per the below (highlighted in yellow)

Matrix line: 50/51 - 1 (1)

Associated message

☒ Message English Local
PHASE FAULT 1

☐ No message

Predefined messages

No.	English	Local
1	PHASE FAULT	1
2	EARTH FAULT	2
3	THERMAL ALARM	3
4	THERMAL TRIP	4
5	UNBALANCE I	5
6	ROTOR BLOCKING	6
7	LONG START	7
8	START INHIBIT	8
9	UNDER CURRENT	9
10	OVERVOLTAGE	10
11	UNDERVOLTAGE	11
12	UNDERVOLT. PS	12
13	No FAULT	13

Assign

User messages

No.	English	Local
100	?	?

Create messages

Modify

Delete messages

Then click in the user message to enter the text ..Edit bitmap box will open to enter you text:
 Enter your text and click OK

Associated message

☒ Message English Local
PHASE FAULT 1

☐ No message

Predefined messages

No.	English	Local
1	PHASE FAULT	1
2	EARTH FAULT	2
3	THERMAL ALARM	3
4	THERMAL TRIP	4
5	UNBALANCE I	5
6	ROTOR BLOCKING	6
7	LONG START	7
8	START INHIBIT	8
9	UNDER CURRENT	9
10	OVERVOLTAGE	10
11	UNDERVOLTAGE	11
12	UNDERVOLT. PS	12
13	No FAULT	13

Assign

User messages

No.	English	Local
100	?	?

Create

Edit Bitmap

Preview

Initialize by text

Font, Police, ...

Load Bitmap ...

OK

Cancel

Matrix line: 50/51 - 1 (1)

OK Cancel

Associated message

☒ Message ☐ No message

English	Local
PHASE FAULT	1

Predefined messages

No.	English	Local
1	PHASE FAULT	1
2	EARTH FAULT	2
3	THERMAL ALARM	3
4	THERMAL TRIP	4
5	UNBALANCE I	5
6	ROTOR BLOCKING	6
7	LONG START	7
8	START INHIBIT	8
9	UNDER CURRENT	9
10	OVERVOLTAGE	10
11	UNDERVOLTAGE	11
12	UNDERVOLT. PS	12
13	No FAULT	13

Assign

User messages

No.	English	Local
100	OC	?

Create messages

Modify

Delete messages

Then click on the user message which you created (highlighted in blue).
Click **Assign** to get the created text .

Associated message

☒ Message ☐ No message

English	Local
PHASE FAULT	1

Predefined messages

No.	English	Local
1	PHASE FAULT	1
2	EARTH FAULT	2
3	THERMAL ALARM	3
4	THERMAL TRIP	4
5	UNBALANCE I	5
6	ROTOR BLOCKING	6
7	LONG START	7
8	START INHIBIT	8
9	UNDER CURRENT	9
10	OVERVOLTAGE	10
11	UNDERVOLTAGE	11
12	UNDERVOLT. PS	12
13	No FAULT	13

Assign

User messages

No.	English	Local
100	OC	?

Create messages

Modify

Delete messages