 
 


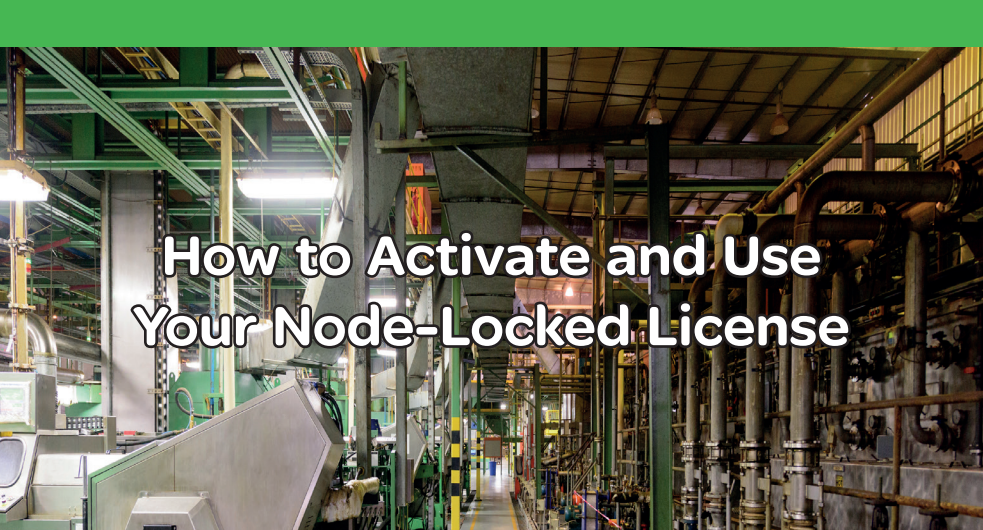

How to Activate and Use Your Node-Locked License

Eco[®]truxure™
Control Expert

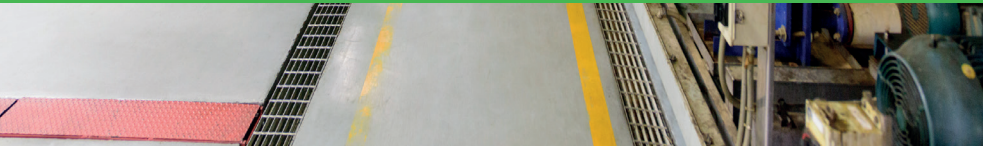

How to Activate and Use Your Node-Locked License

EcoStruxure Control Expert proposes a new,
easy-to-use, flexible licensing model.

This document provides key information to use the software.

Additional information is available
in the EcoStruxure Control Expert Installation Manual.



Node-Locked License

A Node-Locked license can only be used on the computer where Control Expert is installed. It has to be activated with the **Schneider Electric License Manager**.





How to Activate a Node-Locked License

1. Get your Activation ID

You received your Activation ID (either printed and sent in an envelope or sent via e-mail).

Activation ID enclosed

This envelope contains the license for your
Schneider-Electric software.
Keep it carefully

Activation ID example : A-BSCK-CDP9-F7TS


Information for Software Activation	
Activation ID :	A - BSCK - CDP9 - F7TS
Type :	Single ; L Permanent
Part number / Reference produit :	CEXSPUCZLSPMZZ
Product / Produit :	EcoStruxure Control Expert V14.0
	
	

2. Start the Schneider Electric License Manager

Select


Start | Programs | Schneider Electric License Manager | License Manager.

Select Activate.

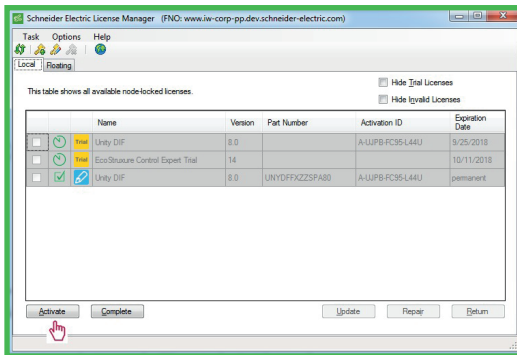


3. Enter your Activation ID

The following screen appears if your computer has an internet connection.

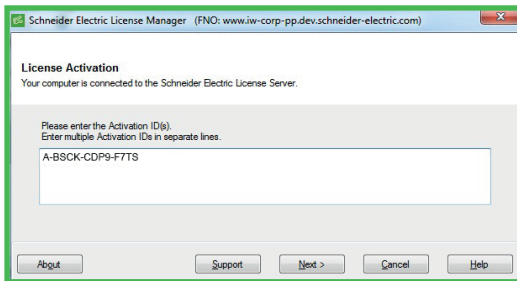

Click Next.

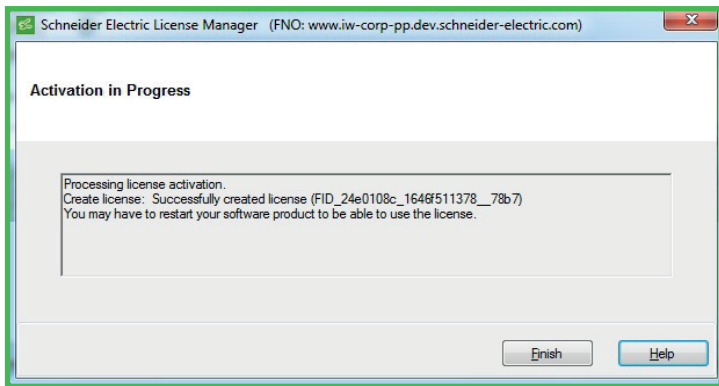

4. Finish

After a few seconds, the successfully created license message appears. Control Expert is now activated on your computer.

Alternative Options to Activate a License

If your computer has no internet connection or is not connected to the Schneider Electric License Server, you can activate by email, phone, or smartphone.






How to Transfer a License to Another Computer

To transfer a license from one computer to another computer, first send it back to the Schneider Electric License Server, then activate it on the new computer.

Return the license from the original computer

Start the Schneider Electric License Manager,
Select the Activation ID you want to transfer,
Select Return, and confirm.

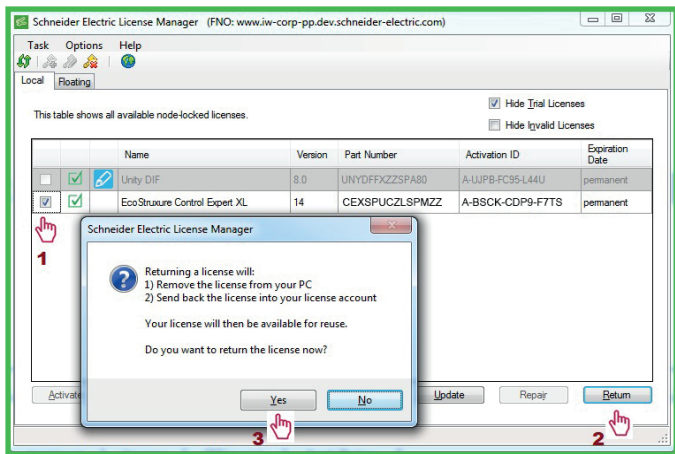

Activate the license on a new computer

See *How to Activate a Node-Locked License on the previous page.*



What is the Software License Portal (SLP) ?

The Software License Portal (SLP) is a cloud-based service of Schneider Electric that provides universal access to your Schneider Electric Software licenses on the web. The SLP allows you to overview and manage your licenses and registrations.




Registration

Activation is mandatory, but registration is optional.
Registration requires you to create a SLP account.

1. Create your SLP account on Software Licensing Web Portal

Go to www.schneider-electric.com/licensing or directly click the globe icon  on the Schneider Electric License Manager toolbar.

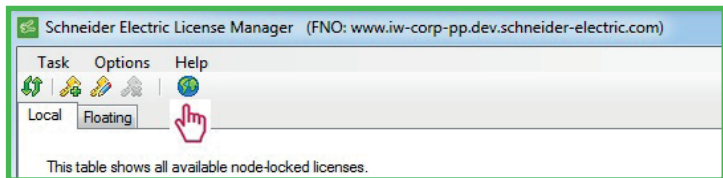

On the Software License Web Portal, select **Login** then click **Create new Schneider Electric Web User Account**.

Enter your email address that will be your user ID for your SLP account. Fill in the mandatory fields and validate.

2. Once you have created your account, log in

Your email address is your account ID.

3. Register the license in your account

Support - Software Licensing

You are here: Home > Support > Software Licensing > Register license into my account

Register license into my account

Please get the **certificate of authenticity** for your license.
Enter the Activation ID below.

Register

Benefits >>

You can register a license even if it has not yet been activated using the License Manager or Floating License Manager software.

4. View your licenses

Support - Software Licensing

You are here: Home > Support > Software Licensing > Search / View my license

Search / View my license

Search by Activation ID or Entitlement ID

Search

View all my licenses >>

Filters

1 - 10 out of 13

+/-	Activation ID	Product	Part Number	Usage Rights	License Status
+	A-APES-FXBP-F4L2	EcoStruxureModiconBuilder Version 3.1	UNYPSBXZZSPA31	0/1	
+	A-6BPC-CYTJ-NCYC	Sample Commercial Large Version 1.0	SVLCTPCZLTP810	0/10	
+	A-2SAR-FCPG-YC93	Unity Loader	UNYLZZXZZSPA81	0/1	

That's it!



Software Registration Centers

Europe | English | 8:30 - 17:00 (CET)

☎ **+420 281 088 696**

✉ src-eeurope@schneider-electric.com

North and Central America | English | 8:00 - 17:00 (EST)

☎ **+1 888 266 8705 (from US and Canada)**

☎ **+1 978 975 9755 (from other countries)**

✉ src-americas@schneider-electric.com

South America | English | 8:30 - 17:00 (CET)

☎ **+420 281 088 696**

✉ src-southamerica@schneider-electric.com

Asia and Pacific | English | 9:00 - 17:00 (AEDT)

☎ **+61 2 9125 8531**

✉ src.asiapacific@schneider-electric.com

France | French | 8:00 - 18:00 (CET)

☎ **0825 012 999 (national)**

☎ **+33 492 088 268 (international)**

✉ global-src-france@schneider-electric.com

Italy | Italian | 8:00 - 18:00 (CET)

☎ **+39 011 407 3333**

✉ it-registrazione-software@schneider-electric.com

All registration centers are open Monday to Friday.

CET = Central Europe Time = UTC + 01:00

EST = Eastern Standard Time = UTC- 05:00

AEDT = Australian Eastern Daylight Time = UTC + 10:00

UTC = Coordinated Universal Time

PHA7333901

