

Password Management

Overview

This function is available with the extended mode using SoMove, in the connected mode. It allows the creation of a password to avoid modification of LTM R parameters by unauthorized people. When a password is set, unauthorized users can view the displayed information, but cannot edit parameter values.

The password must be an integer from 0001 to 9999.

The password is also required to execute the SoMove **Store to Device** function.

Creating a Password

Step	Action
1	Click Device → password → create password . The create password dialog box opens.
2	In the enter new password field, enter a new password.
3	In the confirm new password field, enter the new password again.
4	Click OK to activate the password and close the dialog box.

Modifying a Password

Step	Action
1	Click Device → password → modify password . The modify password dialog box opens.
2	In the old password field, enter the current password.
3	In the enter new password field, enter a new password.
4	In the confirm new password field, enter the new password again.
5	Click OK to activate the new password and close the dialog box.

Deleting a Password

Step	Action
1	Click Device → password → delete password . The delete password dialog box open.
2	In the old password field, enter the current password.
3	Click OK to delete the password and close the dialog box.