



Aparecerá el cuadro indicado a continuación, dónde se muestran las direcciones del mapa Modbus:

The screenshot shows the 'Binary Inputs' tab of the Modbus Communications Configuration window. The table displays the following data:

Address	Name	Invert	Comment
0	Abnormal Operator ...	<input type="checkbox"/>	
1	Maintenance Required	<input type="checkbox"/>	
2	Auxiliary Supply Fail	<input type="checkbox"/>	
3	Controller Mode	<input checked="" type="checkbox"/>	
4	Switchgear Tripped - ...	<input type="checkbox"/>	
5	Switchgear Closed	<input type="checkbox"/>	
6	Phase Ai Live	<input type="checkbox"/>	
7	Phase Bi Live	<input type="checkbox"/>	
8	Phase Ci Live	<input type="checkbox"/>	
9	Phase Ax Live	<input type="checkbox"/>	
10	Phase Bx Live	<input type="checkbox"/>	
11	Phase Cx Live	<input type="checkbox"/>	
12	Source Voltage Status	<input type="checkbox"/>	
13	Load Voltage Status	<input type="checkbox"/>	
14	Load Current On	<input type="checkbox"/>	
15			
16	Power Flow Direction	<input type="checkbox"/>	
17			
18			
19			