

Phase-Guard feature upgrade instructions

You should have received a usb cable with the unit and you will also need to go to our website, www.taylorphaseguard.com/phaseguard/software.php to download our Phase-Guard Admin tool. There is a version for both Mac and Windows.

1. Connect the Phase-Guard to 3 phase power and power up.
2. Connect the usb cable between Phase-Guard and laptop.
3. Double click on the Admin tool – connection should be automatic.

Note: If connection fails, either “Refresh the Port List” and click “Connect” or simply close the Admin. App. then re-boot.

In the upper center of the screen there are 3 tabs.

Settings Event Log Information

You automatically begin in the “Settings” window.

Click on - **“Information”** tab (the third menu tab next to “Event Log”)

This screen shows a full list of options available for the Phase-Guard and identifies whether they are installed or not.

To purchase new features follow the instructions below:

Click on “Upgrade Phase-Guard”.

Then click on “Purchase upgrade”

This will take you to our web store page where you can select features, individually or in combination for purchase via credit card.

Once the credit card is processed a License key will appear. Copy & paste the key into the “license key” window and press “Upgrade Phase-Guard”. The model will be changed to show the newly added feature. The license key will also be included with the purchase confirmation e-mailed to you.

Return to the Settings window to make adjustments to features or to activate / de-activate features.