

# PowerLogic™ DM6000 Series Digital Meters

## User Manual

PLSED309041EN

08/2010





# Hazard Categories and Special Symbols

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

## SAFETY SYMBOLS



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## SAFETY MESSAGES

### **DANGER**

**DANGER** indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

### **WARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

### **CAUTION**

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

### **CAUTION**

**CAUTION** used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, **can result in** property damage.

## OTHER SYMBOLS



This symbol indicates direct and alternating currents.

This is the double insulation symbol which indicates that the user-accessible area is protected throughout by double insulation or reinforced insulation.

---

**PLEASE NOTE**

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

**REACH Compliance**

Complies with Regulation (EC) n° 1907/2006 of Dec 18 2006 named REACH (related to the Registration, Evaluation, Authorization and restrictions applicable to Chemical substances).

**FCC Notices**

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This class A digital apparatus complies with Canadian ICES-003.

Modifications: Modifications to this device which are not approved by Schneider Electric may void the authority granted to the user by the FCC to operate this equipment.

|                                                                           |           |
|---------------------------------------------------------------------------|-----------|
| <b>Chapter 1 – DM6000 Series Digital Meters Product Description .....</b> | <b>7</b>  |
| Physical Description .....                                                | 7         |
| Front Panel .....                                                         | 8         |
| Eight-segment LED display.....                                            | 8         |
| Analog Load Bar .....                                                     | 8         |
| The Indicators – Kilo, Mega, and Negative .....                           | 9         |
| Smart Keys.....                                                           | 10        |
| Keypad Operation .....                                                    | 11        |
| Auto-scroll .....                                                         | 12        |
| Default Display (View) page.....                                          | 12        |
| Rear Panel .....                                                          | 13        |
| Parameters with DM6000 Series Digital meters.....                         | 14        |
| DM6000 Series Digital Meters Technical Specification .....                | 15        |
| <b>Chapter 2: Quick Start Guide .....</b>                                 | <b>17</b> |
| PROG Menu — Setup .....                                                   | 17        |
| Quick setup – While powering ON.....                                      | 17        |
| Enter Setup Menu in View (Read-Only) Mode.....                            | 19        |
| Enter Setup Menu in Edit Mode .....                                       | 19        |
| Setup Parameters in View and Edit Modes .....                             | 20        |
| Edit Set Parameters in PROG Menu .....                                    | 21        |
| Edit and Accept Setup .....                                               | 21        |
| Save the New Value to Setup .....                                         | 22        |
| Clear INTG.....                                                           | 23        |
| DM6000 Series Digital Meters Menu Hierarchy .....                         | 24        |
| <b>Chapter 3: AC Power Measurement.....</b>                               | <b>25</b> |
| 3-Phase Systems.....                                                      | 25        |
| Poor Power Factor .....                                                   | 26        |
| <b>Chapter 4: Safety Precautions .....</b>                                | <b>27</b> |
| <b>Chapter 5: Installation.....</b>                                       | <b>29</b> |
| Mechanical Installation .....                                             | 29        |
| Installation Procedure .....                                              | 30        |
| Usage.....                                                                | 30        |
| Panel Considerations and Environment .....                                | 30        |
| Viewing.....                                                              | 30        |
| Mounting .....                                                            | 31        |
| Electrical Installation .....                                             | 32        |
| Auxiliary Supply (Control Power) .....                                    | 33        |
| PTs (VTs) and CTs .....                                                   | 33        |
| PT (VT), CT Wiring .....                                                  | 33        |
| Voltage Signal Connections.....                                           | 34        |
| PT Connections .....                                                      | 34        |
| Selecting the voltage fuses .....                                         | 34        |
| Current Signal Connections .....                                          | 34        |
| CT Connections .....                                                      | 35        |
| CT Polarity .....                                                         | 35        |
| Setup — System Type.....                                                  | 36        |
| Phase Labels .....                                                        | 37        |
| Connection Diagrams .....                                                 | 37        |
| Connection Diagram Symbols .....                                          | 37        |
| 3-phase 4-wire WYE connection with 3 CTs and 3 PTs .....                  | 37        |
| 3-phase 3-wire delta connection with 2 CTs and 3 PTs .....                | 38        |
| 3-phase 3-wire open delta connection with 2 CTs and 2 PTs .....           | 38        |
| 2-phase 3-wire connection with 2 CTs.....                                 | 39        |

---

|                                                         |           |
|---------------------------------------------------------|-----------|
| Single-phase connection with 1 CT .....                 | 39        |
| <b>Chapter 6: Data Communication .....</b>              | <b>41</b> |
| RS 485 Data Port.....                                   | 41        |
| Installation.....                                       | 41        |
| Communication Capabilities .....                        | 42        |
| Daisy-chaining Devices to the Digital meter .....       | 42        |
| Data Formats and Settings .....                         | 43        |
| Parameter Settings for Different SCADA Software .....   | 43        |
| Communication Test.....                                 | 45        |
| Data Address .....                                      | 46        |
| Individual Parameter Address.....                       | 47        |
| Block Parameter Address .....                           | 48        |
| <b>Chapter 7: Maintenance and Troubleshooting .....</b> | <b>55</b> |
| Introduction .....                                      | 55        |
| Troubleshooting .....                                   | 55        |
| <b>Appendix A – Technical Data .....</b>                | <b>57</b> |
| Accuracy .....                                          | 57        |
| Auxiliary Supply (Control Power).....                   | 57        |
| Front Panel Display .....                               | 57        |
| Installation and Input Ratings .....                    | 58        |
| Environmental Conditions.....                           | 58        |
| Construction.....                                       | 58        |
| Dimensions and Shipping .....                           | 58        |
| <b>Appendix B: SIM (Simulation) Mode .....</b>          | <b>59</b> |
| <b>Appendix C: Glossary .....</b>                       | <b>61</b> |
| Terms .....                                             | 61        |
| Abbreviations .....                                     | 62        |
| <b>INDEX.....</b>                                       | <b>63</b> |

# Chapter 1 – DM6000 Series Digital Meters

## Product Description

The DM6000 series digital meters offer comprehensive basic volts, amps, and Hz measurements in a compact and rugged package.

This chapter contains the main operating instructions. The remaining chapters explain the installation and setup steps before the digital meter is ready for use, and maintenance and troubleshooting procedures for digital meter after installation.

The DM6000 series digital meter is an universal digital meter. Before use, please program the SYS (measurement system configuration), and the PT (VT) and CT ratios through the front panel keys. Otherwise, the digital meter will read your system incorrectly. Other settings, such as communication parameters, must also be programmed as needed.

Schneider Electric stands behind your DM6000 digital meter with complete user support and service.

**Intended use:** DM6000 series digital meter is designed for use in industrial and commercial installations by trained and qualified professionals, not for domestic use.

## Physical Description

**FRONT:** The front panel has three rows of four digits / characters each, with auto scaling kilo (K), Mega (M) and minus (-) indications. The **K** and **M** indications lit together show Giga readings. The load bar graph to the right of the display gives the indication of consumption in terms of the % Amperes Load with respect to the FS (Full scale) selected. Five smart keys make navigating the parameters very quick and intuitive for viewing data and configuring the digital meters.


**REAR:** The voltage and current terminals and the communication port are located on the back of the digital meter. Refer to “Rear Panel” on page 13 for more information.

# Front Panel

The front panel contains the following indicators and controls:

- Three rows of alphanumeric displays, four digits each, that display three RMS parameters simultaneously. The displayed readings update every second.
- For each row: Kilo, Mega (Kilo + Mega = Giga), and Negative (-) indicators.
- Load bar, which gives a unique analog indication of % loading (% FS CT Pri).
- Five keys to scroll through the display pages.

Figure 1-1: Parts of DM6000 series front panel

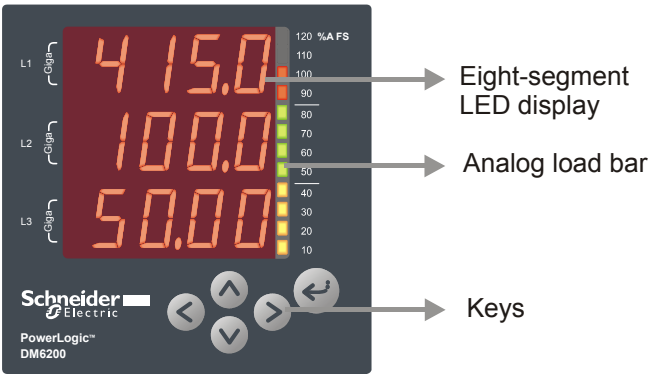

## Eight-segment LED display

- The digital meter solves the problem of tiny cluttered indicators by prominently displaying the parameter name right on the large, alphanumeric readouts.
- For the first time in a panel meter, the parameter name is as clearly readable as the value.
- In order to know which parameter value is currently displayed, the digital meters display the parameter name for two seconds, as well as each time you press a key, and then the value for eight seconds.
- This method also allows programmable phase soft-Labels in the digital meters. You can choose from 123 (Factory setting), ABC, RYB, PQR or RST.

## Analog Load Bar

- Unique indication of total load % with respect to the full scale through the 12 LEDs at the right side of the display.
- This is bar graph where each LED indicates 10% of load.
- To find the total load, count the number of illuminated LEDs, and then multiply by 10.

Table 1-1: Load percentage and bar graph indication

| Load percentage    | Bar graph display                                                                              |
|--------------------|------------------------------------------------------------------------------------------------|
| Less than 10%      | No LEDs are lit.                                                                               |
| Between 10 to 40 % | Amber LEDs are lit.                                                                            |
| Between 50 to 80%  | Green LEDs are lit to indicate that the load is acceptable and should not increase further.    |
| Above 80%          | Red LEDs are lit to indicate that the load has exceeded the sanctioned limit and is dangerous. |



## The Indicators – Kilo, Mega, and Negative

**Table 1-2 Indicators**

|                                                                                   |                                                                                                                                                      |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Kilo:</b> When lit, indicates that the reading is in Kilo ( $10^3$ ). 10,000 is displayed as 10.00 K and 1.0 K as 1000.                           |
|  | <b>Mega:</b> When lit, indicates that the reading is in Mega, ( $10^6$ ). 10,000 K is shown as 10.00 M. and 1.0 M as 1000 K.                         |
|  | <b>Giga:</b> When <b>Kilo</b> and <b>Mega</b> are lit together, the reading is in Giga ( $10^9$ ). 10,000 M is shown as 10.00 G and 1.0 G as 1000 M. |
|  | <b>Negative:</b> When lit, indicates that the reading is <b>negative</b> as per IEEE 100 and industry standard practice by meter-men.                |

**Table 1-3: Giga, Mega (M), Kilo (K), and decimal point scaling**

| RMS Reading     | Indicator                                                                    |
|-----------------|------------------------------------------------------------------------------|
| Less than 0.001 | K, M OFF, displays <b>0.000</b>                                              |
| Less than 9999  | K, M OFF                                                                     |
| Above 9999      | K ON, M OFF                                                                  |
| Above 9999 K    | M ON, K OFF                                                                  |
| Above 9999 M    | Giga (k + M indicators ON)                                                   |
| Up to 9999 G    | Giga                                                                         |
| Above 9999 G    | Display shows <b>Hi</b> for positive numbers, <b>Lo</b> for negative numbers |

RMS readings are four digits and the maximum number the digital meter handles is 9,999 G for RMS values.

## Smart Keys

Operating the digital meter is easy, using the five smart keys to navigate through the keypad operations Table. The display pages **expand** as you go to the right, much like the directory or explorer **tree** displayed on any computer. The display shows where you're headed.

**Table 1-4: Smart keys description**


|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Right Key</b> <ul style="list-style-type: none"> <li>Go <b>forward</b> into sub-parameter pages.</li> <li>Going right past <b>EDIT</b> in <b>SET</b> and <b>CLR</b> requires code entry to enter PROG menu (setup and clear).</li> <li>During setup, select <b>next</b> (right side) digit.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                    |
|    | <b>Left Key:</b> <ul style="list-style-type: none"> <li>Go <b>back</b> towards to the main parameter pages.</li> <li>During setup, select <b>previous</b> (left side) digit.</li> <li>Exits from Edit mode, back to the PROG menu – Setup.</li> <li>The meter enters the SIM (simulation) mode, when you press left key continuously while powerup the digital meter. See “SIM (simulation) mode” on page 61 for more information.</li> </ul>                                                                                                                                                                                                                                                                |
|    | <b>Up Key:</b> <ul style="list-style-type: none"> <li>Scroll <b>up</b> through display pages at the same level, <b>within the same function</b>. <ul style="list-style-type: none"> <li>Continuous pressing for three seconds initiates <b>limited auto-scroll (within the same function)</b>. See “Auto-scroll” on page 12 for more information.</li> </ul> </li> <li><b>While editing, increases</b> the value of the blinking digit during edit.</li> </ul>                                                                                                                                                                                                                                               |
|  | <b>Down Key:</b> <ul style="list-style-type: none"> <li>Scroll <b>down</b> through other display pages at the same level, through <b>all functions</b>. <ul style="list-style-type: none"> <li>Continuous pressing for three seconds initiates <b>the full auto-scroll mode</b>, through all functions. See “Auto-scroll” on page 12 for more information.</li> </ul> </li> <li><b>While editing, decreases</b> the value of the blinking digit.</li> </ul>                                                                                                                                                                                                                                                  |
|  | <b>TURBO Key:</b><br>TURBO key provides you one-touch access to the most commonly used parameters pages (factory set). The TURBO pages for DM6000 series are given below.<br><b>RMS (home page), VLL, A, PF VLN, A, F. If you're lost, use the TURBO key quickly to return to the RMS home page.</b><br>Continuous pressing for three seconds initiates auto-scrolling through the above TURBO pages. See “Auto-scroll” on page 12 for more information.<br><b>During the powerup, if the TURBO key is pressed, the digital meter will go into PROG menu - setup. This is the simplest way to enter into the setup.</b><br><br><b>See “Quick setup – While powering on” in page 17 for more information.</b> |

## Keypad Operation

Navigating with the digital meters is very easy and intuitive. Press the key in the direction you want to go. **The display shows where you're headed.** Press the key that takes you in the desired direction.

Follow these simple steps:

- First take a quick look at what the keys do.

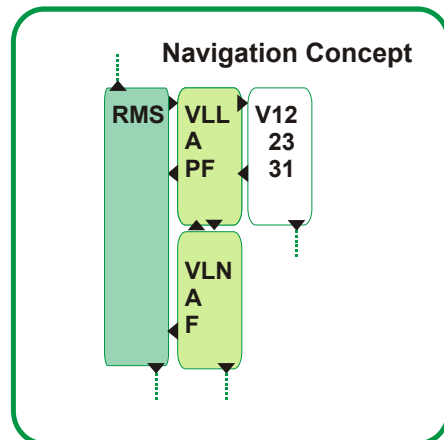

The following example explains how you can navigate from the **RMS** page to the **VLN A F** page, back to **RMS** in the digital meters.

1. From the **RMS** page, press **>**. The display shows **VLL**  
**A**  
**PF**
2. Now press **↓**. The display shows **VLN**  
**A**  
**F**
3. To return to **RMS**, press **<**. The display shows **RMS**.

Using the left key, you can go back towards to the main parameter pages from the sub-parameter pages.

- Now, try getting around to other parameters, by moving up, down, right and left. The readings are organized as display pages to the right of **RMS** and **INTG**.
- The **Kilo**, **Mega**, and **Negative** Indicators are automatic. **Kilo** and **Mega** light up together to show **Giga**. See "The indicators" on page 9 for more information.
- You cannot go right into **CLR**, to clear **INTG** values, unless you enter a code.
- Going right through **SET**, you can go down to **VIEW** or **EDIT**. Going right through **EDIT** requires code entry to program these digital meter settings. When done:
- Go left all the way back to **SET**.
- Go down to **CLR**.
- Go right into **RMS** to view the display pages again.

## Auto-scroll

Auto-scroll allows you to monitor a group of display pages sequentially, every five seconds, without constant key pressing. This is convenient for viewing from a distance. The digital meter shows the parameter name (one second) followed by the value (four seconds) on the large display.

- **To auto-scroll within a page group (e.g., Within RMS group)**

Go to a particular page in the desired page group. Press  continuously for three seconds and then release. The display flashes **AUTO** and starts auto-scroll within the page group.

- **To auto-scroll down the entire column of pages**

Go to the desired page. Press  continuously for three seconds and then release. The display flashes **AUTO** and starts auto-scroll down the entire column of pages.

- **To auto-scroll through TURBO pages**

Press  continuously for three seconds and then release. The display flashes **AUTO** and starts auto-scroll through the TURBO pages.

*NOTE:*

*Press any key to revert to manual scrolling.*

*Auto scrolling is not possible in the setup parameters.*

## Default Display (View) page

You can select any page as **user-set** default display page. You can scroll to other display pages. The **user-set** page is displayed two minutes after manual scrolling was stopped by the user.

**To lock user-set default page:**

- Go to the page you want to set as default page.
- Press  and  simultaneously to lock the page. The digital meter displays **LOCK**.

**To unlock user-set default page:**

- Once default display page is active, press  and  simultaneously to unlock the key page. The digital meter displays **ULOC**.


*NOTE: Entry into setup (PROG) is allowed only when the **display page** is unlocked.*

## Rear Panel

The digital meter terminals are located on the rear panel. 14 terminals are provided, seven terminals on each side:

- Six terminals for current, one **in** and one **out** per phase
- Four terminals for voltage, for three phases and neutral
- Two terminals for auxiliary power supply (control power)
- Two terminals for the RS 485 communications port (DM6200)

**Figure 1-2: Rear panel**

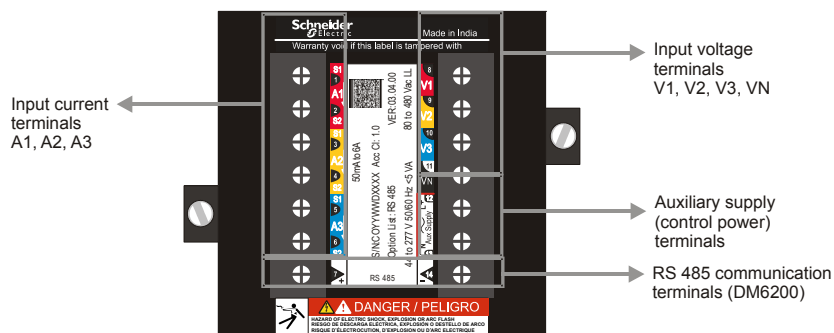

## Parameters with DM6000 Series Digital meters

The digital meter can measure, locally display, and remotely transfer over Modbus RTU (DM6200), the following parameters:

**Table 1-5: Models and Parameters with DM6000 series**

| Parameter           |                                      | DM6000 | DM6200 |
|---------------------|--------------------------------------|--------|--------|
| <b>RMS</b>          | VLL V12, V23, V31<br>VLN V1, V2, V3  | ■      | ■      |
|                     | A A1 A2 A3                           | ■      | ■      |
|                     | An - Neutral current                 | ■      | ■      |
|                     | F                                    | ■      | ■      |
|                     | %L – Amps                            | ■      | ■      |
|                     | % V Unbal, % A Unbal                 | ■      | ■      |
|                     | PF PF1 PF2 PF3                       | ■      | ■      |
|                     | %A FS<br>Analog color-coded load bar | ■      | ■      |
|                     | RPM                                  | ■      | ■      |
|                     | A° Phase Angle<br>A°1 A°2 A°3        | ■      | ■      |
| <b>INTG<br/>FWD</b> | ON hours                             | ■      | ■      |
|                     | INTR                                 | ■      | ■      |
|                     | RS 485                               | -      | ■      |

**The DM6000 series displays:**

- **Voltage:** Three voltage measurements line-to-line: 1-2, 2-3, 3-1 and average, three voltage measurements line-to-neutral: 1-4, 2-4, 3-4 and average.
- **Current:** Three current measurements phase-wise (1, 2, 3), average current of all three phases, neutral current and three current phase angles (A°1, A°2, A°3) with respect to the corresponding voltage line-neutral vector.
- **Phase wise load in %:** Three currents in % of the FS (%A FS).
- **Unbalanced load in %:** Current and voltage unbalance.
- **Frequency:** Measures from whichever phase is active.
- **RPM:** Measures the speed of the generator.
- **On hours, supply interruptions (Outages)**
- **% Amperes Load Bar graph:** Load bar graph indicates consumption in terms of %Amperes total. You can quickly estimate the load by viewing the display without operating any keys. The bar graph consists of 12 segments. Each segment indicates a current load of 10% of CT primary.
- **Kilo, Mega, Giga** indication for the above parameters. See “The indicators” on page 9 for more information.

# DM6000 Series Digital Meters Technical Specification

The DM6000 series digital meter is high-accuracy, low cost, ultra-compact digital meter. It offers ISO 9001 quality, accuracy and functional flexibility. Selective models of this series have Modbus RTU communications capability. The standard unit flush-mounts in a DIN 96 cut-out and conforms to UL product standards.

The digital meters are designed for retrofit applications such as replacement of analog meters. Each can be used as standalone meter in electrical control panels, power distribution unit (PDU), switch boards, uninterrupted power supply (UPS), generator sets, and Motor control center (MCC) systems. It also provides easy communication to program logic control (PLC), distributed control system (DCS), building management system (BMS), and other systems.

The following table gives the technical specifications of the digital meters. Refer to “Technical data” on page 59 for more information.

**Table 1-6: Technical specifications**

| Description                       | Specification                                                                                                                                                                                            |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sensing/Measurement               | True RMS, one second update time                                                                                                                                                                         |
| Accuracy                          | 1.0% of reading*                                                                                                                                                                                         |
| Auxiliary supply (control power)  | 44 to 277 VAC/DC                                                                                                                                                                                         |
| Burden                            | Voltage and Current input < 0.2 VA per phase<br>Auxiliary supply (Control power) < 3 VA at 240 V                                                                                                         |
| Display                           | Alphanumeric bright LED                                                                                                                                                                                  |
| Resolution                        | RMS four digits, INTG eight digits                                                                                                                                                                       |
| Input voltage                     | Four Voltage inputs (V1, V2, V3, VN) 110 or 415 VACLL nominal (Range 80 to 480 VAC LL)                                                                                                                   |
| Input current                     | Current inputs (A1, A2, A3)<br>Class 1.0: 50 mA to 6 A* (5 mA is the starting)                                                                                                                           |
| Frequency                         | 45 to 65 Hz                                                                                                                                                                                              |
| Overload                          | 10 A max continuous                                                                                                                                                                                      |
| Environmental                     | Operating temperature: -10 °C to 60 °C (14 °F to 140 °F)<br>Storage temperature: -25 °C to +70 °C (-13 °F to 158 °F)<br>Humidity 5% to 95% non condensing                                                |
| Standards                         | CAT III - Measurement category III,<br>Pollution Degree 2,<br> - Double insulation at user-accessible area            |
| Weight                            | 400 gms (0.9 lb) approx, unpacked<br>500 gms (1.1 lb) approx, shipping                                                                                                                                   |
| Communication (DM6200)            | RS 485 serial channel connection Industry standard Modbus RTU protocol                                                                                                                                   |
| DM6000 Series conforms to         | Emission : CISPR11 class A; Fast Transient: 4kV IEC 61000-4-4; Surge withstand: IEC 61000-4-5;<br>Damped Oscillatory: IEC 61000-4-12; ESD: IEC 61000-4-2;<br>Impulse voltage: 6 kV, IEC 60060, 1.2/50 µs |
| Protection against dust and water | Front – IP 51; Back – IP 40                                                                                                                                                                              |

NOTE: \* Additional error of 0.05% of full scale, for digital meter input current below 100 mA





# Chapter 2: Quick Start Guide

## PROG Menu — Setup

- The digital meter must be configured to match the application settings, before use. Otherwise, the readings will be wrong.
- All the setup values can be re-programmed at any time, using **SET**. However, the settings: SYS (WYE (Star)/Delta/single-phase/2-phase), Vpri, Vsec, Apri, Asec critically determine the scaling of measured readings.
- The scaling may be used to reduce the errors in readings due to Instrument Transformer errors. However, wrong settings will introduce errors in readings of other running systems.

|                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>⚠ CAUTION</b>                                                                                                                                                                                       |
| <b>HAZARD OF UNINTENDED OPERATION</b><br>Only qualified personnel are authorized to set up the digital meter.<br><b>Failure to follow these instructions can result in injury or equipment damage.</b> |


You can enter the PROG menu-setup in

- **View only mode:** To view the set parameters.
- **Edit mode:** To view or edit set parameters

### Quick setup – While powering ON

- This is the easiest way to enter PROG menu setup.
- To make connections, see “Connection diagrams” on page 37. Here are few tips.

Figure 2-1: Quick setup - connections

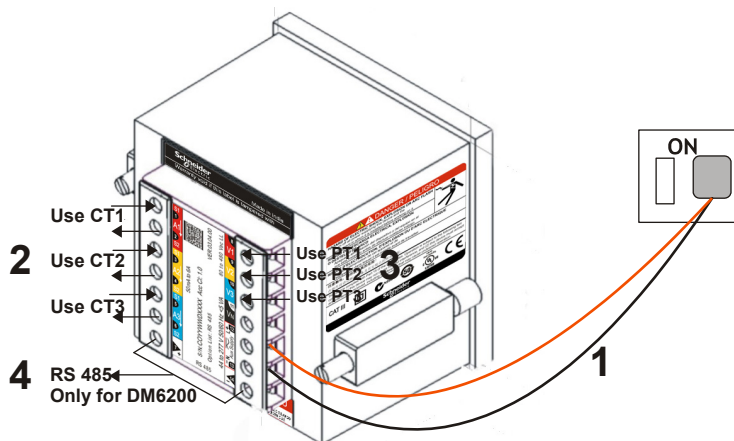

1. Connect auxiliary supply (control Power) 44 – 277 VAC/DC to terminals 12 and 13 in order to power ON the digital meter.
  - Keep  pressed for two seconds, while powerup the digital meter. The digital meter directly enters into PROG menu setup and displays **EDIT A.PRI 100.0**.
2. **Program the following setup parameters for accurate readings.**
  - A.pri, A.sec: Set these values to match your CT primary and secondary values. For example, if your CT Ratio is 200:5, set A.pri = 200.0 and A.sec = 5.000.
  - V.pri, V.sec: Set these values to match the input voltage VLL of circuit, if the input voltage < 480 VAC LL. For example, if input voltage = 300 VAC LL, set V.pri = 300.0 and V.sec = 300.0.
  - Use potential transformer (PT/VT), if the input voltage > 480 VAC LL. Set the V.pri and V.sec values to match the primary and secondary of the PT(VT) respectively. For example, if PT(VT) ratio is 11 kV:110, set V.pri = 11.00 k and V.sec = 110.0.
3. Select one of the following systems according to your wiring configuration:
  - SYS: DLTA for 3-phase 3-wire system
  - SYS: WYE/Star for 3-phase 4-wire system
  - SYS : 2-phase for 2-phase 3-wire system
  - SYS: single-phase for single-phase 2-wire system
4. Connect the current transformers (CTs).

| CT1  | CT2  | CT3  |
|------|------|------|
| 1, 2 | 3, 4 | 5, 6 |


5. Connect the voltage inputs. Use PT(VT), if voltage exceeds 480 VAC LL.

| PT1 | PT2 | PT3 | Neutral |
|-----|-----|-----|---------|
| 8   | 9   | 10  | 11      |

6. RS 485 terminals (DM6200).


| +ve | -ve |
|-----|-----|
| 7   | 14  |

## Enter Setup Menu in View (Read-Only) Mode

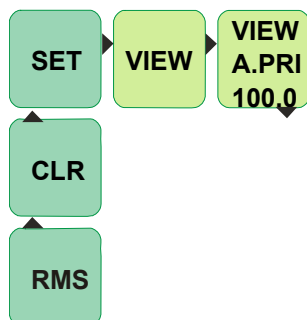

1. From RMS, press . The display shows **CLR**.
2. Press . The display shows **SET**.
3. Press . The display shows **VIEW**.
4. Press . Use and to scroll and view the setup parameters and their current settings.

## Enter Setup Menu in Edit Mode

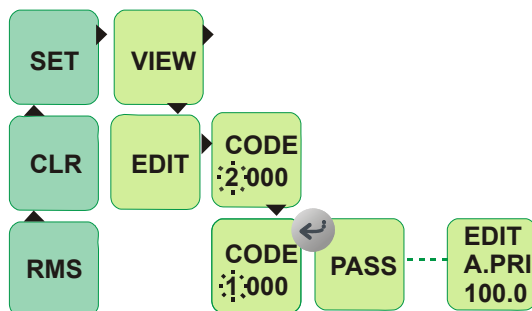


NOTE: means blinking  
 Means blinking 2

1. From RMS, press . The display shows **CLR**.
2. Press . The display shows **SET**.
3. Press . The display shows **VIEW**.
4. Press . The display shows **EDIT**. CODE entry is required to enter the setup menu in edit mode.
5. Press for two seconds. The display shows **CODE 2000** with **2** blinking. The factory set code is 1000.
6. Press . The display shows **CODE 1000** with **1** blinking.
7. Press once or four times to accept the new CODE value. The display shows **PASS** and then **EDIT A.PRI 100.0** indicating the successful entry to the setup menu in edit mode.

NOTE: If you enter a wrong code, the display flashes **FAIL** and then displays **EDIT**. Repeat the procedure and make sure that you enter correct code.

## Setup Parameters in View and Edit Modes

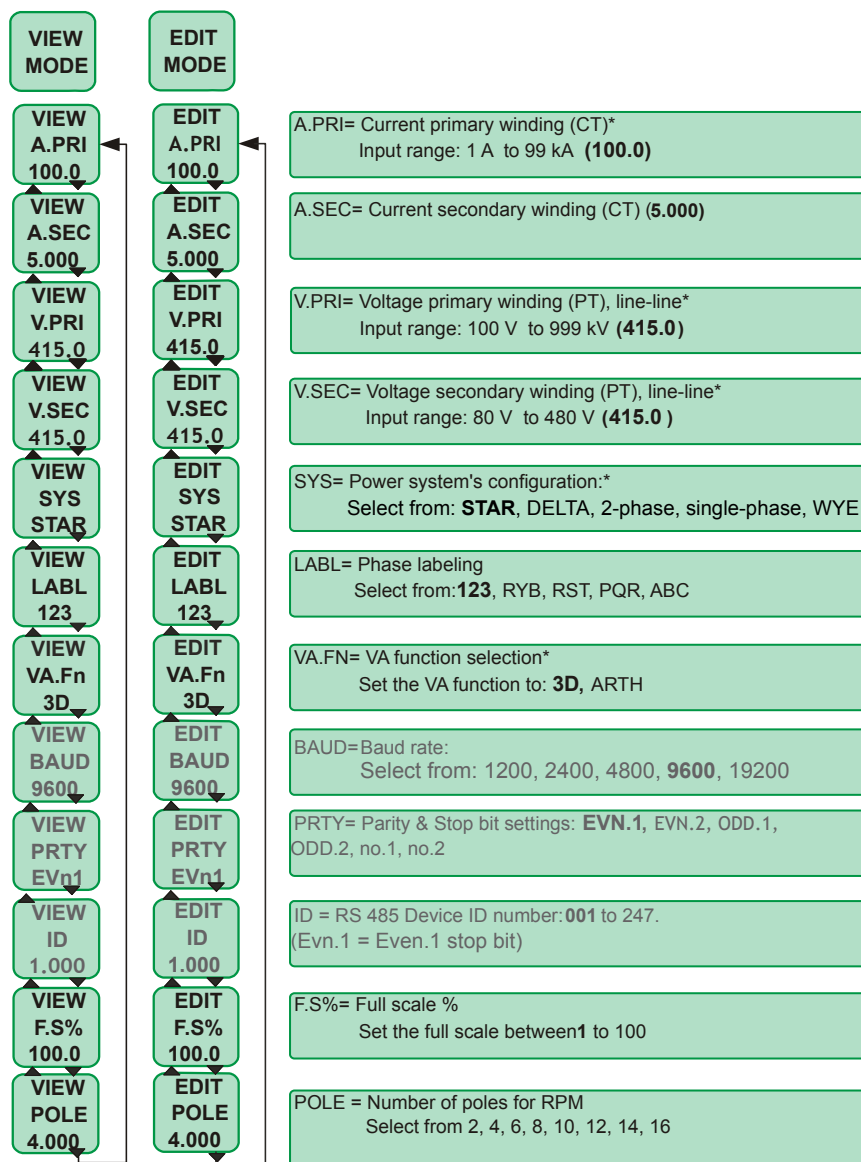

NOTE: Default setup values are given in **BOLD**.

\* Changing these values while device is in use is not recommended.

BAUD, PRTY, and ID are applicable only for DM6200.


## Edit Set Parameters in PROG Menu

This example explains how to edit the value of A.SEC from **5.000** to **1.000** in the edit PROG menu setup of the digital meters.

For easy understanding, setup parameter editing is explained two parts: **edit and accept setup, and save new value to setup**.

*NOTE: After entering into the setup, if there is no key press for > 2 minutes, the digital meter will exit from the setup automatically.*

### Edit and Accept Setup

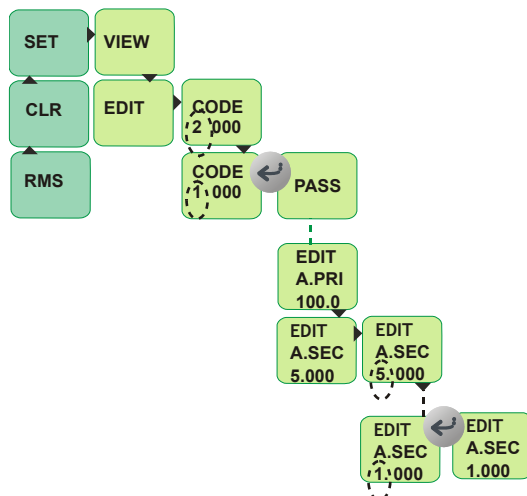


*NOTE:* means blinking  
 means blinking 2

1. After entering the setup menu in edit mode, (Refer to “Enter setup menu in Edit mode” on page 19 for more information) press . The display shows **EDIT A.SEC 5.000**.
2. Press . The display shows **EDIT A.SEC 5.000** with blinking **5**. The value can be edited.
3. Press four times. The display shows **EDIT A.PRI 1.000** with blinking **1**.
4. Press to accept the new value.

To edit next parameter, press and repeat the above steps

### Save the New Value to Setup

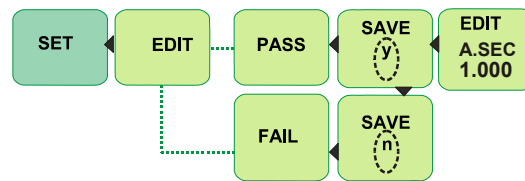


NOTE: means blinking  
 means blinking n

1. After you edit the parameter as described above, press . The display shows **SAVE y** with blinking y.
2. Press or to save the new value. The display flashes **PASS** and then shows **EDIT**.
3. Press to return to **SET**.

NOTE: If you do not want to save the new value, press to change the value from **SAVE y** to **SAVE n** in step 1. Then press or . The display flashes **FAIL** and shows **EDIT**. Proceed to step 3.

## Clear INTG

The digital meters are equipped with Integrator INTG, where ON hours and INTR values are accumulated.

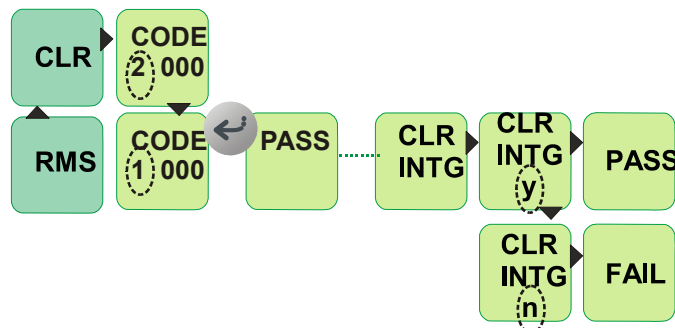


NOTE: means blinking  
 means blinking y

1. From **RMS**, press . The display shows **CLR**.  
CODE entry is required to clear the **INTG** values.
2. Press for two seconds. The display shows **CODE 2000** with blinking **2**. The factory set CODE is 1000.
3. Press . The display shows **CODE 1000** with blinking **1**.
4. Press once or four times to accept the new value.  
After the successful **CODE** entry, the display shows **CLR INTG**.
5. In order to clear **INTG**, press . The display shows **CLR INTG y** with blinking **y**.
6. Press to clear **INTG**. The display flashes **PASS** and then **CLR INTG**.
7. Press . The display shows **CLR**.
8. Press to return to **RMS** page.

NOTE: If you do not want to clear the integrators, press to change the value from **CLR INTG y** to **CLR INTG n** in step 5. Then press . The display flashes **FAIL** and shows **CLR INTG**. Proceed to step 7.

# DM6000 Series Digital Meters Menu Hierarchy

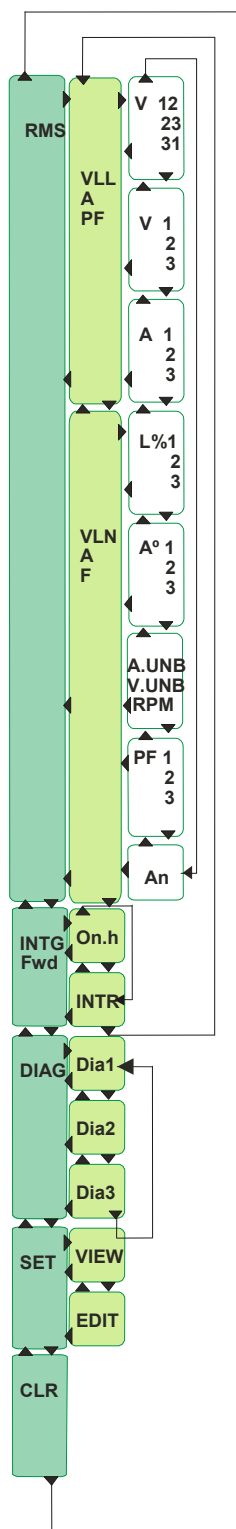

RMS = RMS value display pages are in sub level

VLL = Phase-Phase voltage average  
A = Current average  
PF = Power Factor average

VLN = Phase-Neutral voltage average  
A = Current average  
F = Frequency in Hz

V12 = RMS voltage, phase 12  
V23 = RMS voltage, phase 23  
V31 = RMS voltage, phase 31

V1 = RMS voltage phase 1 to neutral  
V2 = RMS voltage phase 2 to neutral  
V3 = RMS voltage phase 3 to neutral

A1 = RMS current, phase 1  
A2 = RMS current, phase 2  
A3 = RMS current, phase 3

L1% = % of load, phase 1  
L2% = % of load, phase 2  
L3% = % of load, phase 3

A°1 = Current phase angle, phase 1 in degrees  
A°2 = Current phase angle, phase 2 in degrees  
A°3 = Current phase angle, phase 3 in degrees

A.UNB = Current unbalance  
V.UNB = Voltage unbalance  
RPM = RPM of the motor

PF1 = Power factor, phase 1  
PF2 = Power factor, phase 2  
PF3 = Power factor, phase 3

An = Neutral current

INTG Fwd = Forward Integrator

On.h = Duration of supply ON

INTR = Number of power interruptions

DIAG = represents diagnostic pages. The values contained in these pages are for factory testing only

Dia1 = Communication settings

Dia2 = Product model and version number

Dia3 = Display scanning for display LED check

SET = Has two modes: EDIT/VIEW set parameters

VIEW = To view simultaneous setup parameter name and value display

EDIT = To edit simultaneous setup parameter name and value display

CLR = Clears INTG values




# Chapter 3: AC Power Measurement

## 3-Phase Systems

A 3-phase system delivers higher levels of power for industrial and commercial applications. The three phases correspond to three potential lines. A  $120^\circ$  phase shift exists between the three potential lines.


A typical configuration has either a Delta connection or a Wye (Star) connection

In a 3-phase system, the voltage levels between the phases and the neutral are ideally defined by  $V_1 = V_2 = V_3 = V_{12} / \sqrt{3} = V_{23} / \sqrt{3} = V_{31} / \sqrt{3}$ . In practice, there will be some unbalance (difference).

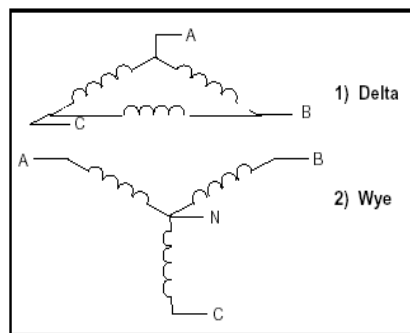

Voltages between the phases vary, depending on loading factors and the quality of distribution transformers.

Power measurement in a poly-phase system is governed by Blondel's Theorem. Blondel's theorem states that, in a power distribution network, which has N conductors, the number of measurement elements required to determine power is N-1. A typical configuration of a poly-phase system has either a Delta connection or a Wye (Star) connection (see Figure below).

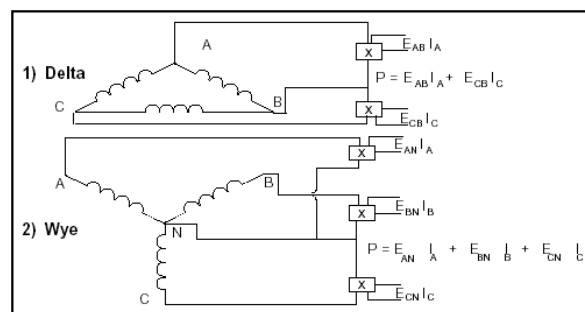

Where  $E_{AB}$  = Voltage across points A and B

$E_{CB}$  = Voltage across points C and B

$E_{AN}$  = Voltage across points A and N (Neutral)

$E_{BN}$  = Voltage across points B and N (Neutral)

$E_{CN}$  = Voltage across points C and N (Neutral)

$I_A$  = Current through conductor A

$I_B$  = Current through conductor B

$I_C$  = Current through conductor C

## Poor Power Factor

Poor power factor (PF) results in reactive power consumption. Transferring reactive power over a distribution network causes energy loss. To force consumers to correct their power factor, utilities monitor reactive power consumption and penalize the user for poor power factor.

## Chapter 4: Safety Precautions

This section contains important safety precautions that must be followed before attempting to install, service, or maintain electrical equipment. Carefully read and follow the safety precautions outlined below.

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. In the USA, see NFPA 70E.
- Only qualified electrical workers should install this equipment. Such work should be performed only after reading this entire set of instructions.
- If the equipment is not used in a manner specified by the manufacturer, the protection provided by the equipment may be impaired.
- NEVER work alone.
- Before performing visual inspections, tests, or maintenance on this equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, and tagged. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of back feeding.
- Turn off all power supplying the digital meter and the equipment in which it is installed before working on it.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Before closing all covers and doors, inspect the work area for tools and objects that may have been left inside the equipment.
- When removing or installing panels, do not allow them to extend into the energized bus.
- The successful operation of this equipment depends upon proper handling, installation, and operation. Neglecting fundamental installation requirements may lead to personal injury as well as damage to electrical equipment or other property.
- NEVER bypass external fusing.
- NEVER short the secondary of a PT.
- NEVER open circuit a CT; use the shorting block to short circuit the leads of the CT before removing the connection from the digital meter.
- Before performing Dielectric (Hi-Pot) or Megger testing on any equipment in which the digital meter is installed, disconnect all input and output wires to the digital meter. High voltage testing may damage electronic components contained in the digital meter.
- The digital meter should be installed in a suitable electrical enclosure.

**Failure to follow these instructions will result in death or serious injury**




# Chapter 5: Installation

## Mechanical Installation

The DM6000 series digital meters are panel-mounted and have reliable, rear-mounted terminal strips rated at 480 V.  
The 92 x 92 mm (3.62 x 3.62 in.) cut-out and 96 x 96 mm (3.78 x 3.78 in.) bezel dimensions adhere to IEC 61554 and DIN 43700.

The diagram below displays the various dimensions of mechanical installations.

**Figure 5-1: Mechanical dimensions and recommended panel cut-out**

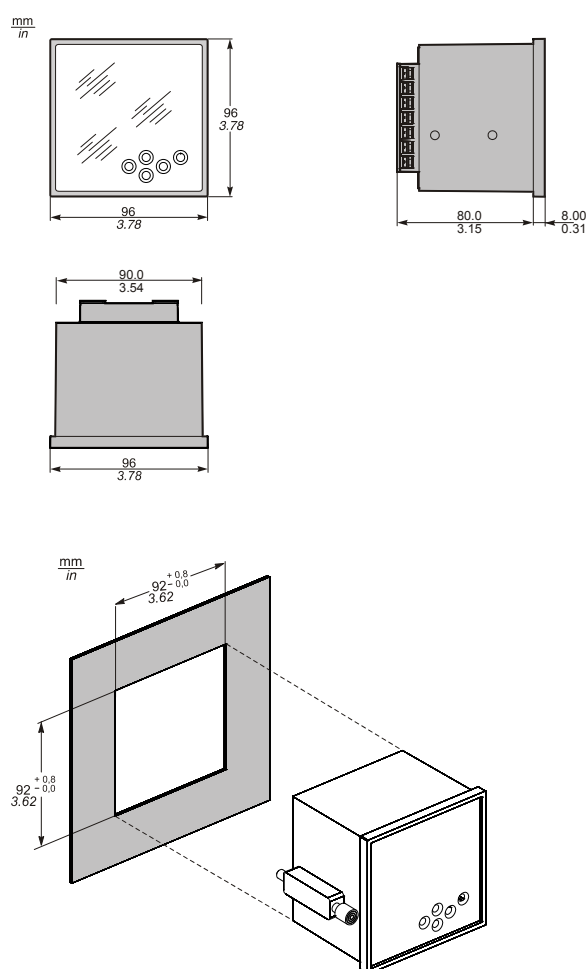

## Installation Procedure

### Usage

First, decide how the digital meter is to be used. If you do not already have an energy management program in operation, then your energy consultant should be able to help you identify which load(s) offer maximum savings potential. This will help you decide which point is to be monitored, where the readings will be viewed from, who must have access to the instrument, and how often. Otherwise, decide the location of the digital meter and install it. For best performance, choose a location that provides all the required signals with minimum wiring lengths.

### Panel Considerations and Environment

The digital meter is a high-precision measuring instrument, and its operating environment is of utmost importance. For maximum performance, the instrument should be mounted in a dry, dust-free location, away from heat sources and strong electromagnetic fields. To operate reliably, the following conditions must be met:

**Table 5-1: Environmental Conditions**

| Description           | Specification                       |
|-----------------------|-------------------------------------|
| Storage Temperature   | -25 °C to 70 °C, (-13 °F to 158 °F) |
| Operating Temperature | -10 °C to 60 °C, (14 °F to 140 °F)  |
| Relative Humidity     | 5% to 95%, non-condensing           |

The digital meter should be separated from other equipment, and sufficient space must be provided all around, for cooling air to rise vertically past the instrument. The cooling air temperature must be below the specified operating temperature.

The panel or housing, in which the digital meter is mounted, should protect it from dust, moisture, oil, corrosive vapors, etc.

The panel doors must be easily opened to provide easy access to the digital meter wiring for troubleshooting. Allow clearance if the unit is going to swing out, as well as adequate slack in the wiring. Allow space for terminal blocks, CT shorting blocks, fuses, auxiliary contactors, and other necessary components.

### Viewing

For ease of operation, the location should be preferably at, or slightly above, eye level. For viewing comfort, minimize glare and reflections from strong light sources.

## Mounting


The digital meters are panel mountable.

**Table 5-2: Mounting**

| Description                  | Specification                                                                                                                                                    |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Panel cut-out                | 92 <sup>+0.5</sup> <sub>-0</sub> mm (w) x 92 <sup>+0.5</sup> <sub>-0</sub> mm (h) (3.62 <sup>+0.02</sup> x 3.62 <sup>+0.02</sup> in.)<br>IEC 61554 and DIN 43700 |
| Panel thickness              | 0.5 to 4.0 mm (0.02 to 0.16 in.)                                                                                                                                 |
| Instrumental bezel dimension | 96 x 96 mm (3.78 x 3.78 in.)                                                                                                                                     |
| Depth behind bezel           | 80 mm (3.15 in.) (82 mm (3.23 in.) with terminal cover. Leave clearance for wires)                                                                               |
| Mounting clamps screws       | Slotted, two numbers                                                                                                                                             |
| Terminal screws              | Combination Phillips and Slotted head                                                                                                                            |

The cut-out should be punched with the proper tool and should be free from burrs. The following figure explains the mounting of the digital meter.

**Figure 5-2: Mounting**

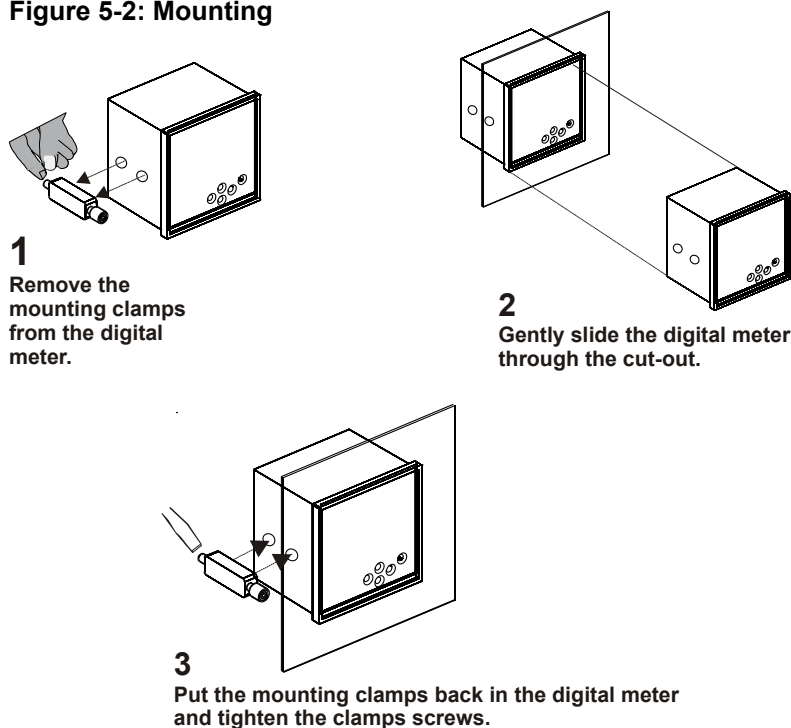

While supporting the digital meter from the front, tighten both side clamp screws in a criss-cross pattern till all slack is taken up and then apply one full turn. Do not over-tighten. Over-tightening could result in breaking of the clamps.

The digital meters should be separated from other equipment, and sufficient space must be provided all around the digital meter, to allow air to rise vertically around the digital meter. Lack of sufficient air for cooling may result in overheating of the digital meters.

*NOTE: It is much easier to set up the meter before you mount the meter on the panel. See "Quick setup" on page 17 for more information.*

# Electrical Installation

This section describes the following:

- The need for, and selection of, potential transformers (PTs) and current transformers (CTs).
- Auxiliary supply (control Power), PT (VT), and CT Connections.

For best results, ensure the following specifications:

- Torque driver preferred, hand screwdriver OK.
- TIP: Phillips head is preferred, but flat head is acceptable. Do not use Pozidriv tips.



Screw head diameter = 3.5 mm (0.14 in.), TIP shaft diameter < 5 mm (0.2 in.).  
**IMPORTANT:** Screwdriver shafts inserted angularly or of diameter ≥ 5 mm (0.2 in.) will get stuck in the cover.

Tightening Torque: 0.25 to 1 N.m (2.21 to 8.85 lb-in)

Loosening Torque: 0.8 to 1 N.m (7.08 to 8.85 lb-in)

Screw Travel: 6 mm (0.24 in.) less wire thickness

Torque > 1 N.m (8.85 lb-in) may strip the screw or break the cover.

Connecting cable

**Table 5-3: Connecting cable**

|                 | Insulation Rating | Current Rating                                       |
|-----------------|-------------------|------------------------------------------------------|
| Voltage Circuit | > 600 VAC         | > 0.1 A                                              |
| Current Circuit | > 600 VAC         | > 7.5 A<br>Or 2.5 mm <sup>2</sup> /14 AWG<br>minimum |



*Schneider Electric recommends the use of insulated sleeved U lugs (2.5 mm<sup>2</sup>/14 AWG) for wiring terminals.*

**NOTE:** Installations should include a disconnecting device, like a switch or circuit breaker, with clear ON/OFF markings to turn-off the auxiliary supply (control power). The disconnecting device should be placed within the reach of the equipment and the operator.



## Auxiliary Supply (Control Power)

The digital meter requires a single-phase AC/DC auxiliary (control) power supply to power up its internal electronic circuitry. External surge suppressors are necessary in the auxiliary supply circuit for proper operation during extreme surge conditions, where voltage surges exceed the auxiliary supply limits (e.g., rural areas and outlying areas prone to lightning strikes).

### Range:

- 44 to 277 VAC/DC.
- Burden (load) < 3 VA at 240 V.
- The control power may be derived from the voltage signals.
- If you have a 440 V 3-wire delta system, and a reliable neutral is not available, use a 440 V: 240 V supply transformer to provide the standard 240 V auxiliary supply.

*NOTE: It is much easier to set up the meter before you mount the meter on the panel. See "Quick setup" on page 17 for more information.*

## PTs (VTs) and CTs

Large electrical installations have high voltages and currents, which may exceed the direct connection rating of the digital meter. In this case, potential transformers (PTs) and current transformers (CTs) are used to precisely **step down** or reduce the voltage and current levels to suit the digital meter rating. Potential transformers usually have a full scale output of 110 VAC RMS line-line; current transformers usually have a full scale output of 5 A or sometimes 1 A.

The PTs (VTs) and CTs must be planned, installed, and tested by a qualified electrical contractor before wiring the digital meter. The accuracy of the measurement also depends on the accuracy and phase angle error of the PTs (VTs) and CTs. Instrument class 1 or better PTs and CTs are recommended. Do not use protection class (10P10, etc.) CTs to feed the digital meters; they have poor accuracy and phase characteristics.

Ensure that the CT primary rating has been selected so that your normal load variation lies between 40% and 80% of its full scale. If your CT is over-rated, if the load is always less than 10% of the CT primary rating, accuracy suffers. On the other hand, if the CT is under-rated, you may exceed its full scale and burn out both the CT and the digital meter.

### PT (VT), CT Wiring

The PTs (VTs) and CTs must have adequate VA rating to support the burden (loading) on the secondaries. You may want to support the auxiliary supply burden from one of the PTs (VTs). CT wiring can impose additional burden (loading) on the CT. For example, if the CT has a 5 A secondary, and the wire resistance is 1.0  $\Omega$ , then the CT has to support an additional burden of 5 VA. If the wiring distance from the CT secondary is greater than stated in Table 5-5 on page 35, then the CT could get over-burdened and give large errors. Choosing a 1 A CT secondary can reduce this error. The CT Secondary value must be user programmed into the digital meter.

The digital meters should be conveniently located for easy connections of voltage (PT), current (CT) signals, and auxiliary (control) supply.

*NOTE: The digital meters user programmable PT and CT primary or secondary settings may be utilized to calibrate out the PT and CT amplitude error, for improved accuracy.*

## Voltage Signal Connections

For proper digital meter operation, the voltage connection must be maintained. The voltage must correspond to the correct terminal. The cable required to terminate the voltage sense circuit should have an insulation rating greater than 480 VAC and a current rating greater than 0.1 A.

There are four input voltage terminals marked V1, V2, V3 and Vn. See the connection diagrams that follow, for details. For Delta connection, the Vn terminal should be left unconnected.

### PT Connections

The digital meters directly accept LV voltage inputs of up to 480 VAC RMS line-to-line (277 VLN). Voltages greater than this, typically HV systems, must be connected through potential transformers (PTs). The digital meters allow user programming of both PT primary and secondary voltages.

- User programmable PT primary range: 0.1 to 999 kVAC RMS LL
- User programmable PT secondary range: 80 to 481 VAC RMS LL
- Digital meters voltage input burden: 0.2 VA per input

*NOTE: The PT primary and secondary values must be user programmed before using the digital meter. Otherwise, the readings will be wrong.*

### Selecting the voltage fuses

We strongly recommend using fuses on each of the sense voltages (except for neutral) and the control / auxiliary power.

**Table 5-4: Fuse recommendation**

| Power Source                     | Source voltage | Fuse (A) |
|----------------------------------|----------------|----------|
| Line voltage                     | 80 to 600 VLL  | 0.25     |
| Auxiliary supply (Control power) |                | 0.25     |

## Current Signal Connections

The digital meter accepts up to 6 A AC RMS per channel directly. Above that, a current transformer must be interposed to scale down the current.

There are three pairs of current input terminals marked A1, A2, and A3. Each pair of input terminals is labeled as (S1, S2) and has an arrow indicating the direction of current flow. For proper measurements, the phase identification and the polarity of the current signals must be correct. The forward flow (import by consumer) current direction must be into the S1 terminal and the exit from the S2 terminal. Maintain the correct sequence and polarity to avoid wrong readings.

Any unused current input terminals must be shorted together, e.g., in delta connection, the terminals A2 (S1, S2) must be shorted together. The shorted terminals do not need to be grounded.

Install the wiring for the current circuit at 480 VAC insulation as a minimum. The cable connection should be rated for 7.5 A or greater and have a cross-sectional area of 2.5 mm<sup>2</sup> (14 AWG) minimum.

## CT Connections

Mount the current transformers (CTs) as close as possible to the digital meter for best accuracy. The following table illustrates the maximum recommended distances for various CT sizes, assuming the connection is via 2.5 mm<sup>2</sup>/14 AWG cable.

**Table: 5-5: CT size and maximum distance**

| 5 A CT size | Maximum Distance in metres ( in feet)<br>(CT to DM6000 Digital meter) |
|-------------|-----------------------------------------------------------------------|
| 2.5 VA      | 3.05 m (10 ft/ 120 in.)                                               |
| 5.0 VA      | 4.6 m (15 ft/ 181 in.)                                                |
| 7.5 VA      | 9.15 m (30 ft/ 360 in.)                                               |
| 10.0 VA     | 12.2 m (40 ft/ 480 in.)                                               |
| 15.0 VA     | 18.3 m (60 ft/ 720 in.)                                               |
| 30.0 VA     | 36.6 m (120 ft/ 1441 in.)                                             |

- User programmable CT primary range: (1 A to 99 kA) AC.
- CT secondary: (1 A or 5 A) AC (programmable)  
Other values are also programmable to compensate CT errors if desired.
- Digital meters CT burden: 0.2 VA maximum per input.

See the “PROG menu — Setup” on page 17 for more information.

### NOTE:

*The PT primary and secondary values must be user programmed before using the digital meter. Otherwise, the readings will be wrong.*

*With dual-range CTs; select the best range for programming the digital meter. If you change the range thereafter without re-programming the digital meter, the digital meter will display erroneous values.*

## CT Polarity

When the digital meter is connected using the CTs, you must maintain correct CT polarities. CT polarities are dependent upon correct connections of CT leads, and upon the direction the CTs are facing when clamped around conductors. The dot on the CT must face the line side; the corresponding secondary connection must connect to the appropriate input on the digital meter.

## Setup — System Type

The digital meter needs to know the type of system to which it is connected. This information is programmed in the setup procedure, before using the digital meter. The digital meter does allow you to change this setting while it is running; however, this capability is meant for correcting a gross error, or for training or educational purposes; it is not to be changed on regular basis. The options are:

- **Wye/Star:** For 3-phase 4-wire, **three watt-meter** or **three element** circuits. Here, all three voltage phase signals, the neutral voltage connection, and all three current input signals need to be wired in. This means all the four voltage terminals, and six current terminals described in the following section, need to be wired. For Wye/Star wiring configuration, see “3-phase 4-wire WYE connection with 3 CTs and 3 PTs” on page 37 for more information.
- **Delta:** For 3-phase 3-wire, **two watt-meter** or **two element** circuits. For delta and open delta wiring configuration, see “3-phase 3-wire Delta connection with 3 CTs and 3 PTs” and “3-phase 3-wire open delta connection with 3 CTs and 2 PTs” on page 38 for more information.
- **2-Phase:** For 2-phase 3-wire, **two watt-meter** or **two element** circuits. Here, all two voltage phase signals, the neutral voltage connection, and all two current input signals need to be wired in. This means all the three voltage terminals, and four current terminals described in the following section, need to be wired. For two phase wiring configuration, see “2-phase 3-wire connection with 2 CTs” on page 39 for more information.
- **Single-phase:** For single-phase 2-wire, **one watt-meter** or **one element** circuits. Here a single voltage phase signal, the neutral voltage connection, and a single current input signal need to be wired in, means the two voltage terminals, and one current terminal described in the following section need to be wired. For single-phase wiring configuration, see “Single-phase connection with 1 CT” on page 39 for more information.

### Phase Labels

The phase labels shown on the display are programmable via the digital meter’s front panel PROG menu. You can set up the meter to display phase labels convenient to your practice. The choices available are: 123 (factory set), RYB, RST, PQR, ABC.

### Connection Diagrams

Choose the diagram below that best describes your application. You must ensure that the CT phase and corresponding PT phase are identical and that the CT polarity is correct. Follow the outlined procedure to verify correct connection.

#### Connection Diagram Symbols


Table 5-6: Connection diagrams symbols

| Symbol                                                                            | Description           |
|-----------------------------------------------------------------------------------|-----------------------|
|  | Fuse                  |
|  | Current transformer   |
|  | Shorting block        |
|  | Potential transformer |

#### 3-phase 4-wire WYE connection with 3 CTs and 3 PTs

Direct voltage connections for the input voltages L-L up to 480 VAC.

Figure 5-3: 3-phase 4-wire WYE connection

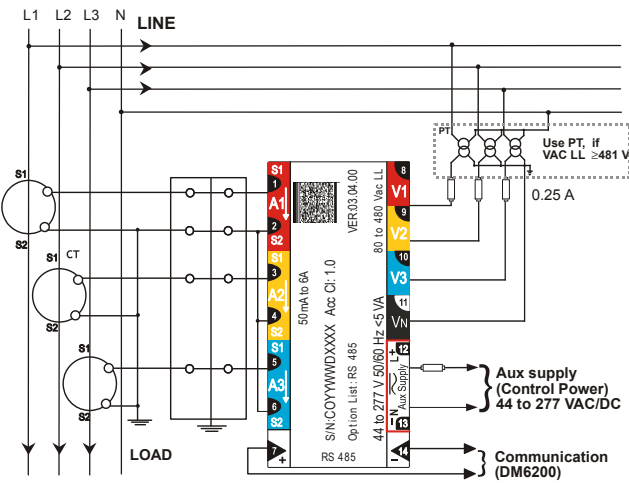


**NOTE:**  
Make sure WYE/Star is programmed in the digital meter PROG menu- Setup.  
For High-leg (US connection)  
L1 – N = 120 V  
L2 – N = 208 V  
L3 – N = 120 V

### 3-phase 3-wire delta connection with 2 CTs and 3 PTs

Direct voltage connections for the input voltages L-L up to 480 VAC.

**Figure 5-4: 3-phase 3-wire delta connection**

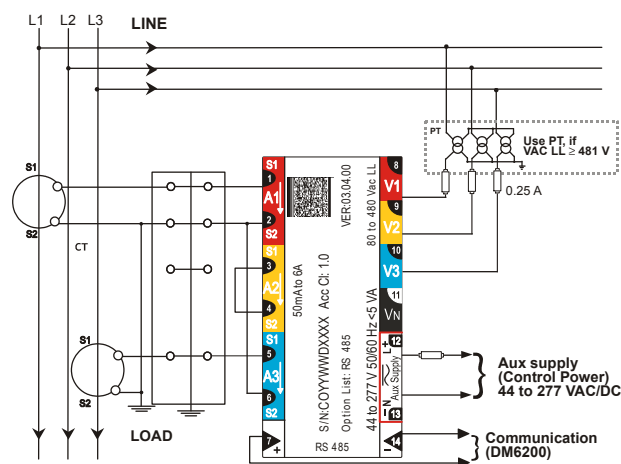


**NOTE :** Make sure Delta is programmed in the digital meter PROG menu-setup. Leave the Vn terminal disconnected.

### 3-phase 3-wire open delta connection with 2 CTs and 2 PTs

Direct voltage connections for the input voltages L-L up to 480 VAC.

**Figure 5-5: 3-phase 3-wire open delta connection**

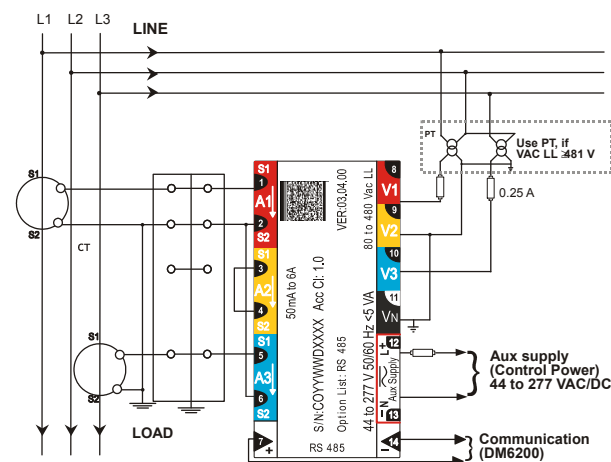


**NOTE:** Make sure Delta is programmed in the digital meter PROG menu-Setup.

## 2-phase 3-wire connection with 2 CTs

Direct voltage connections for the input voltages L-L up to 480 VAC.

**Figure 5-6: 2-phase 3-wire connection**

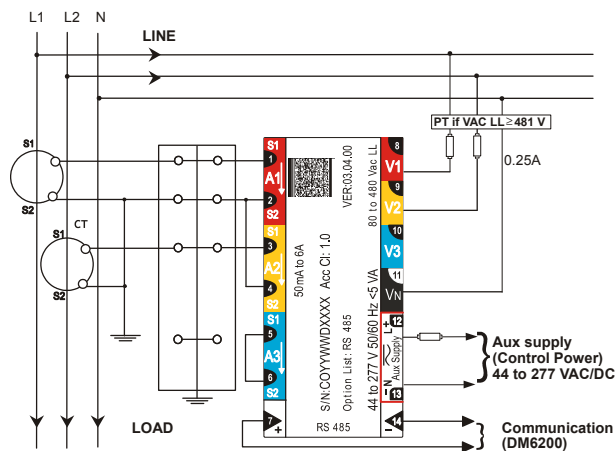


*NOTE: Make sure 2-Phase is programmed in the digital meter PROG menu- Setup.*

## Single-phase connection with 1 CT

Direct voltage connections for the input voltages L-L up to 480 VAC. Otherwise, use one PT.

1. Program the digital meter in single-phase mode.  
However, voltages primary and secondary need to be programmed as Line to Line.
2. Connect the voltage and current inputs only to the V1 and A1 voltage and current terminals of the digital meter.
3. The unused current terminals (A2 and A3) must be shorted together to reduce noise picked up in the digital meter.

**Figure 5-7: Single-phase connection**

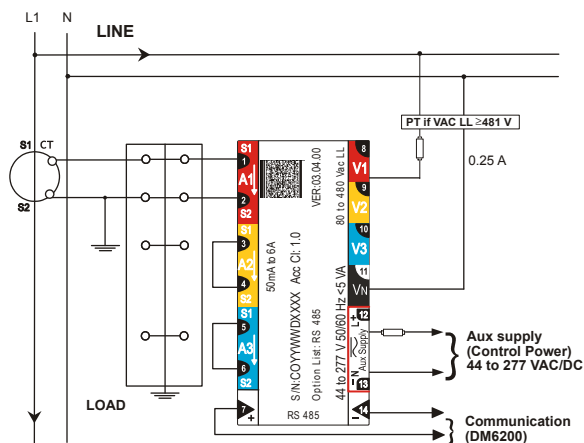





# Chapter 6: Data Communication

This section is applicable only for DM6200 digital meter.


## RS 485 Data Port

### Data port advantages:


- Rapid, on-line, real time readings into:
- Your own SCADA software or PLC.
- Schneider Electric Energy Management software products such as ION™ Enterprise, Vijeo Citect, PowerLogic SCADA for pinpointing energy usage and waste.
- Schneider Electric ConPAD: Digital meter programming and basic data reading utility.
- Data port has built-in impedance matched design for low reflectance on long data cables at high Baud rates. Eliminates need for complicated impedance matching resistors at the ends of long data cables.
- Fast 16 ms digital meter response, average time to read 10 parameters is 90 to 100 ms (9600 Baud, Even parity, One stop bit).
- Direct reading, pre-scaled float readings. Accurate, full precision low and high readings. No need for additional scaling factors or decimal adjustment.
- Fast, easy-to-use grouping of parameters tuned for field requirements.
- TURBO area for single point polling (upto 50 per query)
- Block area for even faster access to pre-configured data blocks

## Installation

Figure 6-1: 2-wire half duplex communication connection

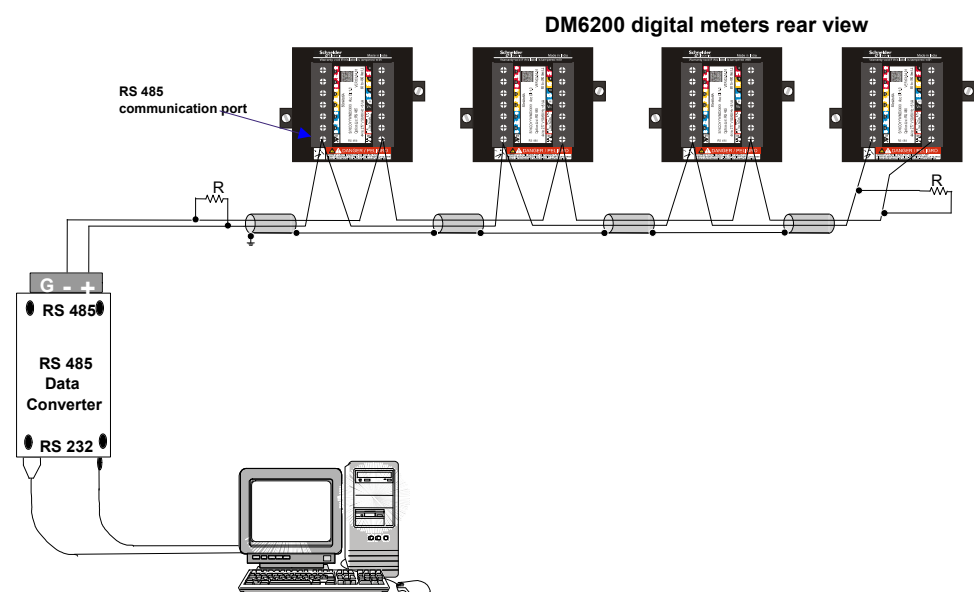

**Figure 6-2: closed loop, 2-wire half duplex**  
**Advantage — Reliable communications, tolerant to one break in the cable.**  
DM6200 digital meters rear view

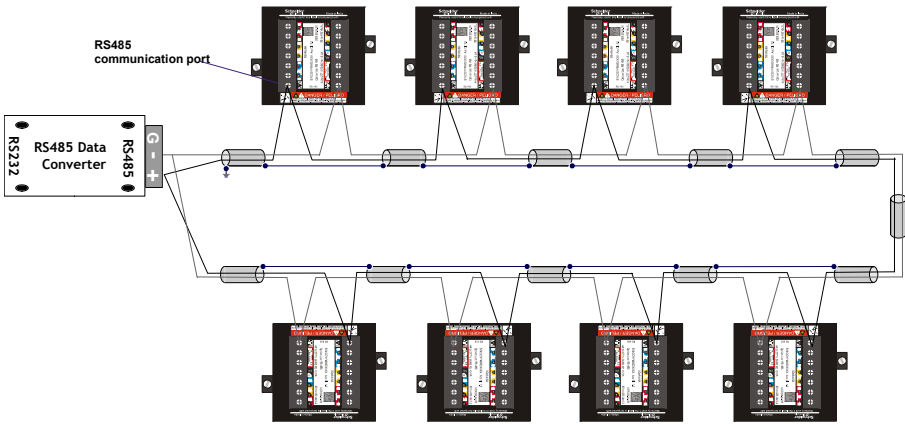

# Communication Capabilities

**Table 6-1: RS 485 Communication Distances**


| Baud Rate | Maximum Communication Distances 1 to 32 Devices |
|-----------|-------------------------------------------------|
|           | Meters (Typical with Belden 3105A cables)       |
| 9600      | 1200                                            |
| 19200     | 900                                             |

*NOTE: Distances listed should be used as guide only and cannot be guaranteed for non- PowerLogic devices. Above distances subject to vary based on the quality of the cable.*

# Daisy-chaining Devices to the Digital meter

RS 485 slave port allows the digital meter to be connected in a daisy chain with up to 31 2-wire devices. In this bulletin, *communications link* refers to a chain of devices that are connected by a communications cable. See Figure 6-3.

**Figure 6-3: Daisy-chaining 2-wire devices**

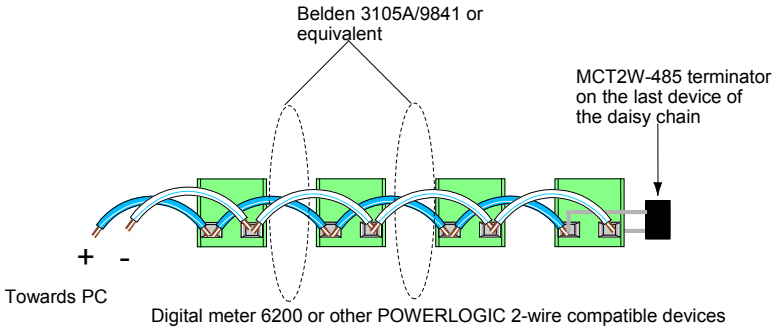

*NOTE: Belden 3105A/9841 colors: Blue (+), White (-)*

- If the digital meter is the first device on the daisy chain, connect it to the host device using a RS 232 to RS 422/RS 485 converter or RS 485 to Ethernet

converter.

- If the digital meter is the last device on the daisy chain, terminate it with the terminator provided.
- See Table 6-1 on page 42 for the maximum daisy-chain communications distances for 2-wire devices.
- The terminal's voltage and current ratings are compliant with the requirements of the EIA RS 485 communications standard.

## Data Formats and Settings

Your SCADA software must be configured for Modbus RTU communication, before integrating the Schneider Electric DM6200 digital meter. The mode of transmission is defined in the following, which is compatible with Modbus RTU mode:

**Table 6-2: Digital meter communication and protocol settings**

| Digital meter Communication Settings |                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Protocol                             | Modbus RTU                                                                                                                                                                                                                                                                                                                                            |
| Data bits                            | 8                                                                                                                                                                                                                                                                                                                                                     |
| Baud rate                            | 9600 Baud, User set 1200 to 19200<br>Range:1200, 2400, 4800, 9600, 19200<br>Normal use: 9600 Baud<br>Noisy, EMI, RFI, long data cable: 4800/2400 Baud<br>Short cable (<300 meters or 975 feet): 19200 Baud                                                                                                                                            |
| Parity                               | Even                                                                                                                                                                                                                                                                                                                                                  |
| Device Address                       | 1                                                                                                                                                                                                                                                                                                                                                     |
| Stop bit                             | 1                                                                                                                                                                                                                                                                                                                                                     |
| Modbus Protocol                      |                                                                                                                                                                                                                                                                                                                                                       |
| Device Address                       | 1 to 247<br>Upto 247 meters per COM Port with Repeaters                                                                                                                                                                                                                                                                                               |
| Function Code                        | 03 (Read)                                                                                                                                                                                                                                                                                                                                             |
| Data Address                         | Refer to "Data address" on page 47 for more information.                                                                                                                                                                                                                                                                                              |
| Data type                            | 32-bit float (real) :<br><ul style="list-style-type: none"> <li>• All parameters.</li> <li>• Direct reading, little endian float, no scaling required</li> </ul> 32-bit unsigned integer :<br><ul style="list-style-type: none"> <li>• INTR (number of interruptions (outages) - RMS Blocks)</li> <li>• RunSec (Run seconds – Integ Block)</li> </ul> |
| No of Registers                      | 2 to 50 (optional) per DM6200 data block of 10 x 32 bit values must be configured to suit the digital meter                                                                                                                                                                                                                                           |

*NOTE: The polling interval to poll the data from DM6200 will depend on baud rate. We recommend polling interval of one second at 9600 Baud rate.*

### Parameter Settings for Different SCADA Software

The following table explains how to read the parameter PF average (Refer to "Individual parameter address" on page 47 for more information) in different Modbus master software/PLC's.

**Table 6-3: Parameter settings**

| SL. No | SCADA software | Start Address | Function Code | No. of Register | Data Type | Remarks |
|--------|----------------|---------------|---------------|-----------------|-----------|---------|
|--------|----------------|---------------|---------------|-----------------|-----------|---------|


|    |                                             |            |                            |                 |                                      |                                                                                            |
|----|---------------------------------------------|------------|----------------------------|-----------------|--------------------------------------|--------------------------------------------------------------------------------------------|
| 1  | ION™ Enterprise                             | 43907      | Internally Configured      | 2               | Swapped Float                        | Direct conversion                                                                          |
| 2  | PowerLogic SCADA                            | 43907      | Internally configured      | 2               | Real                                 | Direct conversion                                                                          |
| 3  | Vijeo Citect                                | 43907      | Internally configured      | 2               | Real                                 | Direct conversion                                                                          |
| 4  | Intouch                                     | 43907 F    | Nil                        | 2               | Float                                | Direct conversion                                                                          |
| 5  | Modscan (Master)                            | 3907       | 03 – HOLDING REGISTERS     | 2               | Floating point                       | Unswapped FP mode                                                                          |
| 6  | MODTEST                                     | 43907      | 03 – Rosemount             | Points -1       | Float-Rosemount                      |                                                                                            |
| 7  | CIMPLICITY                                  | 43907      | Nil                        | 100             | Real                                 | Direct conversion. The array concept can be used here to poll all the data in single scan. |
| 8  | Allenbradly – Micrologix PLC (Slave/Master) | 43907      | 03-HOLDING REGISTERS       | 2               | Floating point                       | Direct                                                                                     |
| 9  | GE Fanuc PLC                                | 43907      | 03-HOLDING REGISTERS       | 2               | Real                                 | Direct                                                                                     |
| 10 | ABB RTU 560 (Mater)                         | Index-3906 | 03- Read HOLDING REGISTERS | Query Range - 2 | MFI – Analog measured Floating value | Under sub parameters, “Sign and Exponent in First Register” should be disabled (Unchecked) |
| 11 | SEIMENS PLC (Master)                        | 3906       | 03-HOLDING REGISTERS       | 2               | Real                                 | Direct                                                                                     |
| 12 | MOVICON                                     | 43907      | Nil                        | 2               | Real                                 | Direct                                                                                     |
| 13 | RSVIEW                                      | 43907      | 03-HOLDING REGISTERS       | 2               | Real                                 | Direct                                                                                     |
| 14 | ABB Microscada                              | 3906       | Format – 9                 | Interval – 2    | Real                                 | Direct                                                                                     |

## Communication Test


**Communication test:** DM6200 digital meter can be successfully used for communication using Modscan software as Modbus master in PC. Details of the settings in Modscan are given below.

### Settings in Modscan v3.D05-00 software to establish communication with DM6200 digital meters:


- Free download demo Modscan software from <http://www.win-tech.com>.
- The following explains how to read the power factor average PF avg from register 3907.

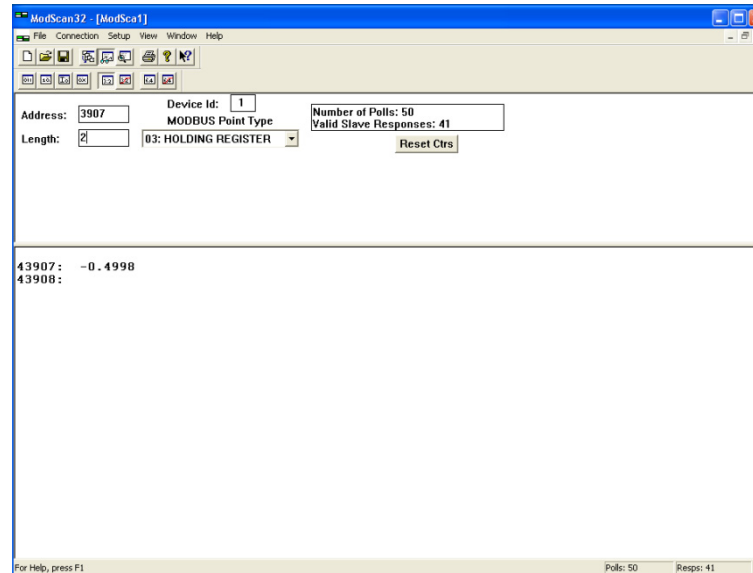


1. After starting the Modscan, to read power factor average (PF AVG), enter address as 3907 (decimal), length as 2, device ID as 1, Modbus point type as 03, and HOLDING REGISTER.
2. **Modify the connection details:** Click connection >connect to display the **connection detail window**. Change all the settings to match the following screen. These are the default settings for the DM6200 digital meter.

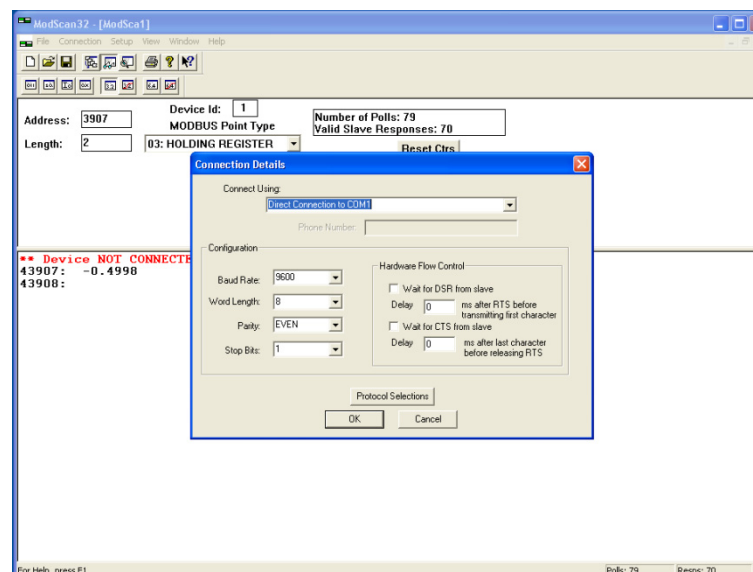

- Set the Modbus protocol selections: On “**Connection details**” window (shown in previous step), click **Protocol Selections**. Enter the protocol settings as shown below and click **OK** in all the windows.

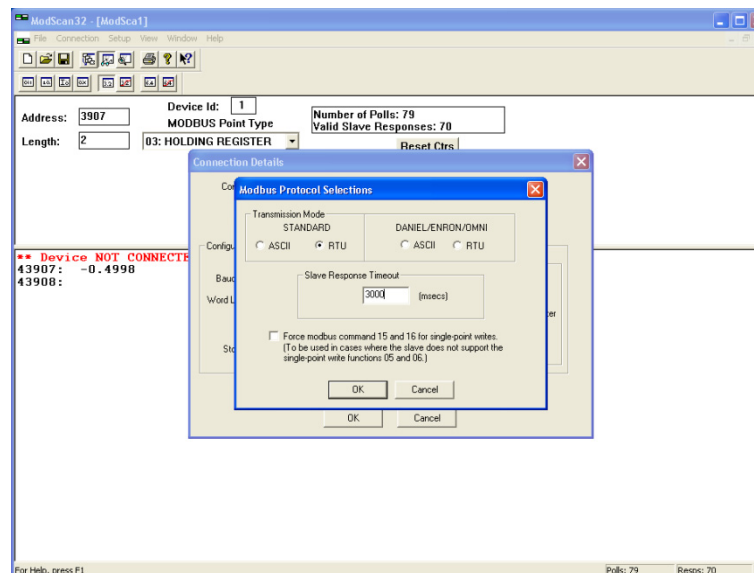

- The Modscan software starts polling the configured COM port for the Device ID 1. Modscan demo software will stop polling after 3.5 minutes on successful communication.

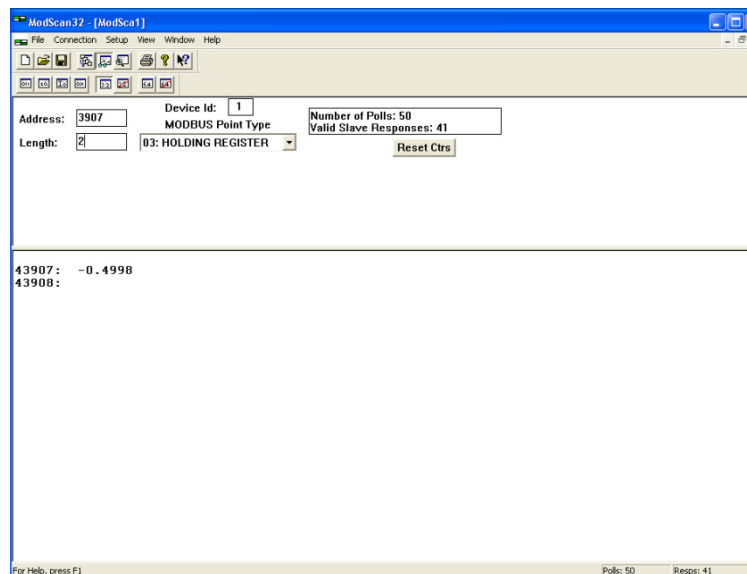

This shows that the digital meter is communicating with the Modbus Modscan master software successfully on the PC. The digital meter is Modbus RTU compliant.

## Data Address

The DM6200 digital meter supports the transfer of whole block and also of individual data values (two registers are used for storing single data value).

- In the transfer of individual data values, it treats two registers as an object, with

the starting address (e.g., 3900) considered as the object name. This enables you to transfer required data values for energy management.

- In the transfer of a whole block, it treats each block as an object with the starting address (e.g., 3000) considered as the object name. This enables fast block transfers, since energy management usually requires a block of related readings for the same point of time. This method also eliminates time-skew within readings of that block.
- The device address, block start address, and the number of registers, must be configured to match the digital meter. You must also make the related SCADA settings for polling priority, logging, and viewing data. Refer to your SCADA software instructions to learn how to do this.

### Individual Parameter Address

- Function Code: 03 Read
- No scaling required
- Read as block or individual parameters

**Table 6-4: Individual parameter address**

| Parameter                            | Description                   | Address | Type  | DM6200 |
|--------------------------------------|-------------------------------|---------|-------|--------|
| <b>Metering</b>                      |                               |         |       |        |
| <b>Metering - Current</b>            |                               |         |       |        |
| A                                    | Current average               | 3913    | Float | •      |
| A1                                   | Current, phase 1              | 3929    | Float | •      |
| A2                                   | Current, phase 2              | 3943    | Float | •      |
| A3                                   | Current, phase 3              | 3957    | Float | •      |
| <b>Metering – Voltage</b>            |                               |         |       |        |
| VLL                                  | Line to line average voltage  | 3909    | Float | •      |
| VLN                                  | Line to neutral voltage       | 3911    | Float | •      |
| V12                                  | Voltage phase 1 to phase 2    | 3925    | Float | •      |
| V23                                  | Voltage phase 2 to phase 3    | 3939    | Float | •      |
| V31                                  | Voltage phase 3 to phase 1    | 3953    | Float | •      |
| V1                                   | Voltage phase 1 to neutral    | 3927    | Float | •      |
| V2                                   | Voltage phase 2 to neutral    | 3941    | Float | •      |
| V3                                   | Voltage phase 3 to neutral    | 3955    | Float | •      |
| <b>Metering – Power Factor</b>       |                               |         |       |        |
| PF                                   | Power factor average          | 3907    | Float | •      |
| PF1                                  | Power factor, phase 1         | 3923    | Float | •      |
| PF2                                  | Power factor, phase 2         | 3937    | Float | •      |
| PF3                                  | Power factor, phase 3         | 3951    | Float | •      |
| <b>Metering - Frequency</b>          |                               |         |       |        |
| F                                    | Frequency, Hz                 | 3915    | Float | •      |
| <b>Integrator</b>                    |                               |         |       |        |
| On hours                             | On hours                      | 3993    | Long  | •      |
| INTR                                 | Number of power interruptions | 3999    | Long  | •      |
| <b>Percentage of Load parameters</b> |                               |         |       |        |
| % Avg Load                           | Average load percentage       | 3881    | Float | •      |
| %L1                                  | Percentage of phase 1 load    | 3883    | Float | •      |
| %L2                                  | Percentage of phase 2 load    | 3885    | Float | •      |
| %L3                                  | Percentage of phase 3 load    | 3887    | Float | •      |
| Unbalanced %Load                     | Unbalanced % load             | 3889    | Float | •      |
| Unbalanced % Voltage                 | Unbalanced % voltage          | 3891    | Float | •      |

## Block Parameter Address

### Total RMS Block

- Function Code: 03H Read
- Number of registers: 20
- No scaling required
- Read as block only

**Table 6-5: Total RMS block**

| Parameter | Description                  | Address | Type  | DM6200 |
|-----------|------------------------------|---------|-------|--------|
| Reserved  | Reserved                     | 3001    | Float |        |
| Reserved  | Reserved                     | 3003    | Float |        |
| Reserved  | Reserved                     | 3005    | Float |        |
| PF        | Average PF                   | 3007    | Float | •      |
| VLL       | Average line to line voltage | 3009    | Float | •      |
| VLN       | Average line to neutral      | 3011    | Float | •      |
| A         | Average current              | 3013    | Float | •      |
| F         | Frequency, Hz                | 3015    | Float | •      |
| Reserved  | Reserved                     | 3017    | Long  |        |
| Intr      | Number of interruption       | 3019    | Long  | •      |

### R phase RMS Block:

- Function Code: 03H Read
- Number of registers: 20
- No scaling required
- Read as block only

**Table 6-6: R phase RMS block**

| Parameter | Description               | Address | Type  | DM6200 |
|-----------|---------------------------|---------|-------|--------|
| Reserved  | Reserved                  | 3031    | Float | •      |
| Reserved  | Reserved                  | 3033    | Float | •      |
| Reserved  | Reserved                  | 3035    | Float | •      |
| PF1       | Power factor, phase1      | 3037    | Float | •      |
| V12       | Voltage phase1 to phase2  | 3039    | Float | •      |
| V1        | Voltage phase1 to neutral | 3041    | Float | •      |
| A1        | Current, phase1           | 3043    | Float | •      |
| F1        | Frequency, Hz             | 3045    | Float | •      |
| Reserved  | Reserved                  | 3047    | Long  |        |
| Intr1     | Number of interruption    | 3049    | Long  | •      |



### Y phase RMS Block:

- Function Code: 03H Read
- Number of registers: 20
- No scaling required
- Read as block only

**Table 6-7: Y phase RMS block**

| Parameter | Description                | Address | Type  | DM6200 |
|-----------|----------------------------|---------|-------|--------|
| Reserved  | Reserved                   | 3061    | Float | •      |
| Reserved  | Reserved                   | 3063    | Float | •      |
| Reserved  | Reserved                   | 3065    | Float | •      |
| PF2       | Power factor, phase 2      | 3067    | Float | •      |
| V23       | Voltage phase 2 to phase 3 | 3069    | Float | •      |
| V2        | Voltage phase 2 to neutral | 3071    | Float | •      |
| A2        | Current, phase 2           | 3073    | Float | •      |
| F2        | Frequency, Hz              | 3075    | Float | •      |
| Reserved  | Reserved                   | 3077    | Long  |        |
| Intr2     | Number of interruption     | 3079    | Long  | •      |

### B phase RMS Block:

- Function Code: 03H Read
- Number of registers: 20
- No scaling required
- Read as block only

**Table 6-8: B phase RMS block**

| Parameter | Description                | Address | Type  | DM6200 |
|-----------|----------------------------|---------|-------|--------|
| Reserved  | Reserved                   | 3091    | Float | •      |
| Reserved  | Reserved                   | 3093    | Float | •      |
| Reserved  | Reserved                   | 3095    | Float | •      |
| PF3       | Power factor, phase 3      | 3097    | Float | •      |
| V31       | Voltage phase 3 to phase1  | 3099    | Float | •      |
| V3        | Voltage phase 3 to neutral | 3101    | Float | •      |
| A3        | Current, phase 3           | 3103    | Float | •      |
| F3        | Frequency, Hz              | 3105    | Float | •      |
| Reserved  | Reserved                   | 3107    | Long  |        |
| Intr3     | Number of interruption     | 3109    | Long  | •      |

### Phase Angle Block:

- Function Code: 03H Read
- Number of registers: 18
- No scaling required
- Read as block only

**Table 6-9: Phase angle block**

| Parameter       | Description                  | Address | Type  | DM6200 |
|-----------------|------------------------------|---------|-------|--------|
| Neutral voltage | Neutral voltage              | 3701    | Float | •      |
| An              | Neutral current              | 3703    | Float | •      |
| V1              | Voltage phase angle, phase 1 | 3705    | Float | •      |
| V2              | Voltage phase angle, phase 2 | 3707    | Float | •      |
| V3              | Voltage phase angle, phase 3 | 3709    | Float | •      |
| A1              | Current phase angle, phase 1 | 3711    | Float | •      |
| A2              | Current phase angle, phase 2 | 3713    | Float | •      |
| A3              | Current phase angle, phase 3 | 3715    | Float | •      |
| RPM             | Rotations per minute         | 3717    | Float | •      |

*NOTE: The parameters V1, V2, V3 (Voltage phase angles, and neutral voltage are available only through communication.*

### Setup Block:

- Function Code: 03H Read, 10H Write
- Number of registers: 40
- No scaling required
- Read and write as block only

**Table 6-10: Setup block**

| Parameter | Description             | Address | Type  | Range                                                                                                  | Default value | DM6200 |
|-----------|-------------------------|---------|-------|--------------------------------------------------------------------------------------------------------|---------------|--------|
| A.Pri     | Current Primary         | 0101    | Float | to 99 k                                                                                                | 100.0         | •      |
| A.Sec     | Current Secondary       | 0103    | Float | 1.0 to 6.5                                                                                             | 5.000         | •      |
| V.Pri     | Voltage Primary         | 0105    | Float | 100.0 to 999 k                                                                                         | 415.0         | •      |
| V.Sec     | Voltage Secondary       | 0107    | Float | 50.00 to 601.0                                                                                         | 415.0         | •      |
| SYS       | System Configuration    | 0109    | Float | 1.0 to 6.0<br>2.0 – Delta<br>3.0 – Star<br>4.0 – Wye<br>5.0 – 2 Ph<br>6.0 – 1 Ph                       | 3.000         | •      |
| LABL      | Phase Labeling          | 0111    | Float | 0.0 to 4.0<br>0.0 – 123<br>1.0 – ABC<br>2.0 – RST<br>3.0 – PQR<br>4.0 – RYB                            | 0.000         | •      |
| VA Fn     | VA Function selection   | 0113    | Float | 0.0 to 1.0<br>0.0 – 3D<br>1.0 – Arth                                                                   | 0.000         | •      |
| Reserved  | Reserved                | 0115    | Float |                                                                                                        |               |        |
| Reserved  | Reserved                | 0117    | Float |                                                                                                        |               |        |
| Reserved  | Reserved                | 0119    | Float |                                                                                                        |               |        |
| BAUD      | Baud rate               | 0121    | Float | 1.0 to 5.0<br>1.0 – 1200<br>2.0 – 2400<br>3.0 – 4800<br>4.0 – 9600<br>5.0 – 19200                      | 4.000         | •      |
| PRTY      | Parity and Stop bit     | 0123    | Float | 0.0 to 5.0<br>0.0 – Even 1<br>1.0 – Even 2<br>2.0 – Odd 1<br>3.0 – Odd 2<br>4.0 – No 1<br>5.0 – No 2   | 0.000         | •      |
| ID        | Unit ID                 | 0125    | Float | 1.0 to 255.0                                                                                           | 1.000         | •      |
| F.S%      | % Full scale            | 0127    | Float | 1 to 100                                                                                               | 100.0         | •      |
| Reserved  | Reserved                | 0129    | Float |                                                                                                        |               |        |
| POLE      | Number of poles for RPM | 0131    | Float | 1.0 to 8.0<br>1.0 – 2<br>2.0 – 4<br>3.0 – 6<br>4.0 – 8<br>5.0 – 10<br>6.0 – 12<br>7.0 – 14<br>8.0 – 16 | 2.000         | •      |
| PWD       | Password                | 0133    | Float | 1000                                                                                                   | 1000          | •      |
| Reserved  | Reserved                | 0135    | Float | -                                                                                                      | 2.0           | •      |
| Reserved  | Reserved                | 0137    | Float | -                                                                                                      | 4126          | •      |
| Reserved  | Reserved                | 0139    | Float | -                                                                                                      | 0.0           | •      |

**NOTE:** For efficient setup, read the setup parameters first and then edit the required setup parameter value.

### Clear Block

- Function Code: 10H Write
- Number of registers: 2
- No scaling required
- Write as block only

**Table 6-11: Clear block**

| Parameter                | Description                                       | Address | Type | Range                                    | DM6200 |
|--------------------------|---------------------------------------------------|---------|------|------------------------------------------|--------|
| CLR_INTG_<br>_SETDEFAULT | INTG clearing and setting<br>up the setup default | 0311    | Long | 1 - INTG Clear<br>256 - setup<br>default | •      |

*NOTE: For setup default, meter will send an exception for values other than 256.*

### Model Info Block:

- Function Code: 03H Read
- Number of registers: 14
- No scaling required
- Read as block only

**Table 6-12: Model info block**


| Parameter     | Description                           | Address | Type | Range                                                                                                                                  | DM6200 |
|---------------|---------------------------------------|---------|------|----------------------------------------------------------------------------------------------------------------------------------------|--------|
| Reserved      | Reserved                              | 0081    | Long |                                                                                                                                        |        |
| Reserved      | Reserved                              | 0083    | Long |                                                                                                                                        |        |
| Model Version | Model, options and<br>version numbers | 0085    | Long | Bits 30 to 24 for<br>model number; 23<br>to 16 for options;<br>15 to 0 for<br>version number;<br>e.g., DM6200<br>model number is<br>23 | •      |
| Reserved      | Reserved                              | 0087    | Long |                                                                                                                                        |        |
| Reserved      | Reserved                              | 0089    | Long |                                                                                                                                        |        |
| Reserved      | Reserved                              | 0091    | Long |                                                                                                                                        |        |
| Reserved      | Reserved                              | 0093    | Long |                                                                                                                                        |        |

### Model Register Details

This section explains about the model register and helps you to understand the model number, version number, and options.

The following figure explains how the bits are organized in the model register.

**Figure 6-4: Bits in model register**

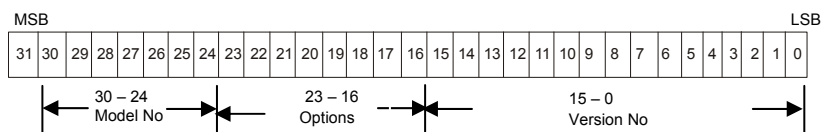

**Meter Model and Number:** The following table provides the bitwise explanation for digital meter model and number.

**Table 6-13: Meter model and number**

| Meter model | Model no (5A) | Model Options |
|-------------|---------------|---------------|
| DM6200      | 23 (0x17)     | Nil           |

**Model Options Description:** DM6200 meter does not have any options; hence the bits from 23 to 16 will be zero, as shown in the following table.

**Table 6-14: Model options description**

| Bit23 | Bit22 | Bit21 | Bit20 | Bit19 | Bit18 | Bit17 | Bit16 | Remarks              |
|-------|-------|-------|-------|-------|-------|-------|-------|----------------------|
| 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | No options available |

**Interpretation of Firmware Version Number:** The following steps explain how to interpret the firmware (FW) version number.

1. Convert the hexadecimal values both MSB and LSB into decimal values.
2. Apply the formula ((MSB\*256)+LSB).
3. The resulting value will be 30400 for the hexadecimal value 0x76 0xC0.
4. Insert a **0** before the result and parse it from the right with two digits each.
5. The result will be the FW version = 03.04.00.

**Table 6-15: Firmware version interpretation**

|                       | MSB      | LSB  |
|-----------------------|----------|------|
| Hexadecimal           | 0x76     | 0xC0 |
| Decimal               | 118      | 192  |
| VALUE=((MSB*256)+LSB) | 30400    |      |
| FW Version            | 03.04.00 |      |

*NOTE: Firmware version representation only. To determine your digital meter's present firmware version, refer the diagnostic page in the digital meter. See "DM6000 digital meters menu hierarchy", on page 24 to navigate through the diagnostic page.*

**NOTE:**

- Most of the reserved and unavailable parameters return zero value.
- The SCADA software must support register blocks consisting of different data types (integers and floats) to transfer the whole block.
- Each Modbus register size is 16 bits. All DM6200 readings are 32 bits. Therefore, each DM6200 reading occupies **two** consecutive Modbus registers. For example, PF average parameter absolute address is 3907. It occupies both 3907 and 3908 Modbus registers.
- Address configuration: All addresses are in decimal. Some SCADA software supports Modbus register address instead of absolute register address. In this case add 40000 to the above address and use it. For example PF average parameter absolute address is 3907. Modbus address can be 43907 (40000+3907).
- Phase Angle Block: Voltage phase angles (0,120,240) are hard coded (not measured). Hence, these values are also available in communication in the absence of input signals; however, these voltage phase angles are not available in the digital meter display.
- TURBO, and percentage of load blocks: These parameters can be read individually or as a block
- TURBO block: 50 parameters maximum
- Percentage of Load block: 5 parameters maximum
- All digital meter addresses should be set between 1 and 247.
- All digital meters should have uniform communication settings like Baud rate, parity, and stop bit.
- Use diagnostic mode display in the digital meter to analyze the problem in communication.
- Error: u – Invalid unit ID
  - A – Invalid Address
  - c – CRC error (cyclic redundancy checking)
  - t – Transmitting
  - r – Receiving
  - F – Invalid function code
  - o – Parity, framing, or overrun error
  - O- Buffer overflow

# Chapter 7: Maintenance and Troubleshooting

## Introduction

This chapter describes information related to maintenance of your digital meter.

The digital meter does not contain any user-serviceable parts. If the digital meter requires service, contact your local sales representative. Do not open the digital meter. Opening the digital meter voids the warranty.

### CAUTION

#### HAZARD OF EQUIPMENT DAMAGE

- Do not perform a Dielectric (Hi-Pot) or Megger test on the digital meter, test voltages may damage the digital meter..
- Before performing Hi-Pot or Megger testing on any equipment in which the digital meter is installed, disconnect all input and output wires to the digital meter.

**Failure to follow these instructions will result in equipment damage.**

## Troubleshooting

The information in Table 7–1 describes potential problems and their possible causes. It also includes possible checks to perform or solutions to the problem. After referring to this table, if you cannot resolve the problem, contact your local Schneider Electric sales representative for assistance.

### ⚠ DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical practices. For example, in the United States, see NFPA 70E.
- This equipment must be installed and serviced only by qualified personnel.
- Turn off all power supplying this equipment before working on or inside.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Carefully inspect the work area for tools and objects that may have been left inside the equipment.
- Use caution while removing or installing panels so that they do not extend into the energized bus; avoid handling the panels, which could cause personal injury.

**Failure to follow these instructions will result in death or serious injury.**

**Table 7-1: Trouble shooting**

| Potential Problem                                              | Possible Cause                                 | Possible Solution                                                                                                                                                                                        |
|----------------------------------------------------------------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The data being displayed is inaccurate or not what you expect. | Incorrect setup values                         | Check that the correct values have been entered for digital meter setup parameters (CT and PT ratings, system type, and so on). See "PROG menu - Setup" on page 17 for setup instructions.               |
|                                                                | Usage of protection class (10P10 etc.) CTs/PTs | Use instrument class 1 or better CTs/PTs, which will have better accuracy than the protection class CTs/PTs.                                                                                             |
|                                                                | Improper wiring                                | Check whether all the PTs and CTs are connected properly (proper polarity is observed) and that they are energized. Check shorting terminals. See "connection diagrams" on page 37 for more information. |
| The display went blank suddenly.                               | Over voltage/temperature                       | Interrupt the power supply, or reduce the voltage or temperature within the limits.                                                                                                                      |
|                                                                | Fuse connection                                | Check whether fuse with a rating of 0.25 A is connected on each voltage input. If not, connect the 0.25 A rated fuse to the voltage input.                                                               |
| The digital meter stopped communication abruptly.              | Communications lines are improperly connected. | Verify the digital meter communications connections. See "Chapter 6 – Data communication" on page 41 for more information.                                                                               |
|                                                                | Over voltage/temperature                       | Interrupt the power supply or reduce the voltage or temperature within the limits.                                                                                                                       |
| Wrong load bar indication                                      | Incorrect F.S% selection                       | Select the full scale load percentage setting as per your circuit.                                                                                                                                       |
| The digital meter is over heated                               | Lack of sufficient air for cooling             | Provide sufficient space all around the digital meter. Separate the digital meter from other equipment for cooling air.                                                                                  |



# Appendix A – Technical Data

## Accuracy

**Table A-1: Accuracy**

| Measurement                      | Accuracy % of Reading |
|----------------------------------|-----------------------|
|                                  | Class 1.0             |
| Voltage LN per phase and average | 1.0                   |
| Voltage LL per phase and average | 1.0                   |
| Amp per phase and average        | 1.0                   |
| Amp, phase angle per phase       | 2°                    |
| Frequency                        | 0.1                   |
| Power factor PF                  | 1.0                   |
| RPM                              | 1.0                   |

*NOTE: Additional error of 0.05 % of full scale for digital meter input current below 100 mA.*

## Auxiliary Supply (Control Power)

The digital meter needs a single-phase AC or DC control supply to power its internal electronics.

Range: 44 to 277 VAC/DC.

Burden (load): 0.2 VA max for each phase input voltage and current 3 VA max on auxiliary supply.

## Front Panel Display

- Brilliant three lines four digit (digit height 14.2 mm/0.56 in.) per line, high readability alpha numeric LED display with auto scaling capability for Kilo, Mega, Giga.
- The display provides the user access to all phase voltages (phase to neutral and phase to phase), currents (per phase and average), power factor, frequency.
- The digital meters displays average volts, amps, and frequency simultaneously.
- Load bar graph for the indication of consumption in terms of % amperes total.
- Set of four red LEDs in the load bar start blinking when the load is greater than 120%, to indicate the overload.
- Easy setup through keys located on the faceplate for common configuration parameters.
- Password protection for setup parameters.
- User-selectable default display page through keypad lock.

## Installation and Input Ratings

- Auto-ranging voltage inputs should allow direct connection up to 277 VLN/480VLL AC systems (no PTs/VTs required up to 480 VLL phase to phase).
- Supports the following configurations (field configurable):  
Direct 4-wire Wye (Star); 3-wire Wye (Star); 3-wire Delta; 2-phase 3-wire (2-phase), and single-phase.
- 3-phase voltage and current inputs
- Volts : 46 to 277 VAC phase-neutral, 80 to 480 VAC phase-phase, Overload: Continuous 480 VLL with full accuracy, 750 VLL Max, Hz. 50 / 60
- Amps: 50 mA to 6 A, Overload: 10 A continuous, 50 A for three seconds
- User programmable for 5 A or 1 A secondary CTs
- Burden (Load): Less than 0.2 VA per Volt / Ampere input
- Frequency (Both input and auxiliary): 50 / 60 Hz, 45 to 65 Hz

## Environmental Conditions

- Sealed dust-proof construction. Meets IP51 for the front panel and IP40 for rear panel.
- Operating temperature: -10 °C to 60 °C, (14 °F to 140 °F)
- Storage temperature: -25 °C to 70 °C, (-13 °F to 158 °F)
- Humidity: 5% to 95%, non-condensing

## Construction

- Self-extinguishable V0 plastic, double insulation at accessible areas.
- Pollution Degree II.
- Measurement Category III.

## Dimensions and Shipping

- Basic unit installed depth 82 mm (3.23 in.) with the protected cover with 92 x 92 mm (3.62 x 3.62 in.) panel cut-out, flush mount.
- Bezels dimension 96 x 96 mm (3.78 x 3.78 in.). Panel cut-out 92x92 mm (3.62 x 3.62 in.).
- Weight 400 gms (0.9 lb) approx unpacked, 500 gms (1.1 lb) approx shipping. See "Mechanical Installation" on page 29 for more information.

## Appendix B: SIM (Simulation) Mode

The digital meters are provided with SIM mode for demo and exhibition display, where the user can see the functioning of the digital meter without any input signals. The digital meter will show a fixed voltage, current, frequency, and 0.5PF.

### To Enter SIM mode

- Keep  pressed, while powerup the digital meter. The display shows **RUN**.
- Press . The display shows **SIM**.
- Press . The display shows **RMS SIM**. You have successfully entered the SIM mode of the digital meters.

### To Exit from SIM mode

- Press and hold the  continuously until you reach the RMS page.
- Press  once. The display shows **SIM**.
- Press . The display shows **RUN**.
- Press . The display shows **RMS** indicating the exit from SIM mode



# Appendix C: Glossary

## Terms

**Baud rate:** Specifies how fast data is transmitted across a network port.

**Communications link:** A chain of devices connected by a communications cable to a communications port.

**Current Transformer (CT):** Current transformers for current inputs.

**Firmware:** Operating system within the digital meter.

**Float:** A 32-bit floating point value returned by a register (Refer to “Data Address” on page 47 for more information).

**Frequency:** Number of cycles in one second.

**Line-to-line voltages:** Measurement of the RMS line-to-line voltages of the circuit.

**Line-to-neutral voltages:** Measurement of the RMS line-to-neutral voltages of the circuit.

**LOCK:** Default display page lock (Refer to “Default display (View) page” on page 12).

**Long:** A 32-bit value returned by a register (Refer to “Data Address” on page 47 for more information).

**Nominal:** Typical or average.

**Parity:** Refers to binary numbers sent over the communications link. An extra bit is added so that the number of ones in the binary number is either even or odd, depending on your configuration. Used to detect errors in the transmission of data.

**Power factor:** True power factor is the ratio of real power to apparent power using the complete harmonic content of real and apparent power.

**RMS:** Root mean square. The digital meters are true RMS sensing devices.

**Run mode:** This is the normal operating mode of the digital meter, where the readings are taken.

**ULOC:** Default display page unlock (Refer to “Default display (view) page” on page 12).

## Abbreviations

|           |                           |
|-----------|---------------------------|
| %A FS     | % Amperes full scale      |
| A, Amps   | Amperes                   |
| An        | Neutral current           |
| A.PRI     | Current primary winding   |
| A.SEC     | Current secondary winding |
| Avg       | Average                   |
| CLR       | Clear                     |
| CT        | Current transformer       |
| Dia, DIAG | Diagnostic                |
| ft        | Feet/foot                 |
| FW        | Firmware                  |
| FWD       | Forward                   |
| Hz        | Hertz                     |
| ID        | Identity                  |
| in.       | Inch                      |
| INTG      | Integrator                |
| IP        | Ingress protection        |
| LSB       | Least significant bit     |
| Min       | Minimum                   |
| ms        | Milliseconds              |
| MSB       | Most significant bit      |
| PF        | Power factor              |
| PT        | Potential transformer     |
| RPM       | Revolution per minute     |
| SYS       | System configuration      |
| ULOC      | Unlock                    |
| Unb       | Unbalance                 |
| V         | Voltage                   |
| V.PRI     | Voltage primary winding   |
| V.SEC     | Voltage secondary winding |
| VT        | Voltage transformer       |

## INDEX

### AC Power Measurement

- Consumption and Poor PF, 26
- 3-phase systems, 25

### Auto-scroll

- Within page group, column of pages and TURBO pages, 12

### Block parameter address

- B Phase RMS block, 49
- Clear block, 51
- Model Info block, 52
- Phase angle block, SETUP block, 50
- Total RMS block, R phase RMS block, 48
- Y Phase RMS block, 49

### Clear

- INTG, 23

### Communication Test, 45

### Connections

- Connection diagram symbols, 37
- Delta connection, 38
- Fuse recommendations, 34
- Single-phase connection, 39
- Two phase connection, 39
- WYE/Star connection, 37

### Data Address

- Block parameter address, 48
- Individual parameter address, 47

### Data communication, 41

- Daisy chaining devices to the digital meter, 42
- Data formats and settings, 43

### Default display (View) page

- Display lock and unlock, 12

### DM6000 series digital meters product description, 7

### DM6000 Series Menu hierarchy, 24

### Electrical installation, 32

### Front panel

- Kilo, Mega, Giga and negative indicators, 9
- LED display, Load bar, 8

### Keys

- Left, Right, Up, Down keys, 10
- Operation, 11

### Maintenance and troubleshooting, 55

### Mechanical Installation

- Panel considerations and Environment, 30

### Parameters with DM6000 series digital meters, 14

### PROG menu — Setup

- List of setup parameters in View & Edit modes, 20
- Quick setup - While powering on, 17
- Setup entry in Edit mode, 19
- Setup entry in View mode, 19
- Setup parameters editing, 21

### Rear Panel, 13

### Safety

- Precautions, 27
- Symbols, 3

### SIM (simulation) mode, 61

### Technical specifications, 15

### Total RMS block, 48

### TURBO Key, 10

**Schneider Electric Industries SAS**

35, rue Joseph Monier  
CS 30323  
F - 92506 Rueil-Malmaison Cedex

For technical support:  
Global-PMC-Tech-support@schneider-  
electric.com  
(00) + 1 250 544 3010

Contact your local Schneider Electric sales  
representative for assistance or go to  
[www.schneider-electric.com](http://www.schneider-electric.com).

PowerLogic and ION Enterprise are either trademarks or registered trademarks  
of Schneider Electric.

Electrical equipment should be installed, operated, serviced, and maintained only by  
qualified personnel. No responsibility is assumed by Schneider Electric for any  
consequences arising out of the use of this material.

© 2010 Schneider Electric All Rights Reserved  
v03.04.d15