

Load Centre KQ


Door lock for KQ type A & B distribution boards
Installation Instructions 75204417A

Part numbers this instruction applies to: KQK

Safety

This equipment must be installed, commissioned and maintained by competent personnel in accordance with current Statutory Regulations and National, European and International Standards prevailing at the place of installation.

Following completion of installation these instructions must be left with the equipment/end user.

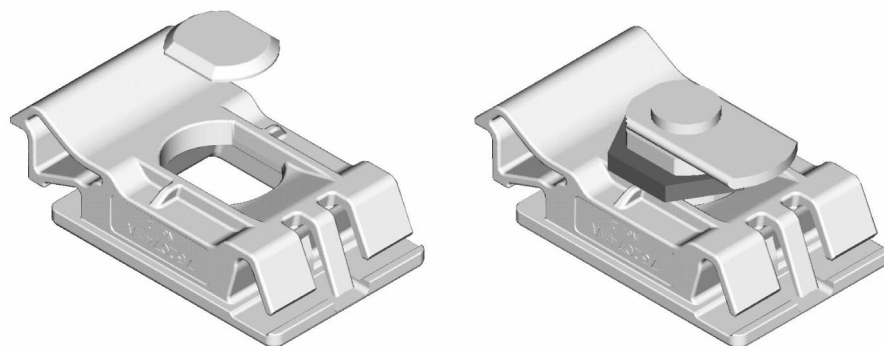

Installation

1. Remove knockout by scoring around both sides with a knife.
2. Insert lock through front of moulding, secure using retaining nut.

Square D
Fordhouse Road
Wolverhampton WV10 9ED
Tel. 0870 608 8608 Fax. 0870 608 8606



SQUARE D

As standards, specifications and designs develop from time to time, always ask for confirmation of the information given in this publication.



Load Centre KQ


Door lock for KQ type A & B distribution boards
Installation Instructions 75204417A

Part numbers this instruction applies to: KQK

Safety

This equipment must be installed, commissioned and maintained by competent personnel in accordance with current Statutory Regulations and National, European and International Standards prevailing at the place of installation.

Following completion of installation these instructions must be left with the equipment/end user.

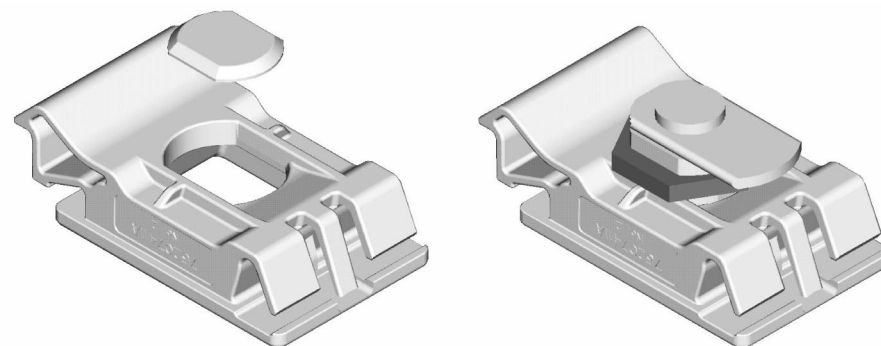

Installation

1. Remove knockout by scoring around both sides with a knife.
2. Insert lock through front of moulding, secure using retaining nut.

Square D
Fordhouse Road
Wolverhampton WV10 9ED
Tel. 0870 608 8608 Fax. 0870 608 8606



SQUARE D

As standards, specifications and designs develop from time to time, always ask for confirmation of the information given in this publication.

