


Customer Installed Wiring For LE2GBKO55** Starter

Incoming phases. If an LE2GBKS55** version these connections will be made to the isolator block

These connections are factory made, it is only the other ends which the customer needs connect to terminals 95 and 96 of the motor overload.

Neutral block only present
in 240V coil versions

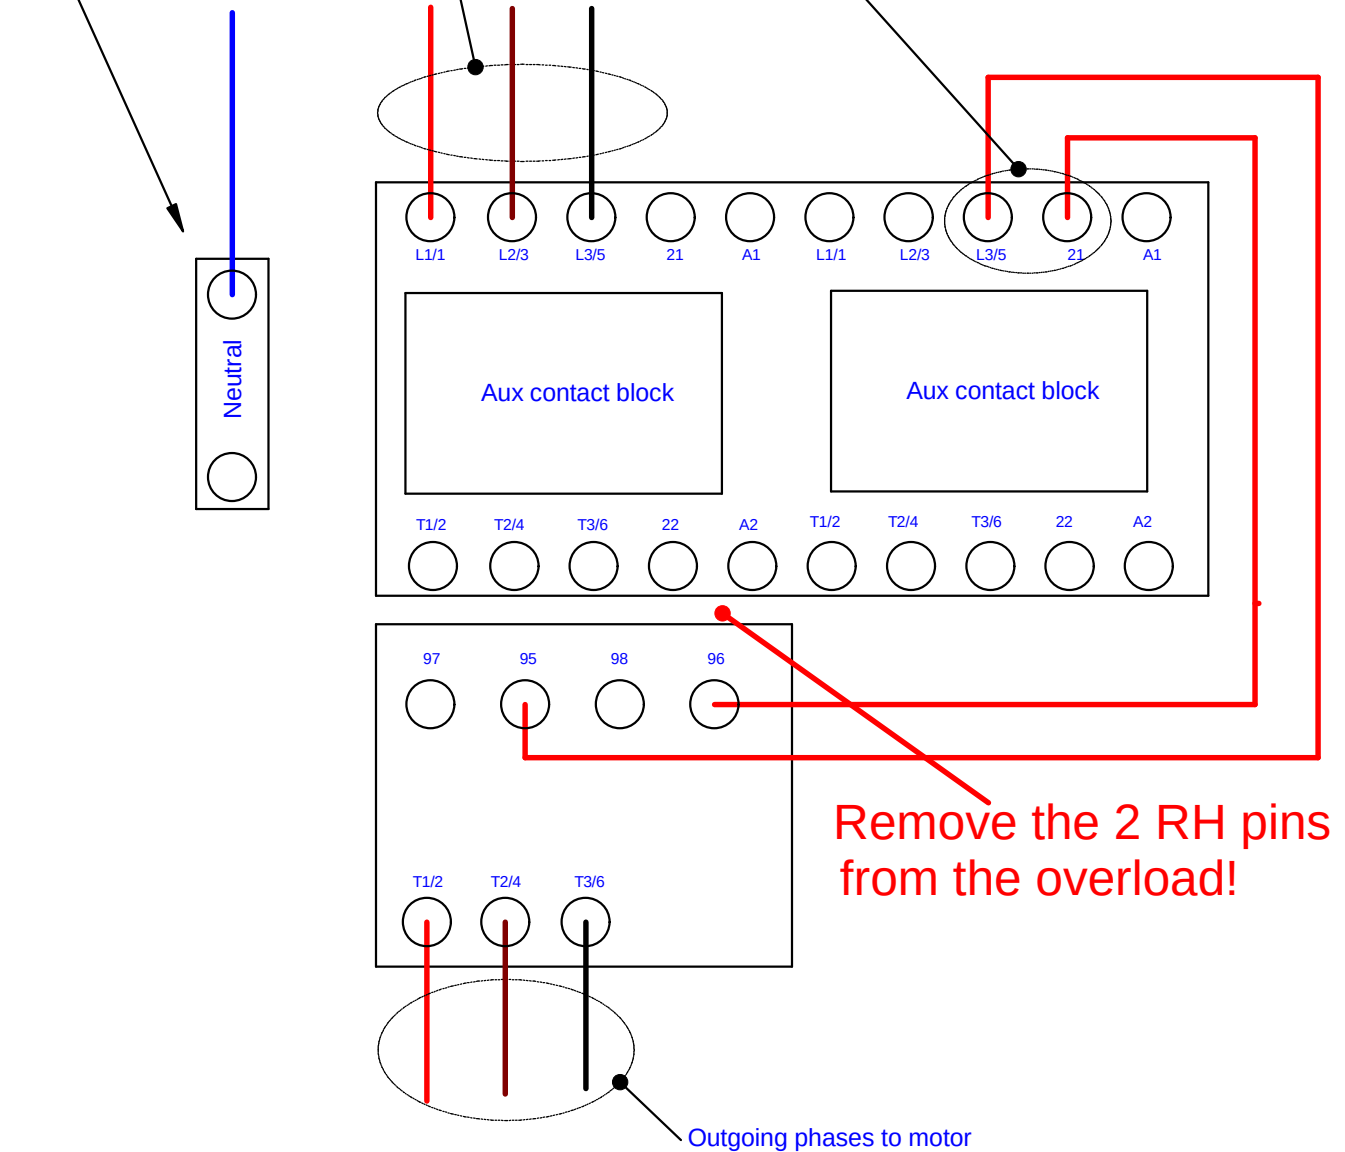

All other connections are factory made and should not be altered