

Monitoring mode MOn

Code	Name/Description
B I I	Product status This parameter displays the state of the drive and motor. ☐ Drive ready ☐ Drive running, the last 6-segment digit to the right of the code also indicates direction and speed ☐ Acceleration, the last 6-segment digit to the right of the code also indicates direction and speed ☐ Deceleration, the last 6-segment digit to the right of the code also indicates direction and speed ☐ DC injection braking in progress ☐ Current limitation state, 4-segment digit blinks ☐ Freewheel stop control ☐ Auto-adapted deceleration ☐ Controlled stop on mains phase loss ☐ Auto-tuning in progress ☐ Fast stop state ☐ No line power state. When the control part is energized via the RJ45 connector and there is no line voltage and no run order present. ☐ Drive is running and using the Fall back speed ☐ Remote configuration ☐ Local configuration
-- 00	
-- 01	
-- 02	
-- 03	
-- 04	
-- 05	
-- 06	
-- 07	
-- 08	
-- 09	
-- 10	
-- 11	
-- 12	
-- 13	
-- 14	