


PowerLogic™ High Density Metering System 1-Meter Enclosure

Installation Guide

63230-508-211A1
07/2014

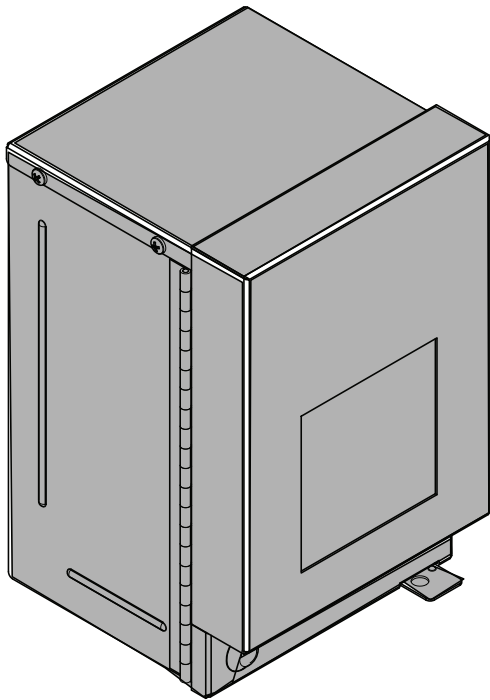

Safety information

Important information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please note

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Introduction	5
Box Contents	5
Parts and Accessories	5
Safety Precautions	6
Specifications	6
Installation	8
Mounting the Enclosure	11
Mounting Dimensions	13
Wiring Connections	15
Circuit Protection	15
Shorting Block Use	16
Removing Short from Current Inputs.....	17
Shorting the Current Inputs	17
Current Transformers	17
Voltage Input Connectors	18
Wiring Diagrams	19
Single-Phase Tenants: Single-Phase Source	20
Single-Phase Tenants: Three-Phase Source	21
Three-Phase Tenants	22
Control Power	23
Communications	23
Initializing the Meters	23
How to Upgrade Firmware	24
Removing a Meter	24
Cover Plates	25

Introduction

The PowerLogic™ High Density Metering System is used to monitor the amount of electricity used in individual units of multi-unit residential or commercial buildings. The system consists of one or more power meters housed in a wall-mounted metal cabinet or enclosure. Multiple enclosures may be installed at a single location.

A meter is assigned to a tenant who occupies an individual unit within a complex. The meter monitors and records the energy consumed inside the unit. At pre-determined times, tenant billing software polls the meter through a communications link to gather usage information. This information can be used as a means of monitoring overall electrical usage or to generate an electric bill for the tenant.

NOTE: Some locations/jurisdictions do not permit sub-billing. Before billing tenants, check your location/jurisdiction regarding regulations.

Box Contents

The following components are shipped with the 1-Meter Enclosure:

- Enclosure containing pre-installed meter, shorting block, and wiring harness
- Shorting screws (already mounted)
- Meter hardware kit - includes terminating resistor
- Installation sheet for relevant meter
- This installation guide

Parts and Accessories

The 1-meter enclosure can house any of the following PowerLogic meters:

- PM5110
- PM5330
- PM5340
- PM5560

The enclosure is shipped with a meter already installed and wired. Table 1 lists part numbers and accessories for the High Density Metering System—1-Meter Enclosure.

Table 1: Parts and Accessories

Description	Part Number
PowerLogic Power Meter	See power meter installation document (METSEPM5110, METSEPM5330, METSEPM5340, METSEPM5560).
Cover Plate Assembly Kit	96DINCVRPLT

For more information on your particular meter, refer to the included meter documentation or search for your meter at www.schneider-electric.com.

PowerLogic™ Tenant Metering Software is purchased separately and includes installation and use instructions.

Safety Precautions

Installation, wiring, testing and service must be performed in accordance with all local and national electrical codes.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E in the USA, CSA Z462 or applicable local standards.
- Turn off all power supplying this device and the equipment in which it is installed before working on the device or equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Do not exceed the device's ratings for maximum limits.
- Do not use this device for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Replace all devices, doors and covers before turning on power to this equipment.
- Do not alter factory-installed wiring inside the enclosure.

Failure to follow these instructions will result in death or serious injury.

Specifications

Table 2: Enclosure Technical Specifications

PHYSICAL/MECHANICAL CHARACTERISTICS	
Dimensions	
Without hood	W 7.42 inches, H 11.33 inches, D 7.40 inches (W 189 mm, H 288 mm, D 188 mm)
With hood	W 7.88 inches, H 11.92 inches, D 7.50 inches (W 200.03 mm, H 303 mm, D 190 mm)
Weight (maximum including meter and hood)	
PM5110, PM5330 and PM5340	15.5 lbs. (7 kg)
PM5560	12.50 lbs. (5.67 kg)
Mounting	
PM5110, PM5330, PM5340 and PM5560	Vertical
COMMUNICATIONS	
RS-485 port Modbus RTU, Modbus ASCII (7 or 8 bit) JBUS	2-Wire, 9600, 19200 or 38400 baud, Parity - Even, Odd, None, 1 stop bit if parity Odd or Even, 2 stop bits if None; (Optional)
POWER	
Power specifications vary according to equipment configuration. See separate power specifications in Table 3.	
ENVIRONMENTAL CHARACTERISTICS	
Operating temperature	
PM5110, PM5330, PM5340, and PM5560	-25° C to +70° C (-13° F to +158° F) (Display responsiveness reduced at -25° C)
Storage temperature	-40° C to +85° C (-40° F to +185° F)
Humidity rating	5% to 95% RH non-condensing
Maximum dewpoint	37° C (99° F)
Pollution degree	2
Altitude	
PM5110, PM5330, and PM5340	2000 m CAT III / 3000 m CAT II
PM5560	2000 m CAT III / < 3000 m (9843 ft)
Ingress protection	
Type 1 Enclosure	Type 1 per UL 50
Type 3R Enclosure	Type 3R per UL 50

Table 2: Enclosure Technical Specifications *(continued)*

STANDARDS	
US and Canada	
Enclosure	UL 50; UL 508A
Meter Accuracy Rating	
Active Energy - PM5110, 5330 and 5340	Class 0.5S as per IEC 62053-22
Active Energy - PM5560	± 0.2% Class 0.2S as per IEC 62053-22

Table 3: Input Specifications

Meter	Control Power Specification
PM5110, PM5330, and PM5340	AC: 100-277 V L-N ± 10%; 45 to 65 Hz AC: 100-415 V L-L ± 10%; 45 to 65 Hz DC: 125 to 250 ± 20%
PM5560	AC: 100-480 V L-N ± 10%; 45 to 65 Hz AC: 100-480 V L-L ± 10%; 45 to 65 Hz DC: 125 to 250 ± 20%
Current Specification	
CT inputs	Nominal: 1 A or 5 A
Voltage Specification	
PM5110, PM5330 and PM5340	20 to 400 V L-N / 35 to 690 V L-L (Wye) or 35 to 600 V L-L (Delta)
PM5560	20 to 400 V L-N / 20 to 690 V L-L (Wye) or 20 to 600 V L-L (Delta)

Installation

⚠ DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E in the USA, CSA Z462 or applicable local standards.
- Turn off all power supplying this device and the equipment in which it is installed before working on the device or equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Do not exceed the device's ratings for maximum limits.
- Do not use this device for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Replace all devices, doors and covers before turning on power to this equipment.
- Do not alter factory-installed wiring inside the enclosure.
- Replace front bonding screw before applying power to the device.

Failure to follow these instructions will result in death or serious injury.

The 1-meter enclosure is available in two configurations (see Figure 1 and Figure 2). The Type 1 configuration is intended only for indoor use. It has a clear viewing window in the door, but does not have a rain hood. The Type 3R configuration is intended only for outdoor use. It has a rain hood, but does not have a viewing window in the door. Both enclosures feature a hasp to lock or seal the door.

Figure-1: Meter Enclosure - Type 1 Assembly

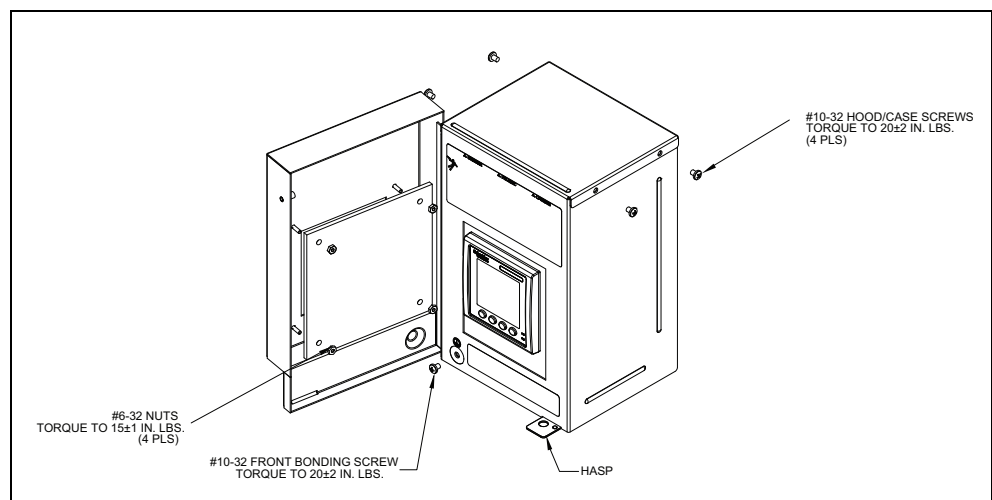


The meter, interior components, and wiring connections are covered by a protective, removable, exterior case. To access the interior, remove the case from the supporting base/backplate (see Figure 3). The meter is positioned on a supporting bracket attached to the base/backplate that swivels outward to allow access to the back of the meter and terminals for field wiring. The bracket has a small locking feature to hold the door open in the 90° position. The bracket can be swiveled out by lifting up slightly and out from the left side.

The following steps summarize the installation:

1. Unpack and verify the box contents.
2. Remove the front bonding screw.
3. Lift the case off.
4. Remove the appropriate knock outs.
5. Mount the enclosure.
6. Make the voltage, current, and communications connections.
7. Replace the cover.

Figure–2: Meter Enclosure - Type 3R Assembly

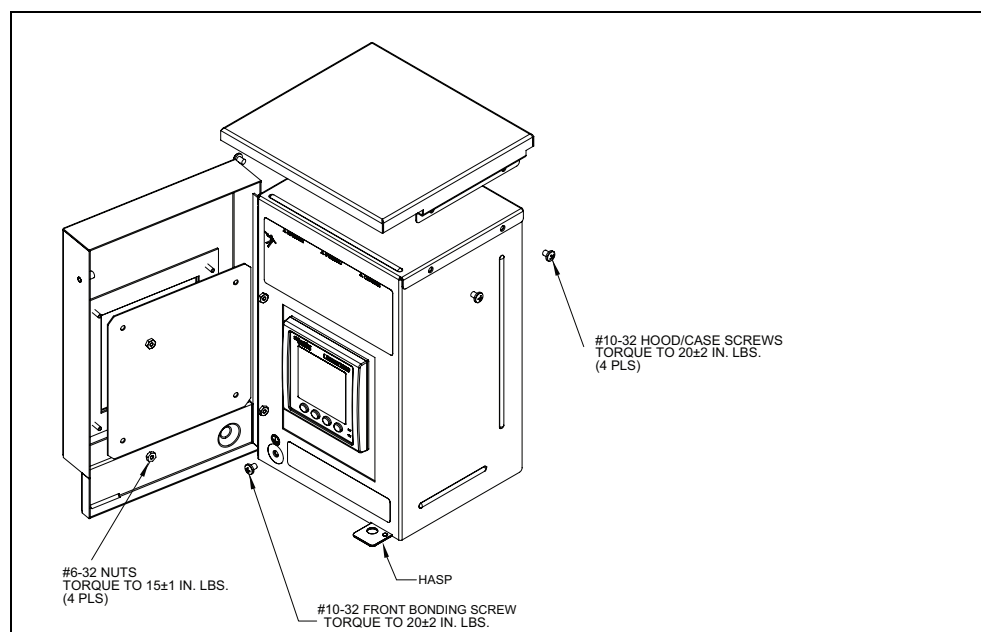


To remove the case, complete these steps:

1. Open the door.
2. Remove the front bonding screw.
3. Lift the case up and out to slide it off the base/backplate.
4. Swing the supporting bracket and meter around to the side.

To re-install the case, reverse the steps.

Figure-3: Case Removal

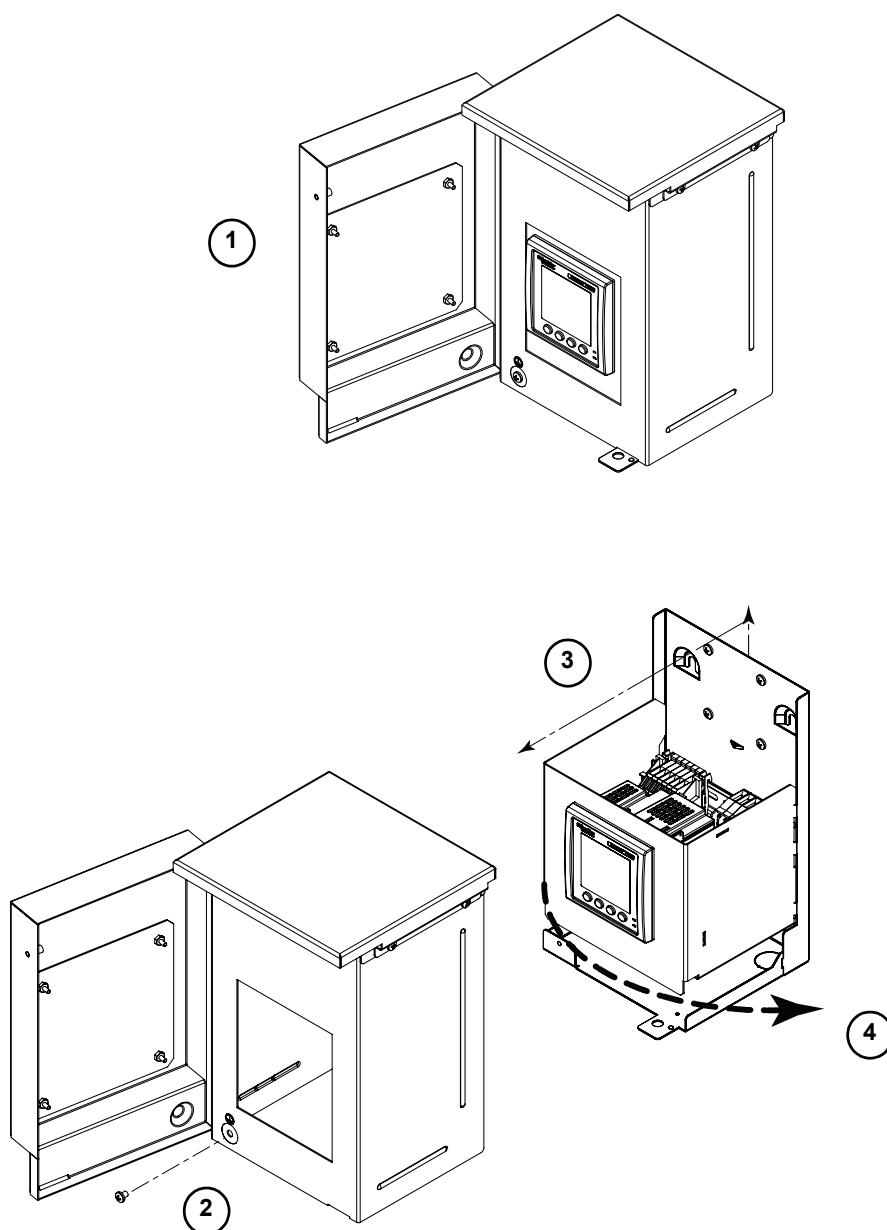


Mounting the Enclosure

Mount the metering enclosure next to the distribution panelboard that serves the load to be monitored.

The recommended clearances for the installed enclosure are shown in the Figure 4 below.

Figure-4: Recommended Enclosure Clearances

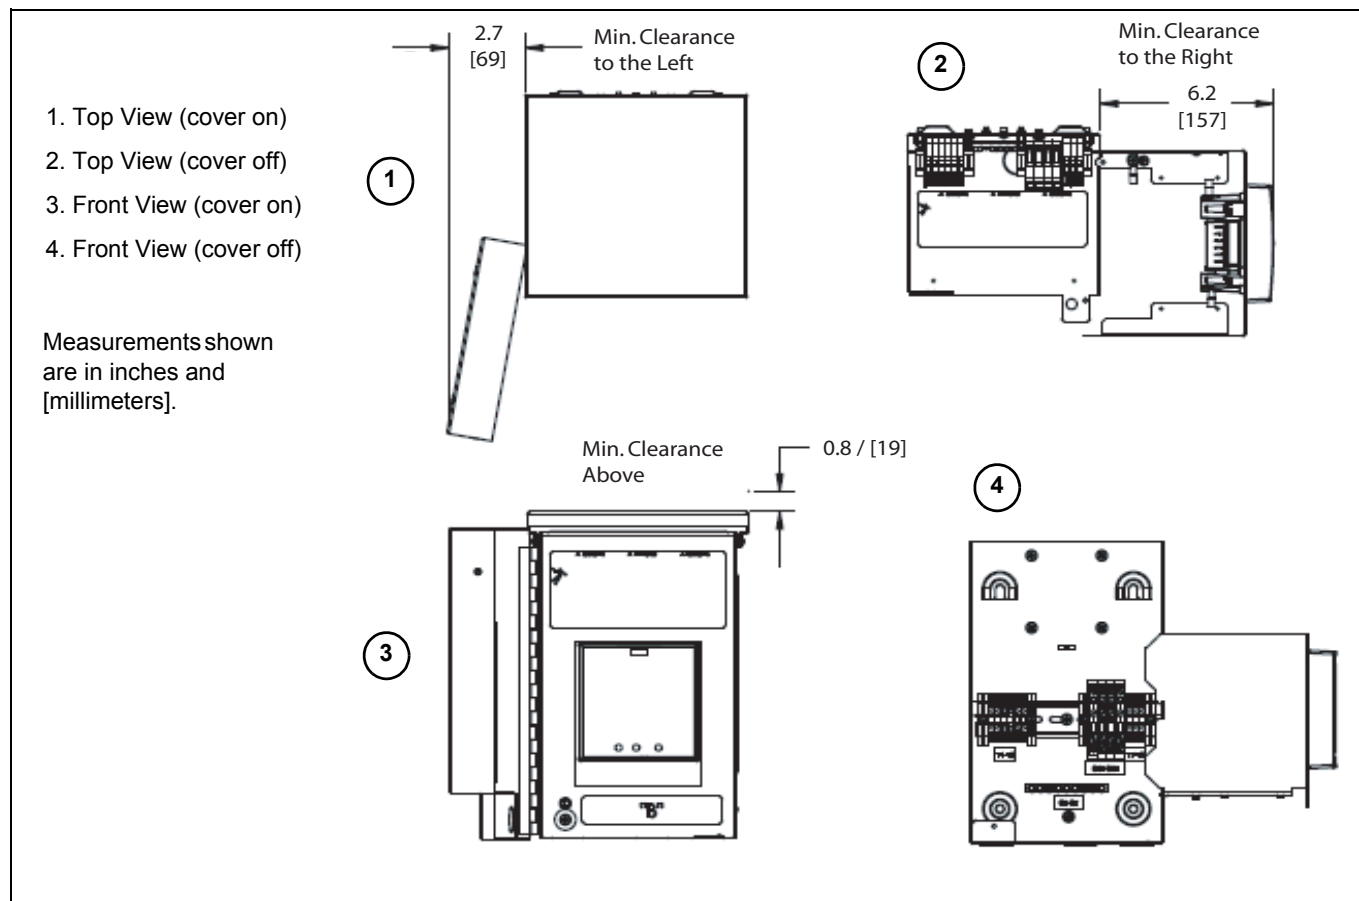

Drilling will produce metal shavings that may fall into vents, reduce spacings, and possibly create electrical short circuits.

DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Do not drill into the enclosure.

Failure to follow these instructions will result in death or serious injury.

Four (4) pre-drilled 0.32-inch/8.1-mm holes are provided on the backplane of the enclosure for mounting. Use #10 or up to 5/16-inch screws, with washers as needed, to attach the enclosure to the wall. Always mount with four (4) screws. Figure 5 shows the pre-drilled mounting holes and knockout points for the electrical conduit.

Figure—5: Mounting Holes and Conduit Knockouts

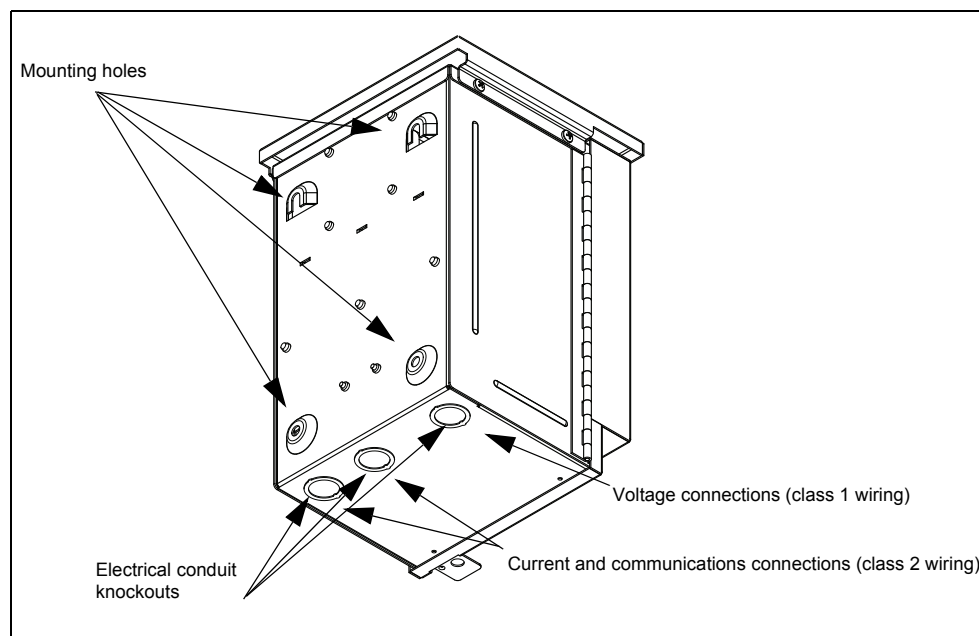

Mounting Dimensions

Figure 6 shows dimensions for the enclosure without a hood.

Figure 7 shows dimensions for the enclosure with a hood.

Figure-6: Dimensions for Type 1 Enclosure


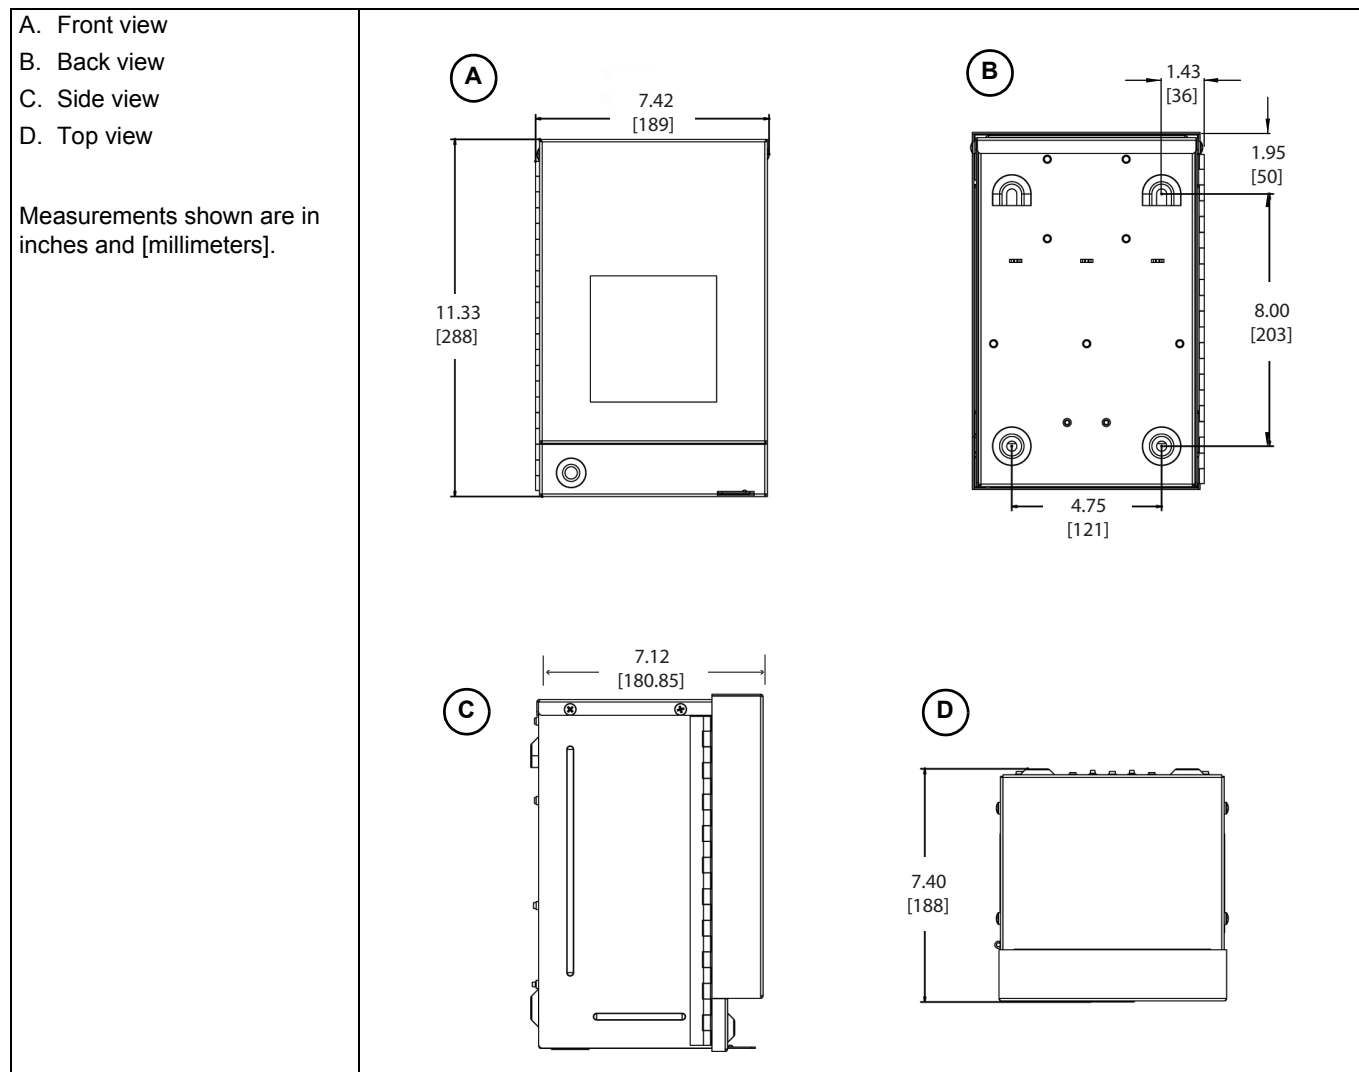


Figure-7: Dimensions for Type 3R Enclosure

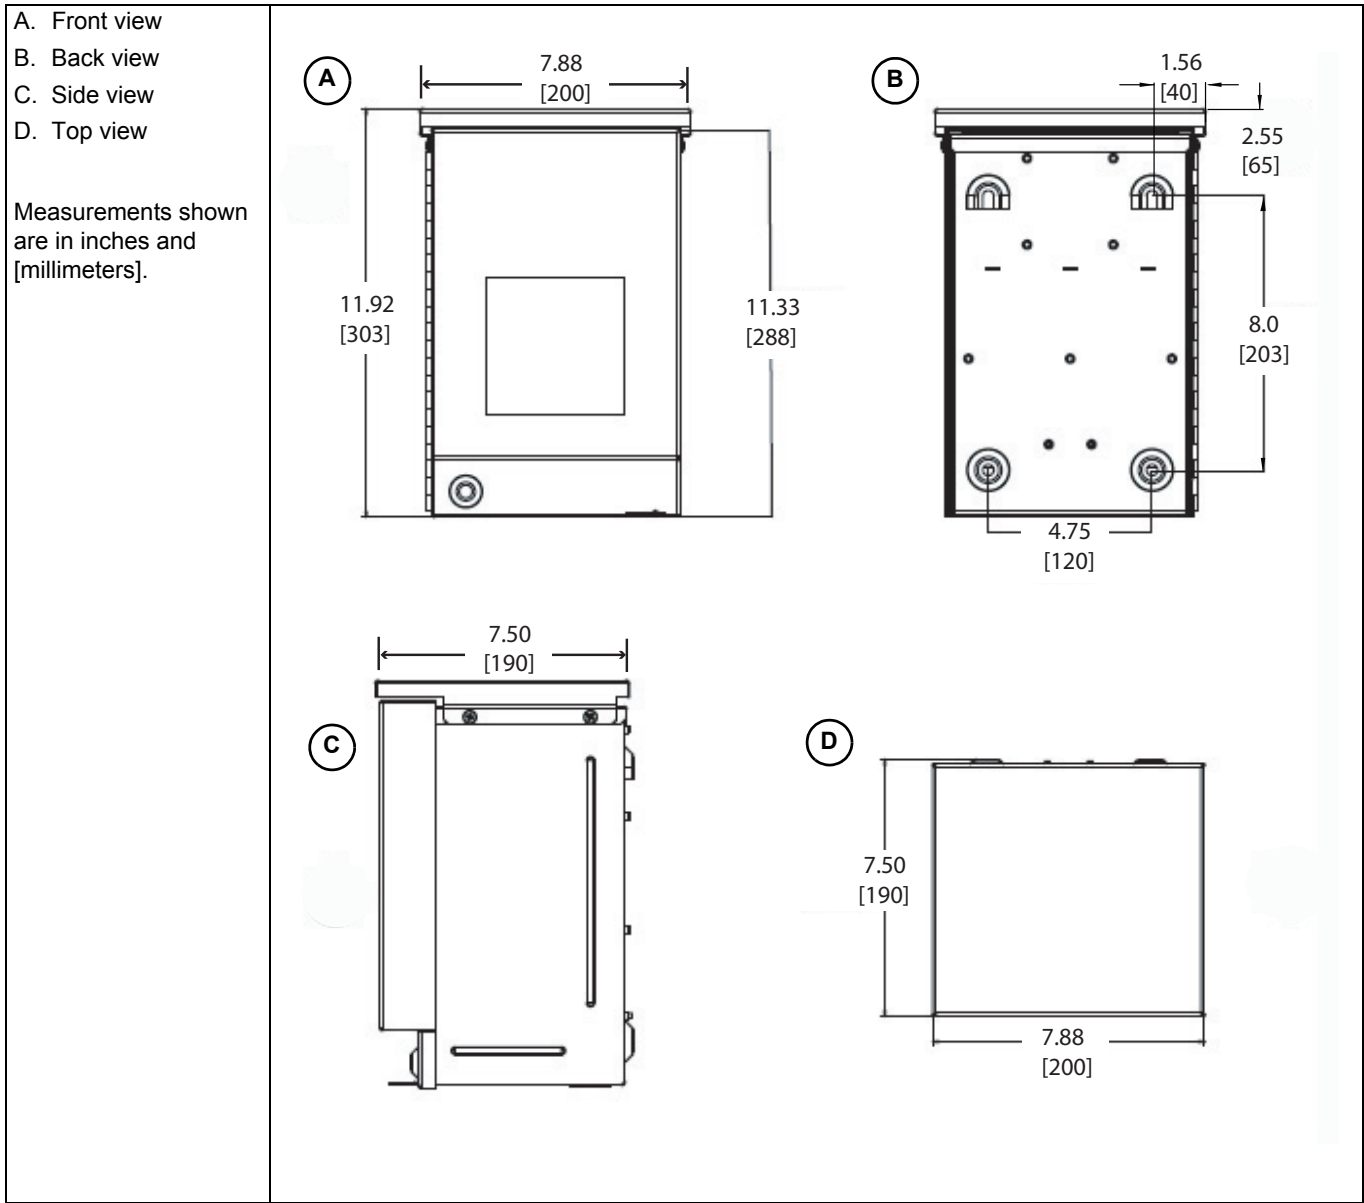

Wiring Connections

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E in the USA, CSA Z462 or applicable local standards.
- Turn off all power supplying this device and the equipment in which it is installed before working on the device or equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Do not exceed the device's ratings for maximum limits.
- Do not use this device for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Never short the secondary of a voltage transformer (VT).
- Never open circuit a current transformer (CT).
- Always use grounded external CTs for current inputs.
- Replace all devices, doors and covers before turning on power to this equipment.
- Do not alter factory-installed wiring inside the enclosure.
- Replace front bonding screw before applying power to the device.
- Provide overcurrent protection external to the enclosure on control power and voltage measurement inputs.
- Before energizing enclosure, all unused spaces must be filled with blank covers.
- Do not loosen slider screws.

Failure to follow these instructions will result in death or serious injury.

Conduit knockouts are provided on the enclosure (see Figure 5 on page 12).

To comply with national and local standards, Class 1 (voltage input) wiring must be kept separate from Class 2 (current transformer and communications) wiring. Refer to NEC code and local codes before installing.

NOTE: Conduit hubs shall be rated to the same weather rating as the enclosure and must comply with the standard for Conduit, Tubing and Cable Fittings, UL 514B.

NOTE: Voltage inputs shall be connected to the load side of a Class CC, G, J, RK1, RK5, L or T 7A branch circuit fuse or inverse-time/instantaneous-trip circuit breaker. Use copper conductors only.

Table 4: Stripped Wire Terminal Specifications

Connection	Stripped Wire Length
Voltage	5/16 in (7.94 mm)
Ground	3/8 in (9.53 mm)
Comms	5/16 in (7.94 mm)
CT Shorting Block	3/8 in (9.53 mm)

Circuit Protection


Control power and voltage inputs require overcurrent protection external to the enclosure. The fuses/circuit breakers must be rated for the installation voltage and sized for the available

fault current. Voltage inputs must be connected to the load side of a Class CC, G, J, RK1, RK5, L or T 7A branch circuit fuse or inverse-time/instantaneous-trip circuit breaker. Use copper conductors only.

Shorting Block Use

See Figure 8 and follow the instructions below for using the shorting block.

Figure–8: Shorting Block Use

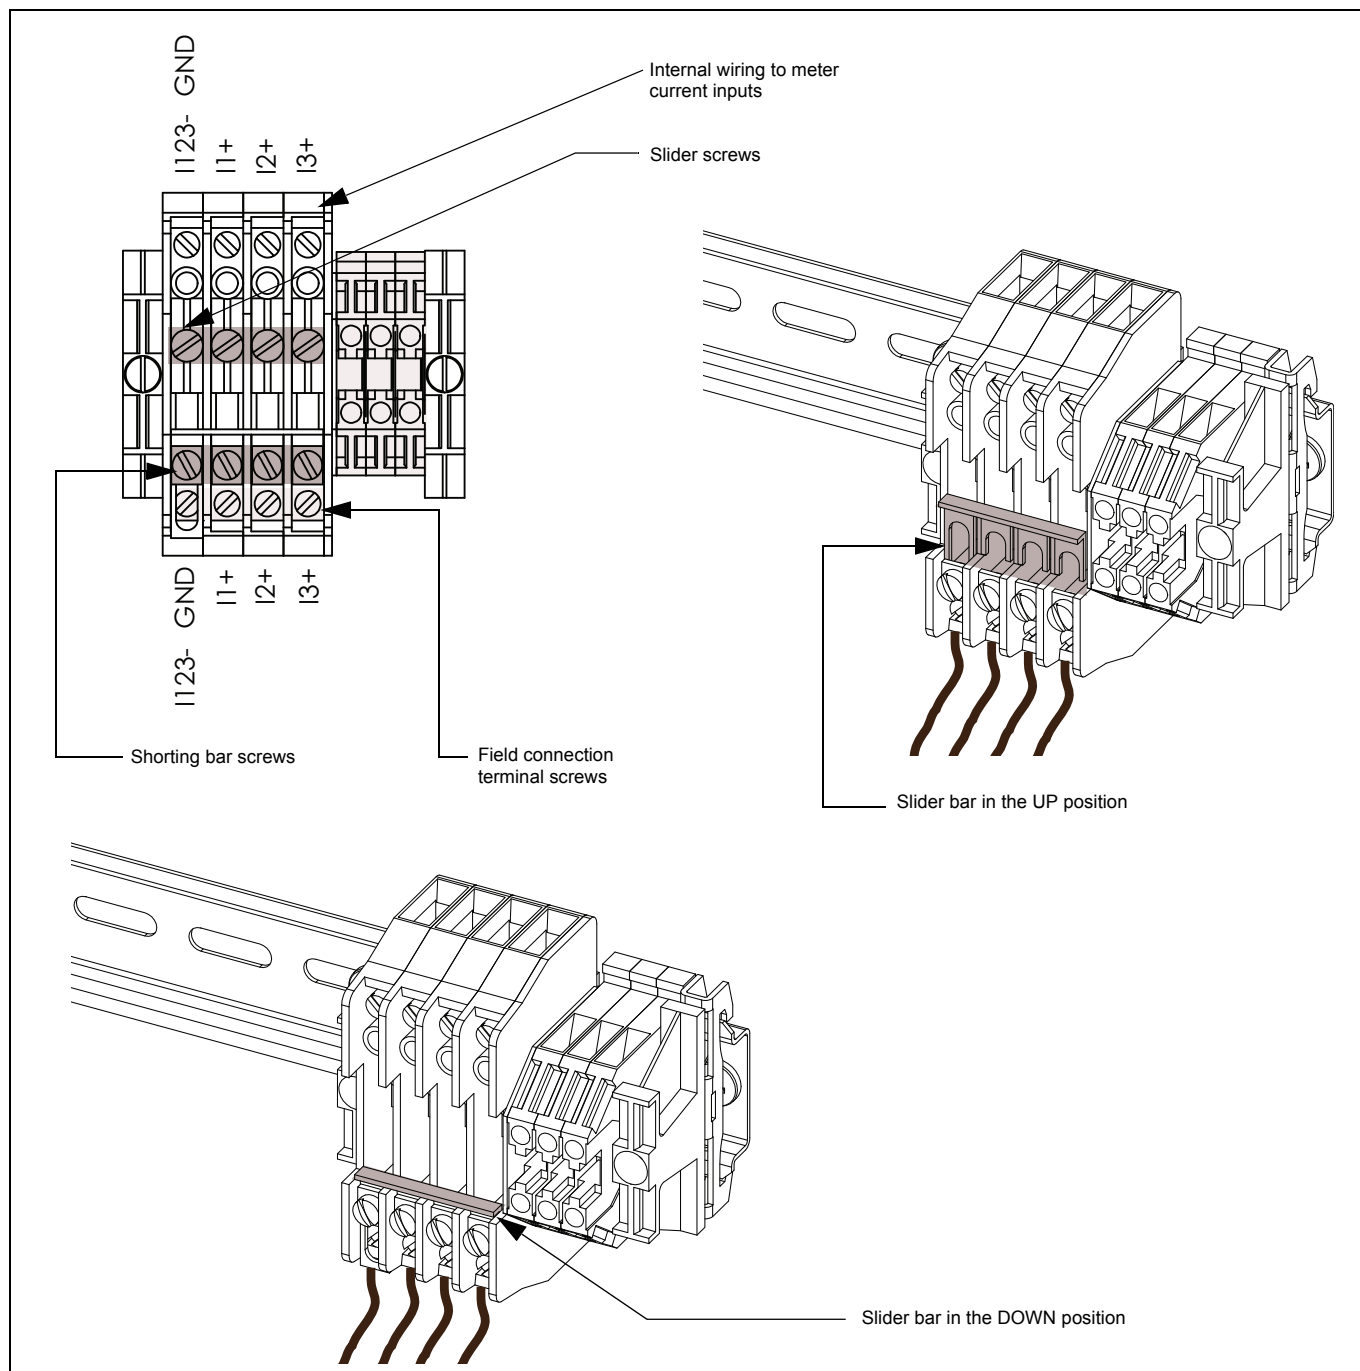

Removing Short from Current Inputs

To measure the energy from the circuit, you must remove the default short from the current inputs. To remove the short from the current inputs, complete these steps:

1. Turn OFF and tag out the main external breaker supplying this equipment before working on or inside it.
2. Use a properly rated voltage sensing device to confirm that all power is off.
3. Ensure field wiring leads from current transformers are securely connected to the shorting block.
4. Ensure wiring within the enclosure is securely connected to a metering device.
5. Loosen all four (4) shorting bar screws.
6. Slide the shorting bar away from the field connection screws or toward the top of the enclosure.
7. Tighten the left-most (GND) shorting bar screw.
8. Remove the tag from the main external breaker.
9. Energize the system.

Shorting the Current Inputs

By default, the current inputs are shorted when you receive the enclosure. To short the current inputs, complete these steps:

1. Turn OFF and tag out the main external breaker supplying this equipment before working on or inside this equipment.
2. Use a properly rated voltage sensing device to confirm that all power is off.
3. Loosen the four (4) shorting bar screws on the shorting block.
4. Slide the shorting bar toward the field connection screws or the bottom of the enclosure.
5. Tighten all four (4) shorting bar screws 6 ± 1 lb-in ($0.678 \text{ N}\cdot\text{m} \pm 0.1$).

Current Transformers


Field-installed current transformer (CT) leads require stripped wire terminal connections. Refer to Table 4 on page 15 for stripped wire specifications. The CT shorting block is shipped in the shorted position by default from the factory.

NOTE: Schneider Electric recommends metering class current transformers with 5 A secondary.

Voltage Input Connectors

Refer to Figure 9 for voltage input connections.

 
Figure–9: Voltage Input Connectors

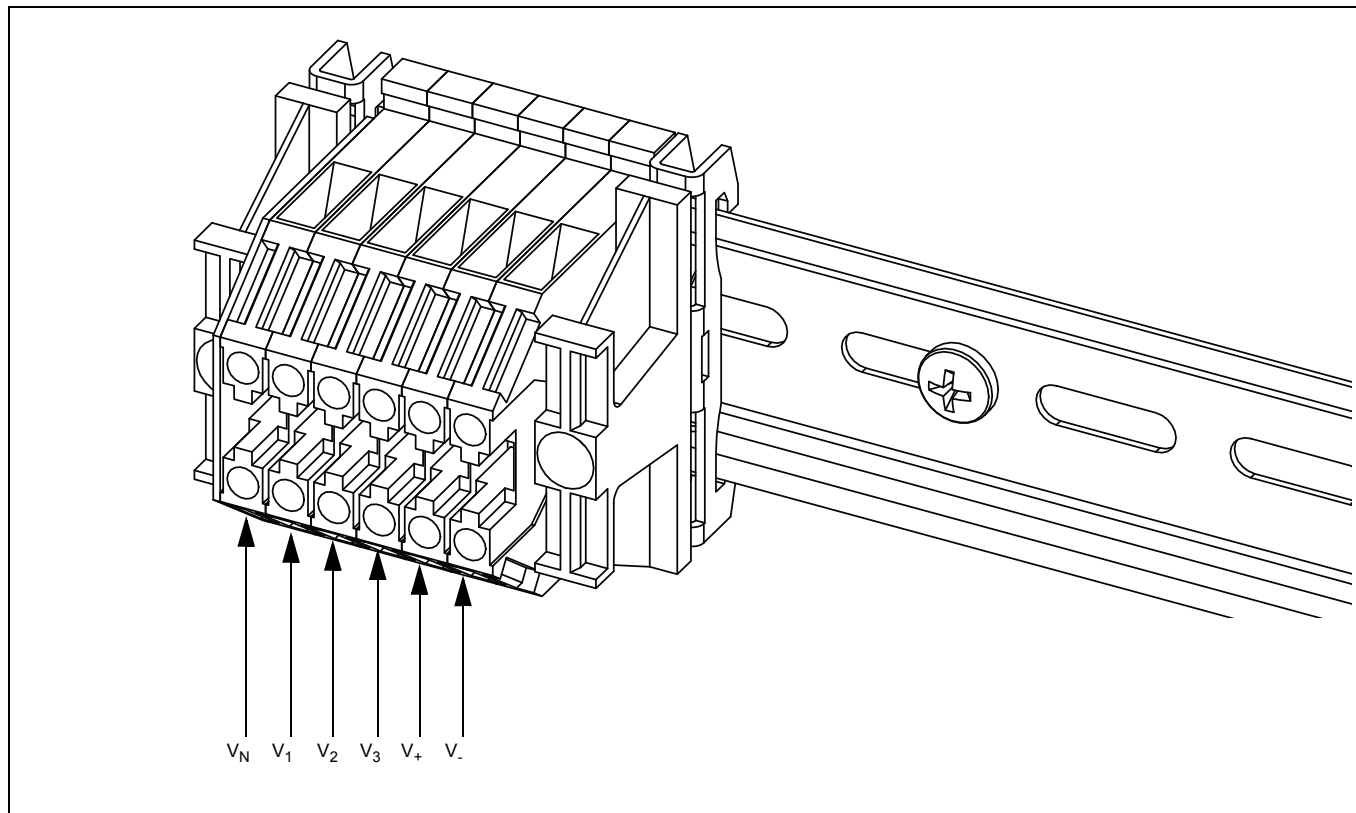

Wiring Diagrams




The wiring diagrams in this guide use the symbols shown in Table 5.

Table 5: Wiring Diagram Symbols

Symbol	Description
	Voltage disconnect switch
	Fuse
	Earth ground
	Protective conductor terminal symbol
	Current transformer
	Shorting block
	Potential transformer
	US equivalent: 
NOTE: The disconnect circuit breaker must be placed within reach of the power meter and labeled: Disconnect Circuit Breaker for Power Meter.	




Single-Phase Tenants: Single-Phase Source

Refer to the applicable meter's user manual for details on basic setup configuration.

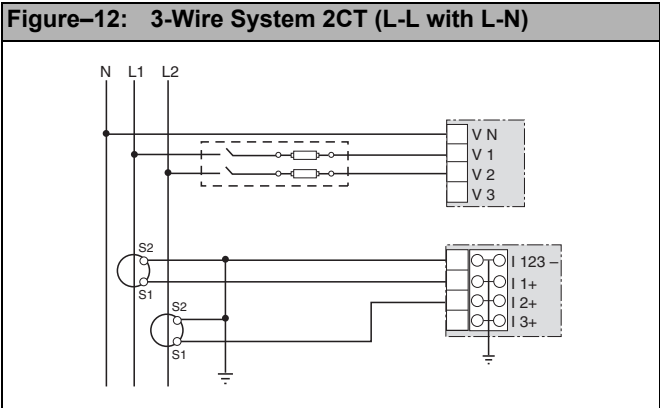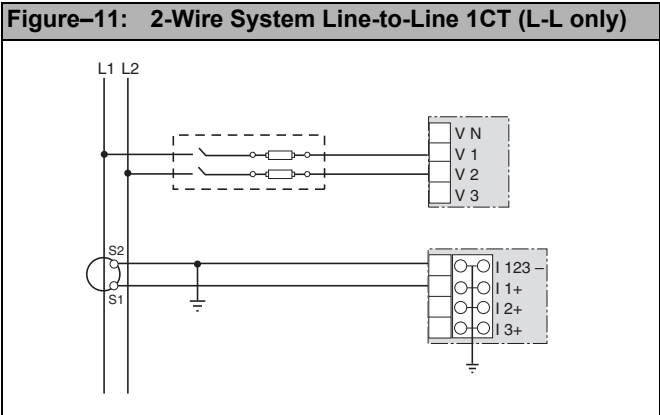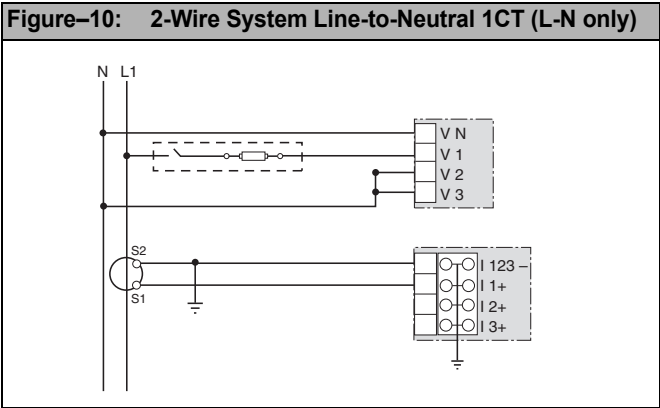




Single-Phase Tenants: Three-Phase Source

Refer to the applicable meter's user manual for details on basic setup configuration.

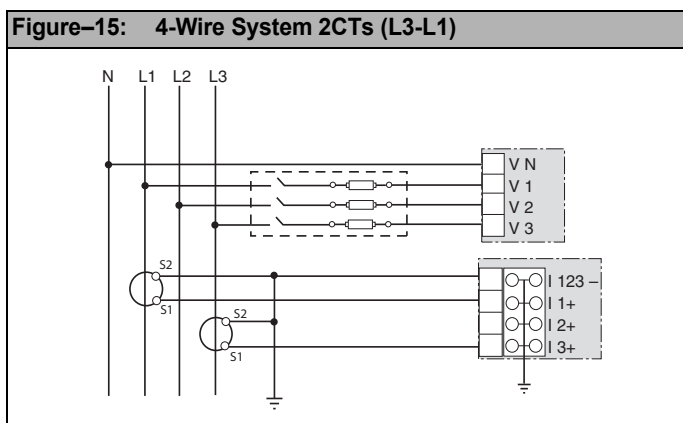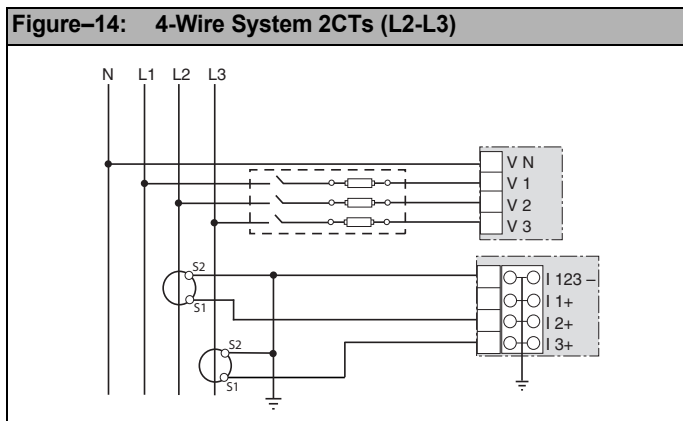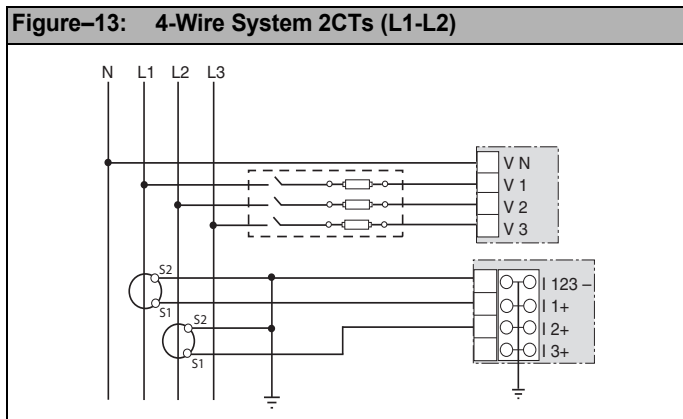


Three-Phase Tenants

Refer to the applicable meter's user manual for details on basic setup configuration.

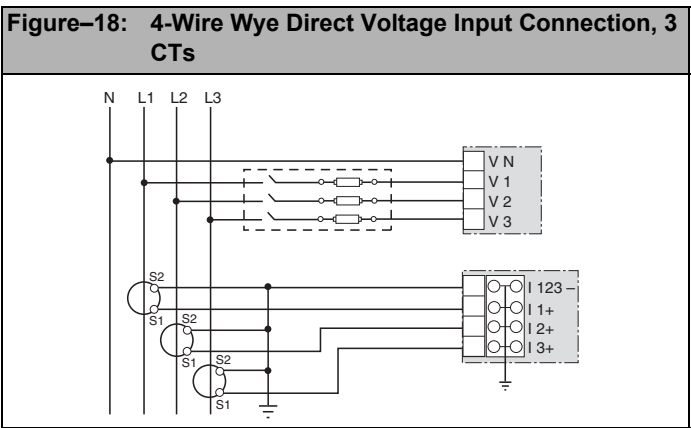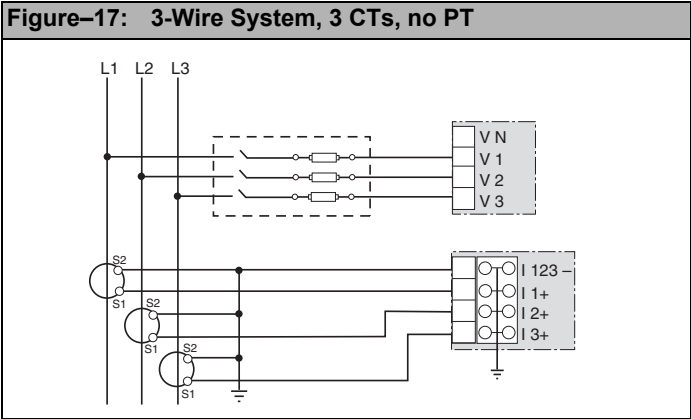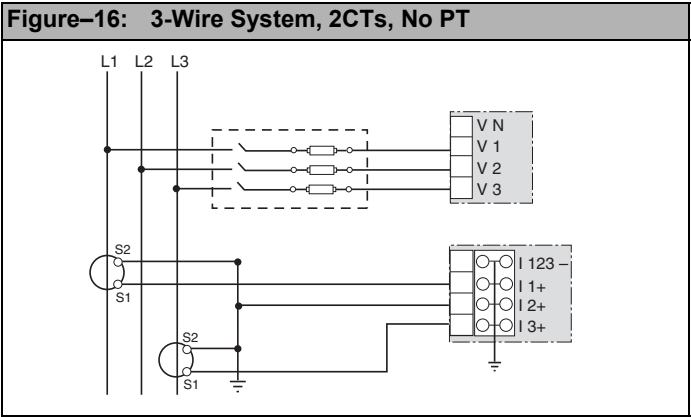

Control Power


Using jumpers, control power can be supplied from the phase conductors. Control power can also be supplied by a separate feed.

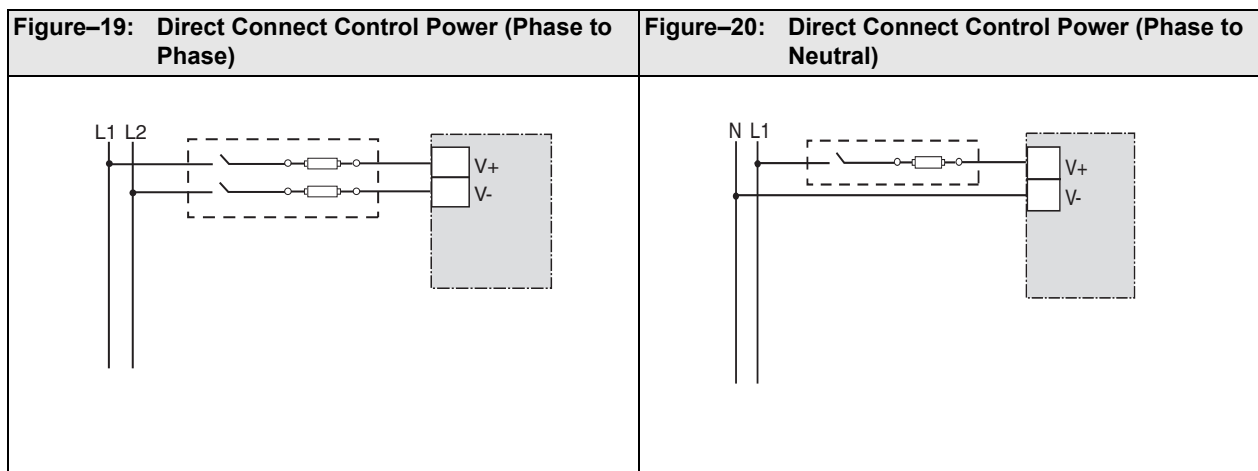

Communications

The meter uses common daisy-chain wiring and communicates using Modbus protocol over RS-485. Figure 21 shows the communications connections.

Figure–21: RS-485 Serial Modbus Connection

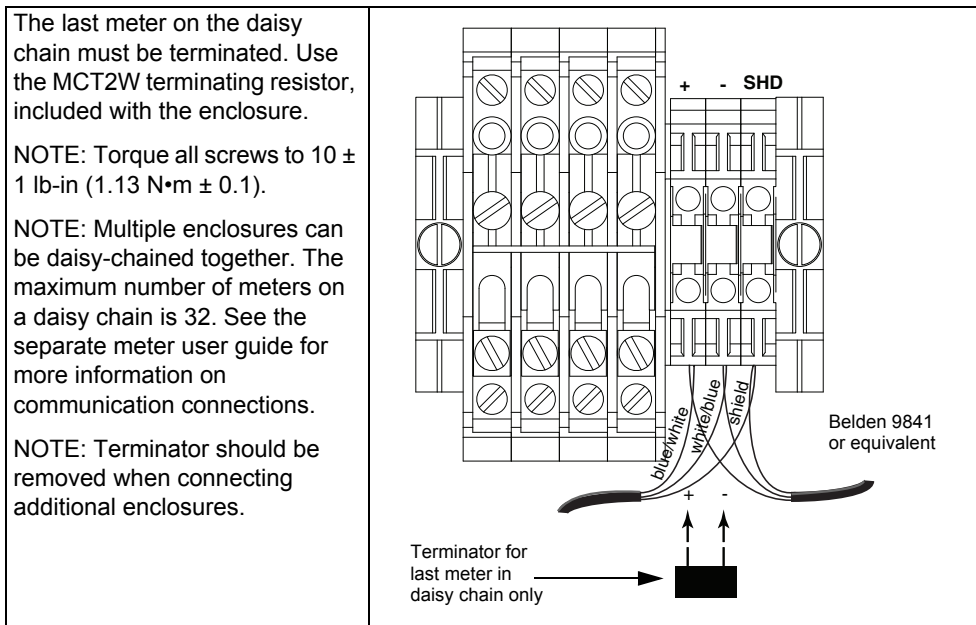

Initializing the Meters

The meter must be initialized before placing into service. For instructions on initializing, see the meter user guide shipped with the cabinet (also available at www.schneider-electric.com).

How to Upgrade Firmware

You can find meter firmware under Documents & Downloads on your meter's product page at www.schneider-electric.com.

Removing a Meter

If you need to remove the meter from the enclosure, a cover plate must be attached unless the meter is intermediately replaced with another. See "Cover Plates" on page 25.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E in the USA, CSA Z462 or applicable local standards.
- Turn off all power supplying this device and the equipment in which it is installed before working on the device or equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Do not exceed the device's ratings for maximum limits.
- Do not use this device for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Never short the secondary of a voltage transformer (VT).
- Never open circuit a current transformer (CT).
- Always use grounded external CTs for current inputs.
- Replace all devices, doors and covers before turning on power to this equipment.
- Do not alter factory-installed wiring inside the enclosure.
- Replace front bonding screw before applying power to the device.
- Provide overcurrent protection external to the enclosure on control power and voltage measurement inputs.
- Before energizing enclosure, all unused spaces must be filled with blank covers.
- Do not loosen slider screws.
- Do not use the enclosure if the wiring harness is damaged. Contact Schneider Electric Technical Support for assistance.

Failure to follow these instructions will result in death or serious injury.

NOTE: Do not remove the short on the current transformer shorting block while the meter is removed from the enclosure.

To remove the meter, complete these steps:


1. De-energize the external breaker supplying this equipment and follow the lock-out, tag-out procedure before working on or inside it. Use a properly rated voltage sensing device to confirm that all power is off.
2. Open the user-installed disconnect switch located behind the meter.
3. Remove the front case screw and open the enclosure.
4. Short CT shorting block.
5. Remove the meter.
6. Insulate any loose wires.
7. Close the disconnect switch.

8. Remove the tag from the main external breaker.
9. Energize the system.

Cover Plates

Cover plates are used to cover openings when no meter is present. Any time a meter is removed from the enclosure, a cover plate must be attached unless another meter is inserted into the slot. Figure 22 shows the cover plate assembly.

Figure–22: Cover Plate

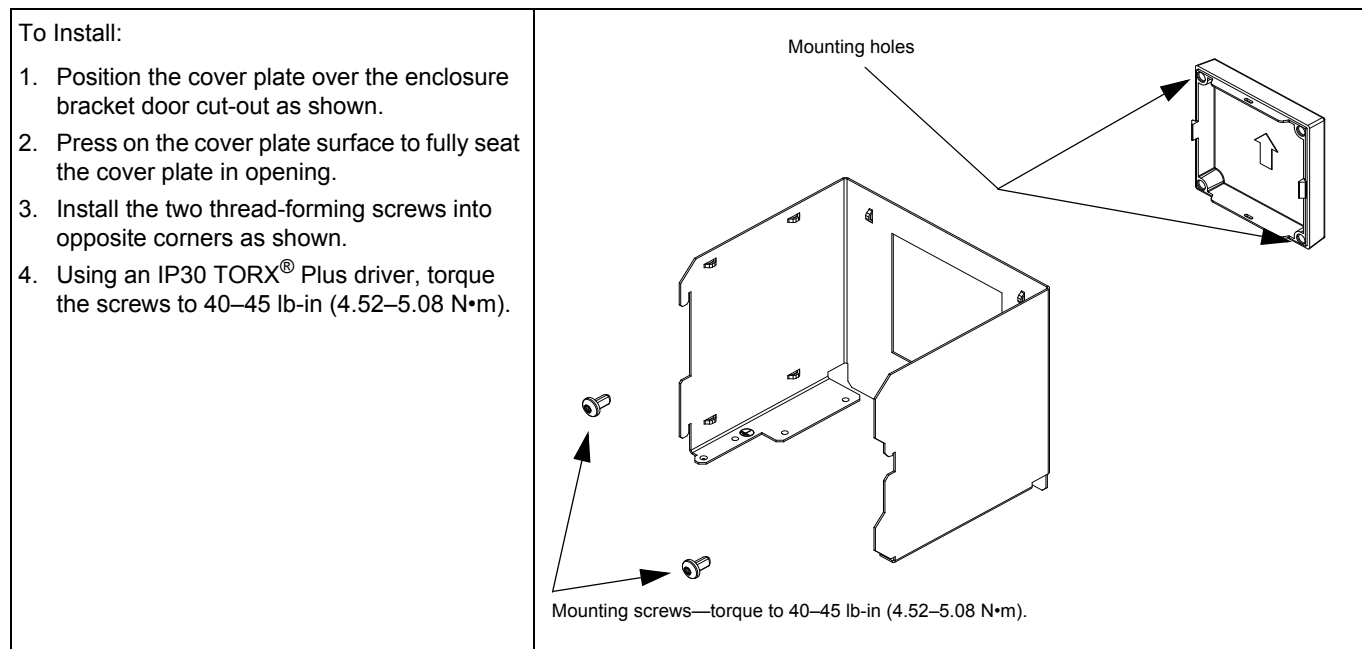

Schneider Electric

35, rue Joseph Monier
CS 30323
F - 92506 Rueil Malmaison Cedex
www.schneider-electric.com

© 2014 Schneider Electric. All Rights Reserved.
63230-508-211A1 07/2014

PowerLogic is a registered trademark of Schneider Electric in France, the USA and other countries. Other trademarks used are the property of their respective owners.