

The following is a complete list of all **events** created by Powerchute that will be logged in the Windows **Event Viewer**

Open Windows Event Viewer and go to Windows Logs – Application. Filter on events with source APCPBEAgent to view PowerChute events.

Event ID	Name	Level
1000	Monitoring Stopped	Information
1001	Monitoring Started	Information
1002	Communications Established	Information
1003	Utility Power Restored	Information
1004	UPS Self-Test Passed	Information
1005	Administrative Shutdown Scheduled	Information
1006	Shutdown Cancelled	Information
1007	UPS Self-Test Initiated	Information
1009	UPS Battery Replaced	Information
1010	UPS Battery Charge In Range	Information
1013	Overload Condition Solved	Information
1014	Runtime Calibration Started	Information
1015	Runtime Calibration Finished	Information
1016	System Shutdown Starting	Information
1017	UPS Returned From Bypass	Information
1020	Battery Communication Established	Information
1025	Shutdown In Progress	Information
1026	Administrative Shutdown Pending	Information
1027	Administrative Shutdown Cancelled	Information
1033	Battery Added	Information
1034	Battery Removed	Information
1040	Bypass Contactor OK	Information
1041	Bypass Relay Normal	Information
1042	Bypass User Initiated	Information
1050	Battery Disconnected	Warning
1051	Battery Reconnected	Information
1052	Battery Installed	Information
1053	Sufficient Runtime Available	Information
1060	AVR Trim No longer Active	Information
1061	AVR Boost No Longer Active	Information
1102	UPS Internal Temperature In Bounds	Information
1200	Base Module Fan Normal	Information
1201	System Level Fan Normal	Information

1202	Site Wiring Normal	Information
1203	Battery Charger Normal	Information
1204	Main Relay Normal	Information
1205	Inverter Normal	Information
1206	Bypass Power Supply Normal	Information
1207	Output Load In Range	Information
1208	UPS Internal Temperature Warning	Warning
1350	Bypass Ended	Information
1366	Bypass Enabled	Information
2000	UPS On Battery	Warning
2002	AVR Boost Active	Warning
2003	Low Battery Condition	Warning
2004	Runtime Calibration Aborted	Warning
2007	AVR Trim Active	Warning
2030	Smart Cell Signal Returned	Warning
2037	Bypass Contactor Failed	Warning
2040	Bypass Relay Malfunction	Warning
2041	Bypass Contactor Stuck in Bypass	Warning
2042	Bypass Contactor Stuck in On Position	Warning
2043	Bypass Maintenance	Warning
2044	Bypass Internal Fault	Warning
2050	Invalid Shutdown Delay	Warning
2060	Time On Battery Threshold Exceeded	Warning
2206	Account Locked Out	Warning
2207	Account No Longer Locked Out	Information
2208	Invalid User Login	Warning
2209	User Logged Off	Information
2210	User Logged On	Information
2211	Audible Alarm Enabled	Information
2212	Audible Alarm Disabled	Information
3000	Lost Communication With UPS	Error
3001	UPS Output Overload	Error
3002	UPS Self-Test Failed	Error
3003	UPS Battery Is Discharged	Error
3004	Comm Lost While On Battery	Error
3005	Communication Not Established	Error
3006	Battery Communication Lost	Error
3010	Check Smart Cell Signal	Error

3014	Base Module Fan Fault	Error
3015	Bypass Power Supply Failure	Error
3016	Battery Needs Replacing	Error
3017	System Level Fan Fault	Error
3018	Main Relay Malfunction	Error
3020	Site Wiring Fault	Error
3021	Battery Charger Failure	Error
3022	Inverter Fault	Error
3030	Insufficient Runtime Available	Error
3031	Output Load threshold Exceeded	Error
3107	Maximum Internal Temperature Exceeded	Error
3123	Frequent Overvoltage	Warning
3124	Frequent Undervoltage	Warning
3125	Extended Overvoltage	Warning
3126	Extended Undervoltage	Warning