


WATSN系列 PC级转换开关电器100壳体

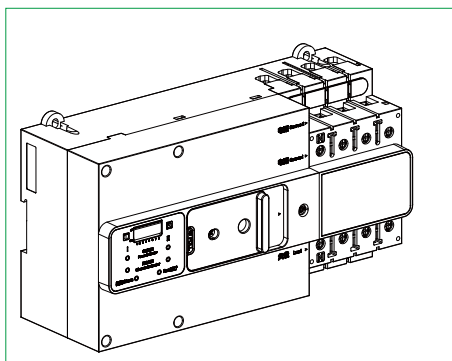

Schneider
Electric
施耐德电气

施耐德万高（天津）电气设备有限公司
Schneider Wingoal (Tianjin) Electric Equipment Co., Ltd.

天津滨海高新技术产业开发区
华苑产业区（环外）海泰创新六路11号
No. 11, Hi-Tech Chuang Xin No. 6 Rd Hua Yuan Industriel
Development Area (Outside Outer Ring)
Binhai New Area, Tianjin P.R.C.
Post Code / 邮编: 300384
Tel / 电话: (022) 2374 8888
Web / 网址: www.se.com.cn
Customer care center / 客户关爱中心热线: 400 810 1315




© 2018 Schneider Electric.
All rights reserved.


GDE76478
03/2020



Installation and Fixing 安装固定

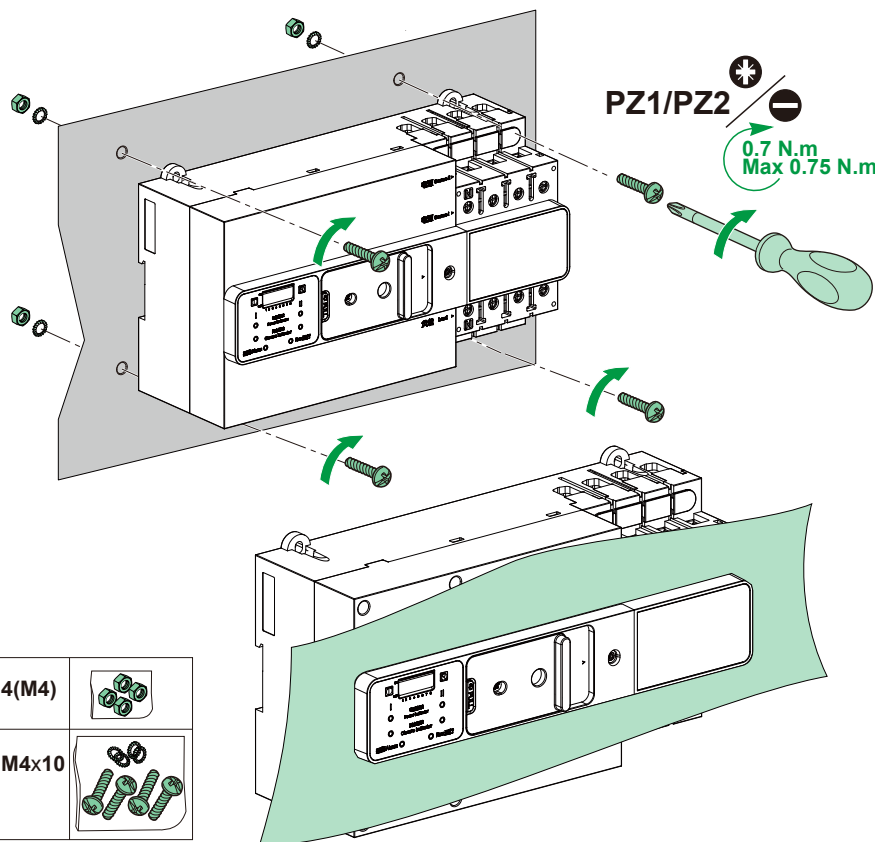

mm

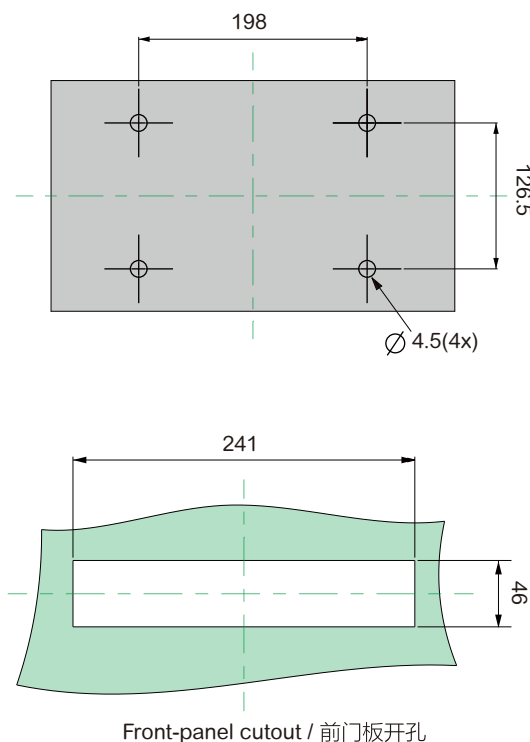

⚠️ ⚠️ DANGER / 危险

- Electrical equipment should be installed, operated, serviced, and maintained on qualified personnel.
- No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must only be

installed and serviced by qualified electrical personnel.

- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

- 电气设备的安装、操作、维修和维护工作仅限于合格的人员执行。
- Schneider Electric 不承担由于使用本资料所引起的任何后果。


电击、爆炸或电弧闪光危险

- 采用适当的个人防护设备（PPE）并遵循电气作业安全守则。
- 只有具备相应资质的电气人员才能安装和维修该设备。

修该设备。

- 在该设备表面或内部工作之前，请关闭设备的全部电源。将开关锁定在隔离位置。
- 确保使用合适的额定电压传感器确认电源已关闭。
- 更换所有设备、门和盖，然后再打开该设备的电源。


不遵循上述说明将导致人员伤亡。

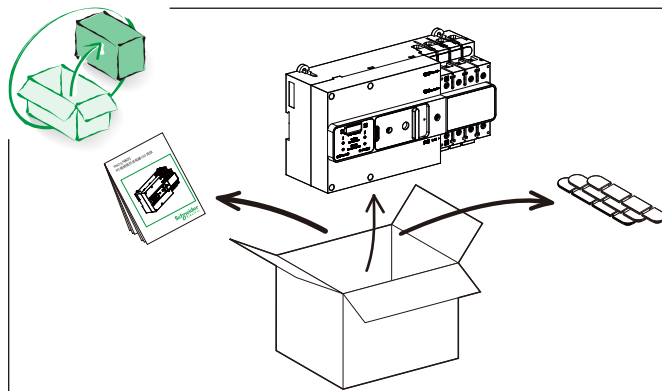




Compression Lugs Connections 接线片连接

 mm








1.5-35mm²




1-35mm²

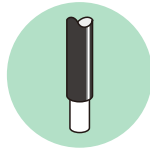


mm

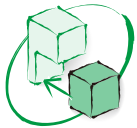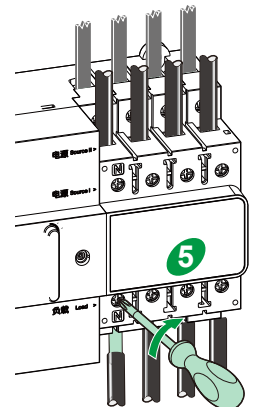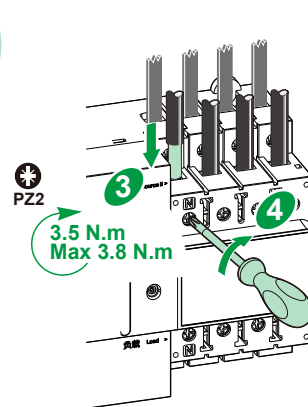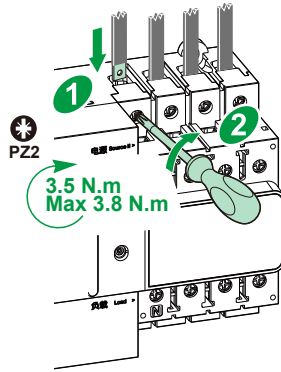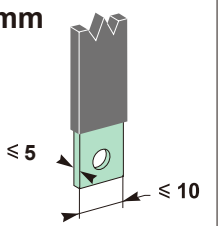






OF Module Installation and Wiring OF模块安装和接线

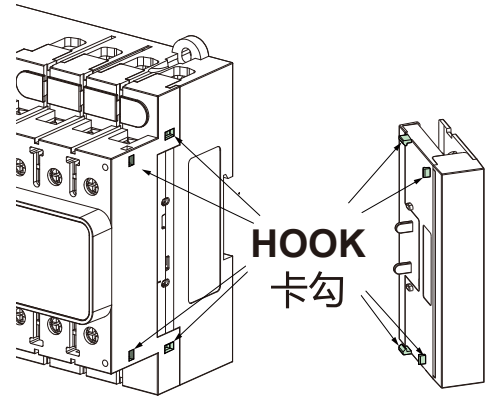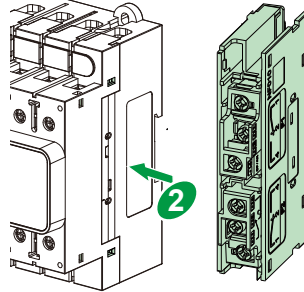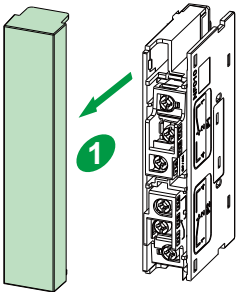


mm

 

0.75-2.5mm²

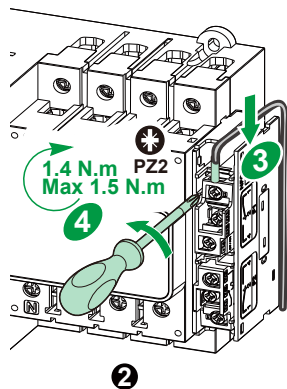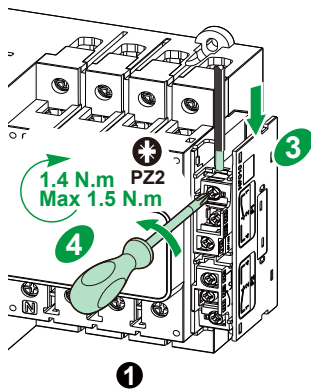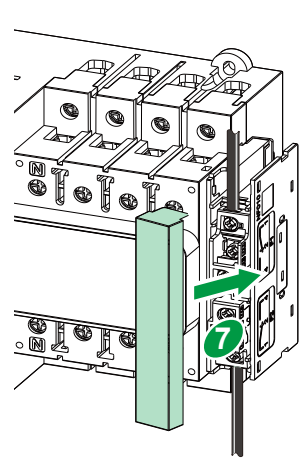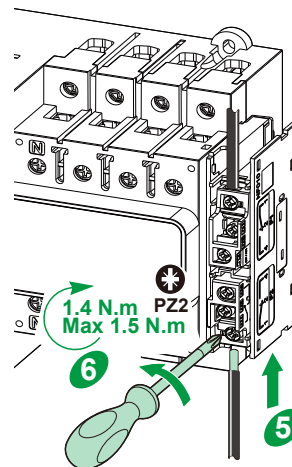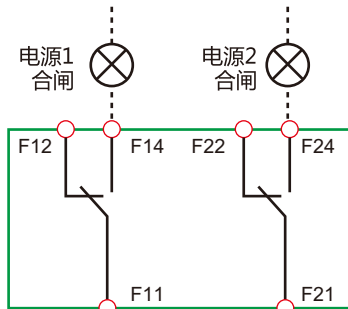




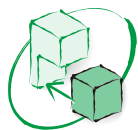


Extension Module Installation 扩展模块安装说明



Warning
警告

Power must be turned off before plugging or unplugging the extension module. Failure to follow these instructions can result in death or serious injury.
插拔扩展模块前必须关闭电源，不遵循上述说明可能导致人员伤亡。

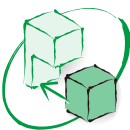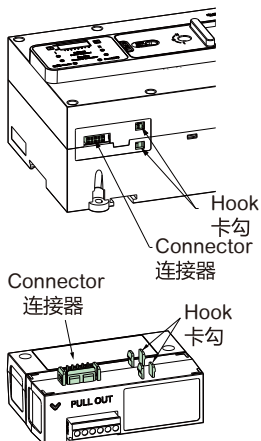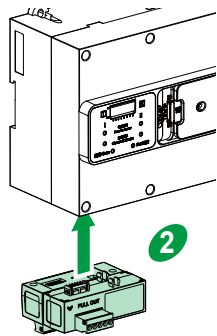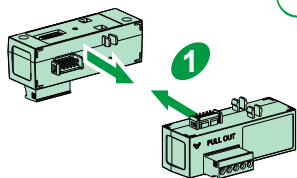


RTSE Module Installation And Connections RTSE模块安装及接线




Caution
注意

R1, R2, R3 can only have one of them connected to R0 at the same time. Please confirm the RTSE module has been installed before the product is powered on. Failure to follow these instructions will result in product failure or damage.

R1, R2, R3同时只能有一个和R0 接通，产品上电前请先确认遥控模块已安装。不遵循上述说明将导致产品失效或损坏

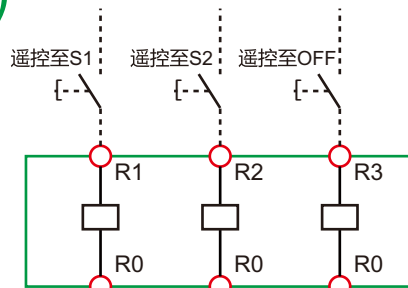

RTSE Remote control signal input time should be $\geq 100\text{ms}$
遥控型产品遥控信号输入时间需要 $\geq 100\text{ms}$

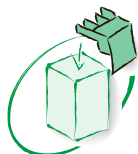

Terminal Cover and Terminal Shield Installation 端子盖和端子罩安装说明





Warning
警告

Please install the terminal cover correctly after wiring to ensure the insulation distance.

Failure to follow these instructions can result in death or serious injury.



完成接线后请正确安装端子盖以保证绝缘距离。
不遵循上述说明可能导致人员伤亡。

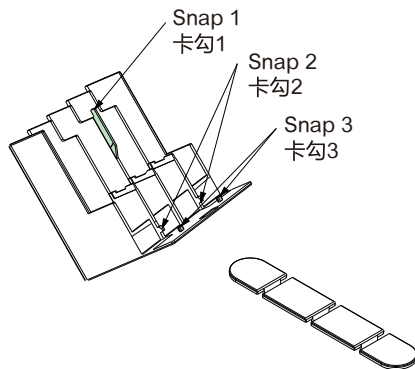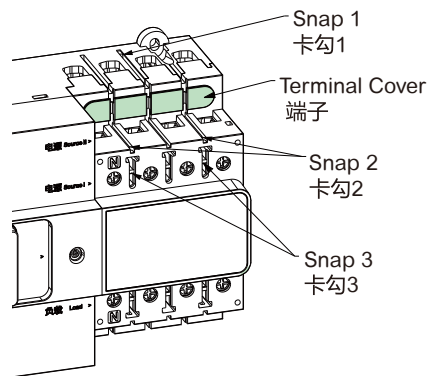



Terminal Shield 端子罩 (2×)

Terminal Cover 端子盖 (1×)

①

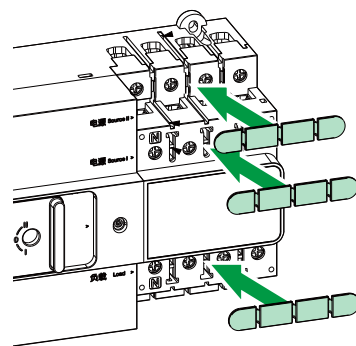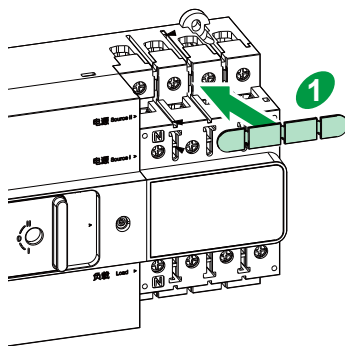


②

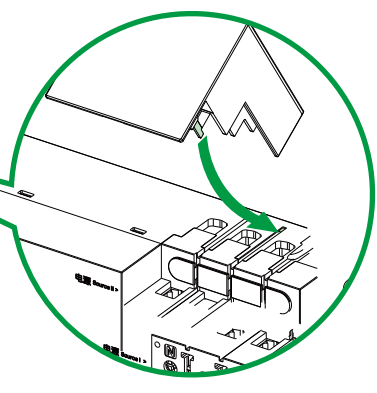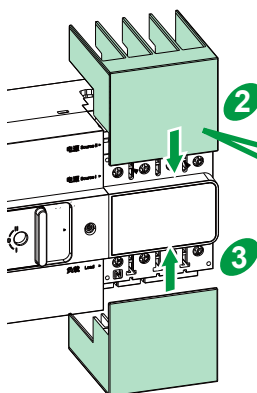




Status-Auto Manual Lock 状态—自动 手动 挂锁


Auto 自动

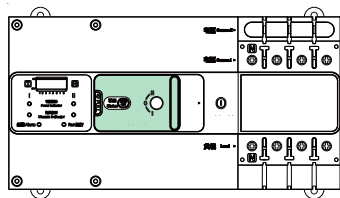



Lock 挂锁

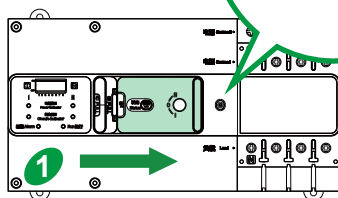

Lock 挂锁

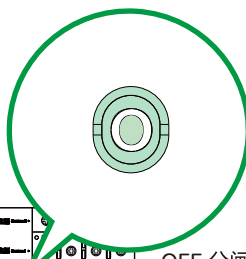


OFF 分闸

 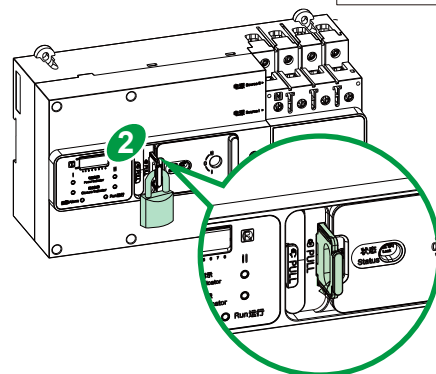



Caution
注意

Please use the special handle with the product.
Failure to follow these instructions will result in product failure or damage.
请使用产品自带专用手柄操作，不遵循上述说明将导致产品失效或损坏。

Manual 手动

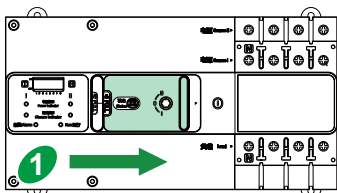


Manual 手动

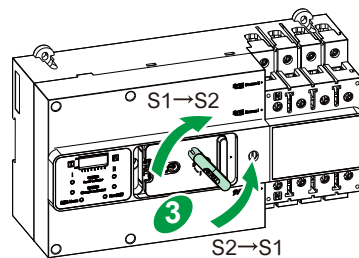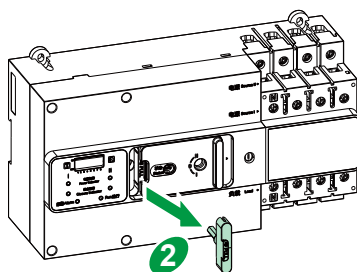


S2→S1




Position Indicator 开关位置指示说明

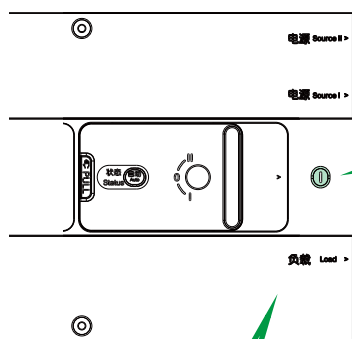

S1 ON
电源 I 合闸

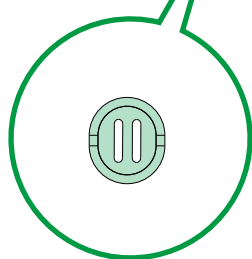

S2 ON
电源 II 合闸

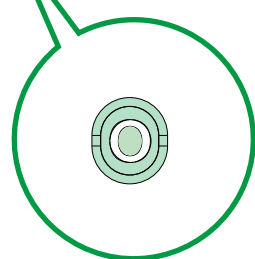

OFF
分闸



Split Type Controller Connection 分体式控制器连接示意

