


WATSON系列 PC级转换开关电器160壳体

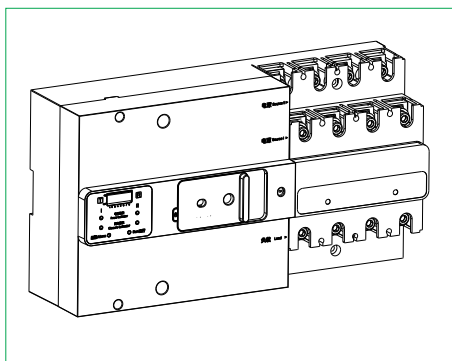

Schneider
Electric
施耐德电气



施耐德万高（天津）电气设备有限公司
Schneider Wingoal (Tianjin) Electric Equipment Co., Ltd.

天津滨海高新技术产业开发区
华苑产业区（环外）海泰创新六路11号
No. 11, Hi-Tech Chuang Xin No. 6 Rd Hua Yuan Industrial
Development Area (Outside Outer Ring)
Binhai New Area, Tianjin P.R.C.
Post Code / 邮编: 300384
Tel / 电话: (022) 2374 8888
Web / 网址: www.se.com.cn
Customer care center / 客户关爱中心热线: 400 810 1315



© 2018 Schneider Electric.
All rights reserved.

NNZ67598
06/2021

⚠️ DANGER / 危险

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH


- Electrical equipment should be installed, operated, serviced, and maintained on qualified personnel.
- No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.
- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

电击、爆炸或电弧闪光危险

- 电气设备的安装、操作、维修和维护工作仅限于合格的人员执行。
- Schneider Electric 不承担由于使用本资料所引起的任何后果。
- 采用适当的个人防护设备（PPE）并遵循电气作业安全守则。
- 只有具备相应资质的电气人员才能安装和维修该设备。
- 在该设备表面或内部工作之前，请关闭设备的全部电源。将开关锁定在隔离位置。
- 确保使用合适的额定电压传感器确认电源已关闭。
- 更换所有设备、门和盖，然后再打开该设备的电源。



不遵循上述说明将导致人员伤亡。

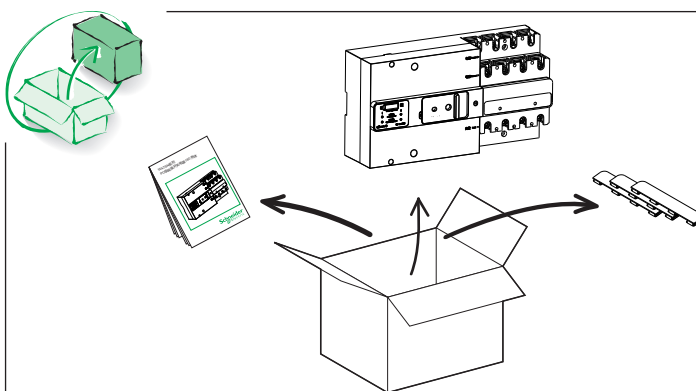


Installation and Fixing 安装固定





mm

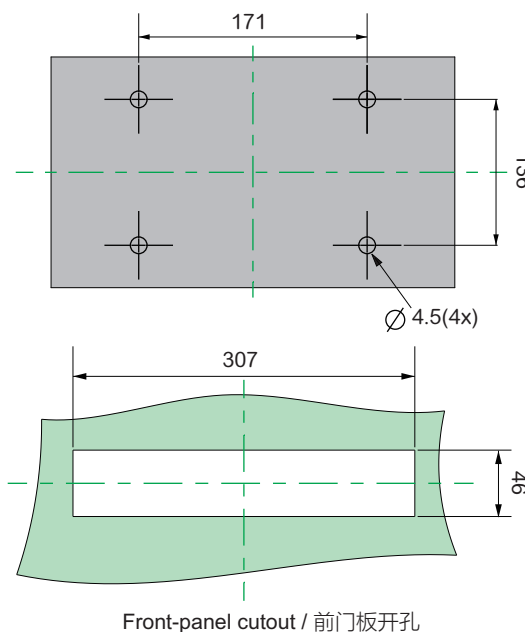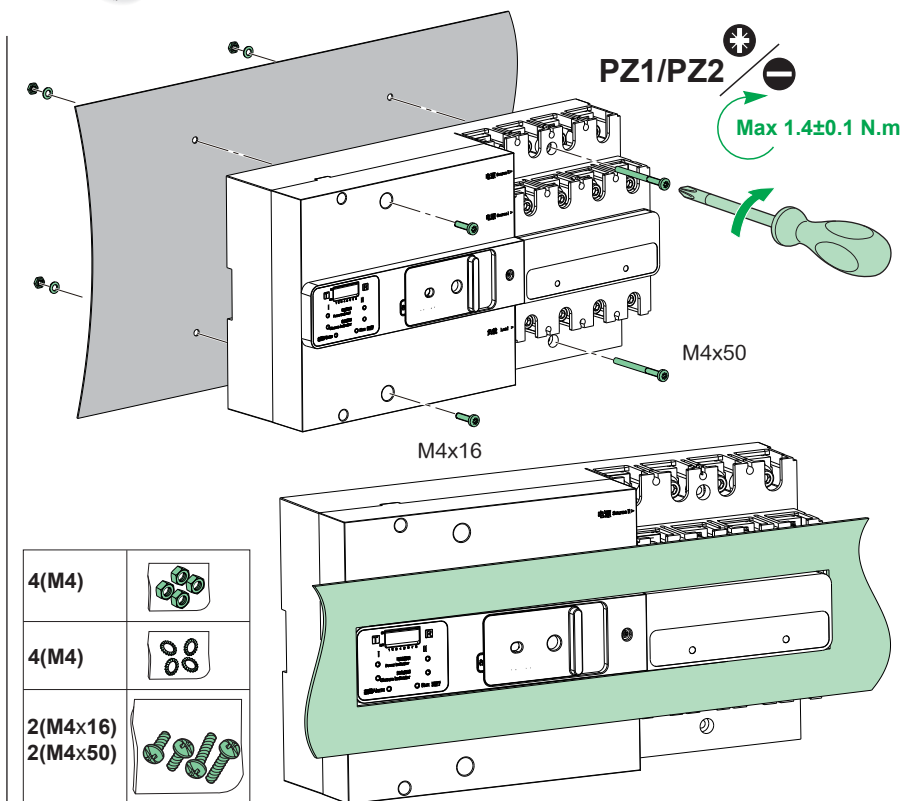


Front-panel cutout / 前门板开孔

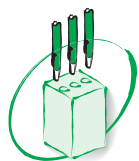



Compression Lugs Connections 接线片连接

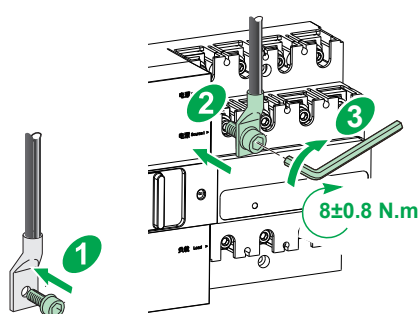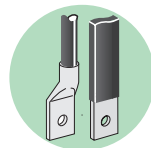


①

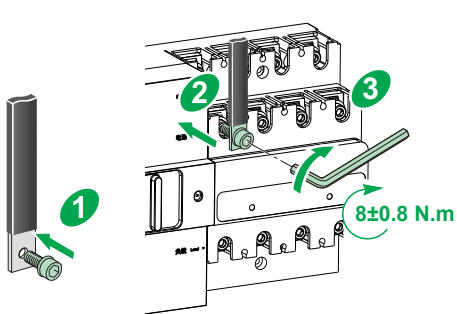


②

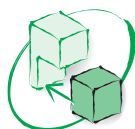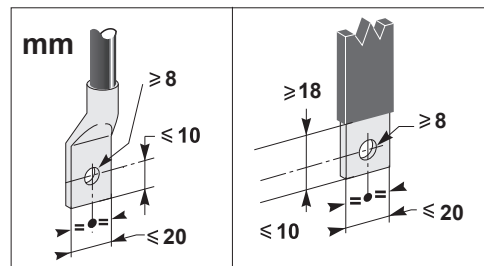


OF Module Installation and Wiring OF模块安装和接线

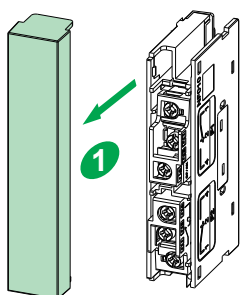




①

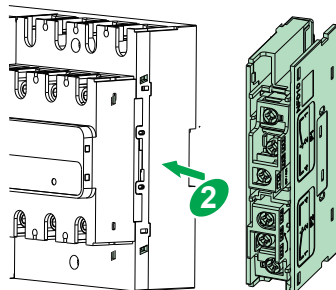


②

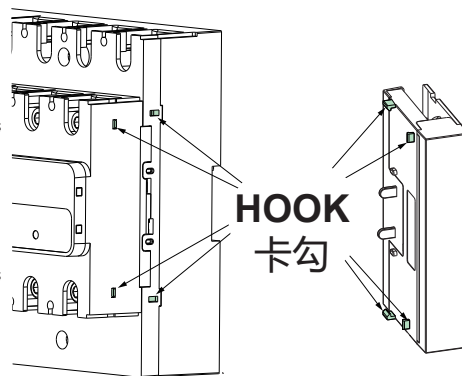


HOOK
卡勾

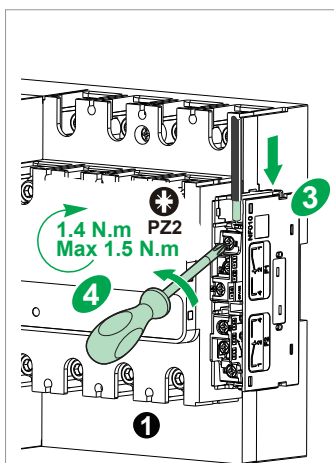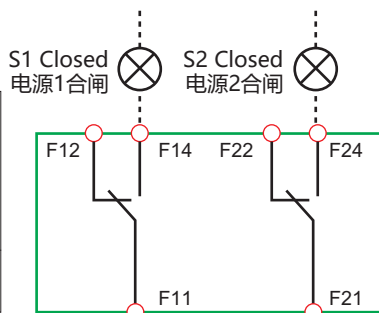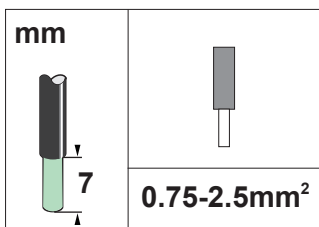


①

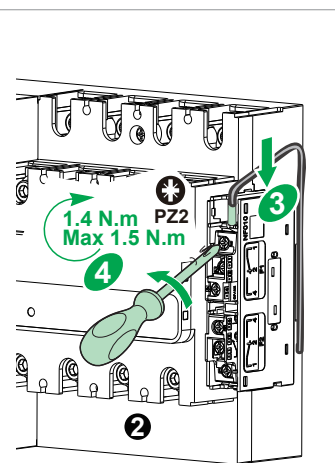


②

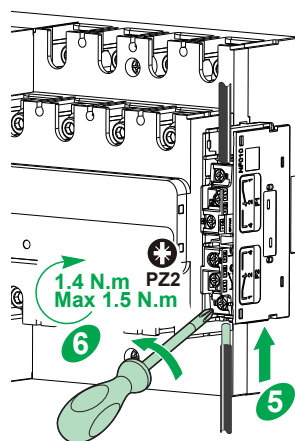


③

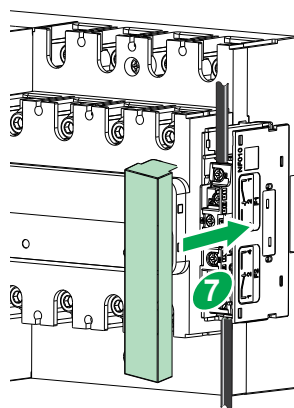

④

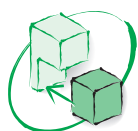


Extension Module Installation 扩展模块安装说明

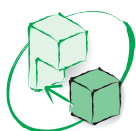

RTSE Module Installation And Connections RTSE模块安装及接线

i

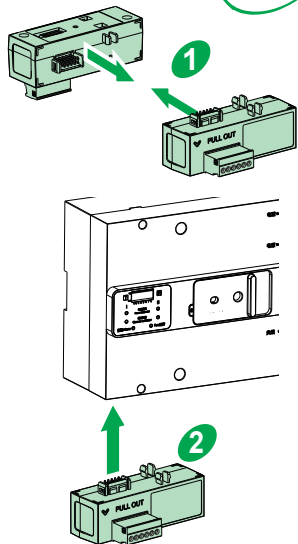

⚠ WARNING / 警告

UNGUARDED MACHINERY HAZARD



Power must be turned off before plugging or unplugging the extension module.

Failure to follow these instructions can result in death or serious injury.


无防护机械危险

插拔扩展模块前必须关闭电源。

不遵循上述说明可能导致人员伤亡。

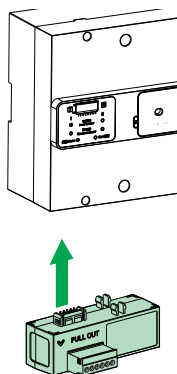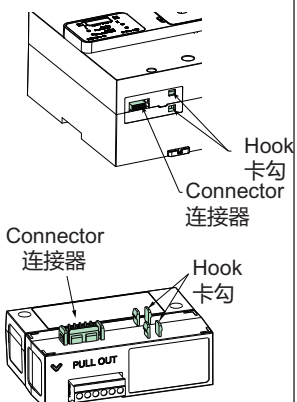

i

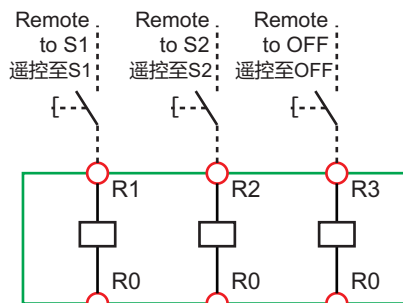

RTSE Remote control signal input time should be $\geq 100\text{ms}$
遥控型产品遥控信号输入时间需要 $\geq 100\text{ms}$



Terminal Cover , Terminal Shield and DIN Rail Latch Installation 端子盖、端子罩和导轨卡扣安装说明

i

⚠ WARNING / 警告

UNGUARDED MACHINERY HAZARD

Please install the terminal cover correctly after wiring to ensure the insulation distance.


Failure to follow these instructions can result in death or serious injury.

无防护机械危险


完成接线后请正确安装端子盖以保证绝缘距离。

不遵循上述说明可能导致人员伤亡。


1 Terminal Cover 端子盖

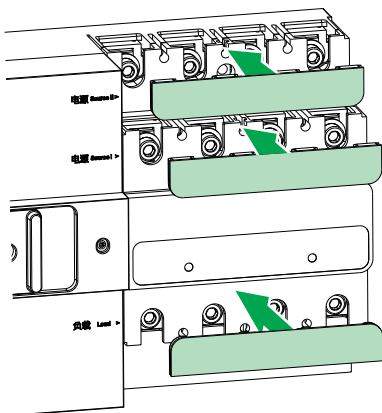


2 Terminal Shield 端子罩

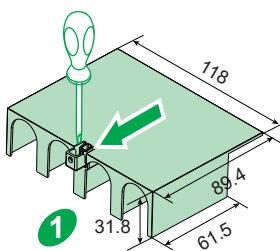



Push out the clip 推出卡扣

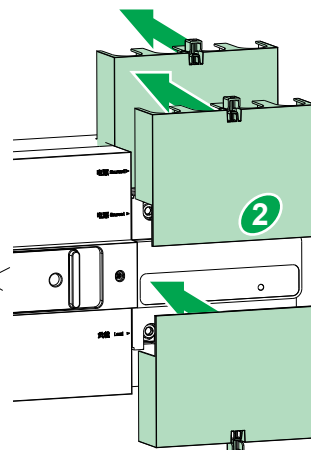

Press the clip 按下卡扣

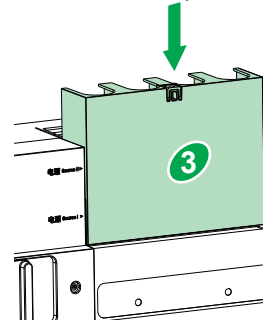


3 DIN Rail Latch 导轨卡扣

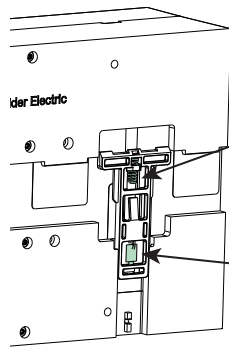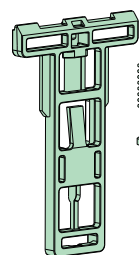


1 Install the spring
安装弹簧

2 Insert downward
into the slot
向下插入底槽

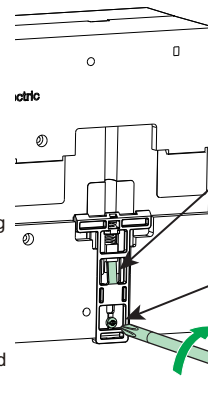

3 Snap in place
卡扣到位


4 Screw fixation
螺丝固定

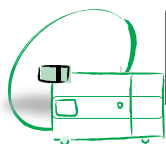


Status-Auto Manual Lock

状态—自动 手动 挂锁

Auto 自动


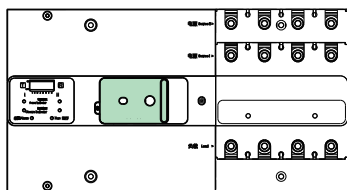


Lock 挂锁

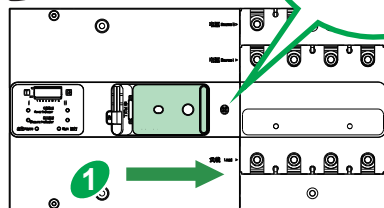

Lock 挂锁

 OFF 分闸

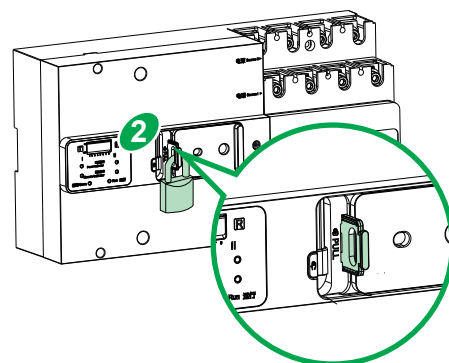

NOTICE / 注意

EQUIPMENT DAMAGE HAZARD

Please use the special handle with the product.


Failure to follow these instructions will result in product failure or damage.

设备损坏危险



请使用产品自带专用手柄操作。

不遵循上述说明将导致产品失效或损坏。

Manual 手动

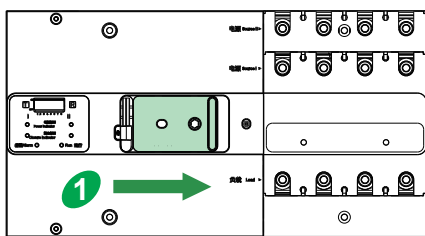


Manual 手动

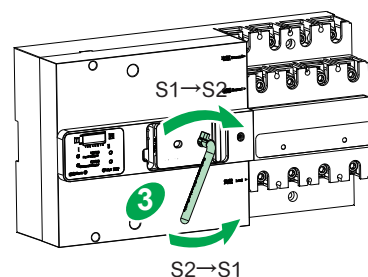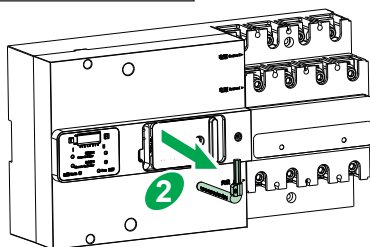


Position Indicator


开关位置指示说明

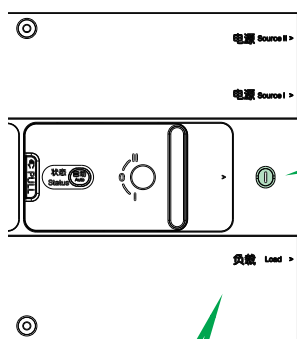

S1 ON
电源 I 合闸

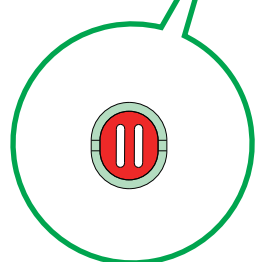

S2 ON
电源 II 合闸

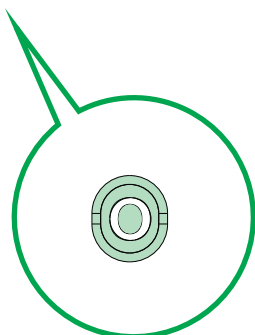

分闸



Split Type Controller Connection

分体式控制器连接示意

⚠ WARNING / 警告

UNGUARDED MACHINERY HAZARD


Please do not plug in or out with power.

Failure to follow these instructions can result in death or serious injury.

无防护机械危险

请勿带电插拔。

不遵循上述说明可能导致人员伤亡。

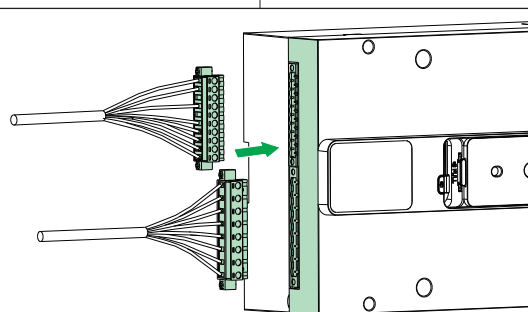

M2.5

Max 0.25-0.3 N.m

