


WATSN系列
PC级转换开关电器630壳体

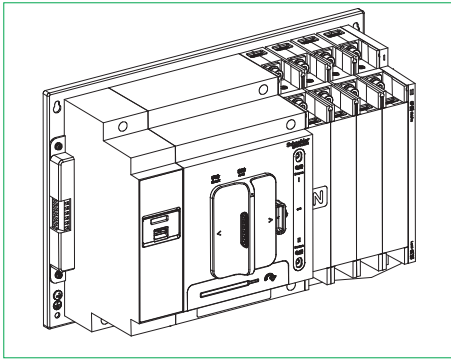

Schneider
Electric
施耐德电气


施耐德万高（天津）电气设备有限公司
Schneider Wingoal (Tianjin) Electric Equipment Co.,Ltd.
天津滨海高新技术产业开发区
华苑产业区（环外）海泰创新六路11号
No. 11, Hi-Tech Chuang Xin No. 6 Rd Hua Yuan Industokri-
el Development Area (Outside Outer Ring)
Binhai New Area, Tianjin P.R.C.
Post Code / 邮编: 300384
Tel / 电话: (022) 2374 8888
Web / 网址: www.se.com.cn
Customer care center / 客户关爱中心热线: 400 810 1315



© 2018 Schneider Electric. All rights reserved. 0WG.466.149 04/2020



Installation And Fixing
安装固定

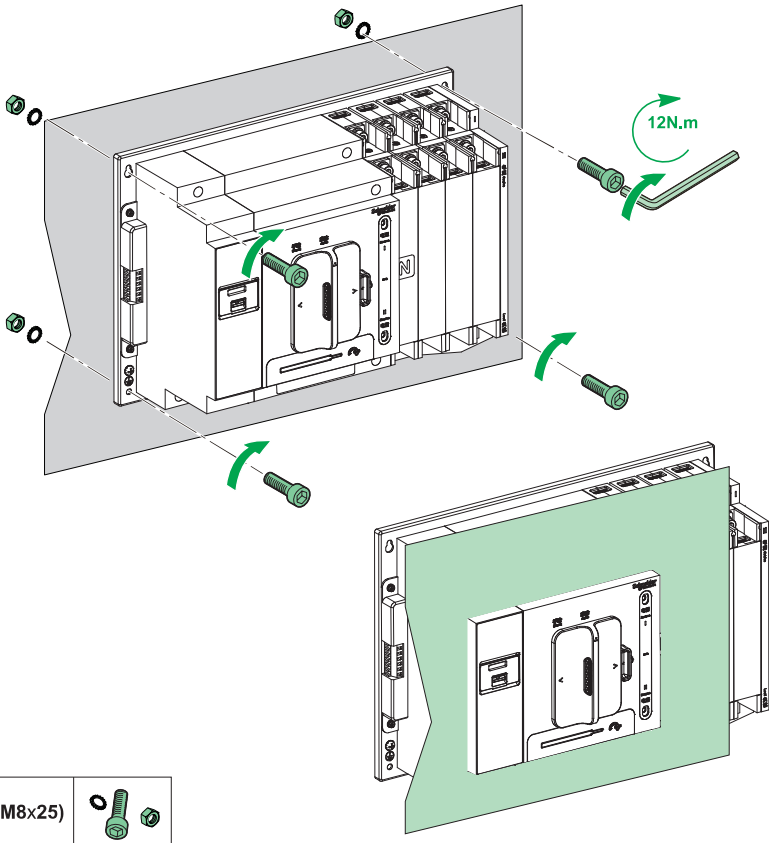

⚠️ DANGER / 危险

- Electrical equipment should be installed, operated, serviced, and maintained on qualified personnel.
- No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.



Failure to follow these instructions will result in death or serious injury.

电气设备的安装、操作、维修和维护工作仅限于合格的人员执行。


Schneider Electric 不承担由于使用本资料所引起的任何后果。

电击、爆炸或电弧闪光危险


- 采用适当的个人防护设备（PPE）并遵循电气作业安全守则。
- 只有具备相应资质的电气人员才能安装和维修该设备。
- 在该设备表面或内部工作之前，请关闭设备的全部电源。将开关锁定在隔离位置。
- 确保使用合适的额定电压传感器确认电源已关闭。
- 更换所有设备、门和盖，然后再打开该设备的电源。
- 不遵循上述说明将导致人员伤亡。

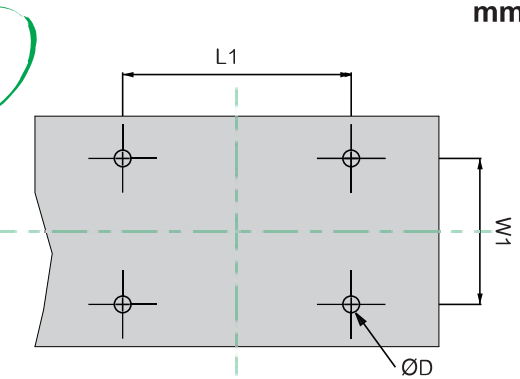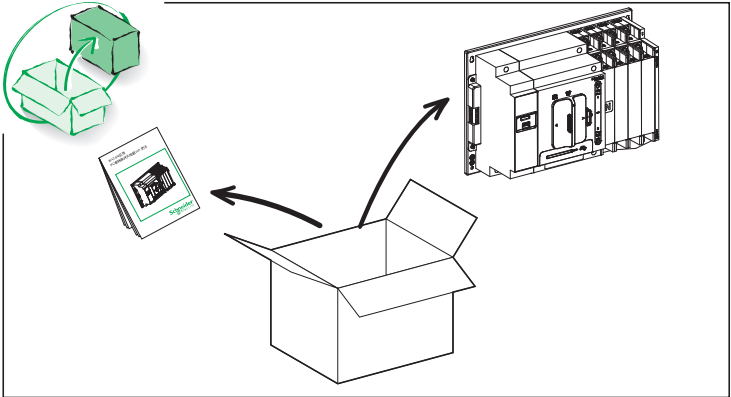


Poles / 极数	Fixing dimensions/固定尺寸 (mm)		
	L1	W1	D(Ø)
3	445	326	8.5
4	490	326	8.5

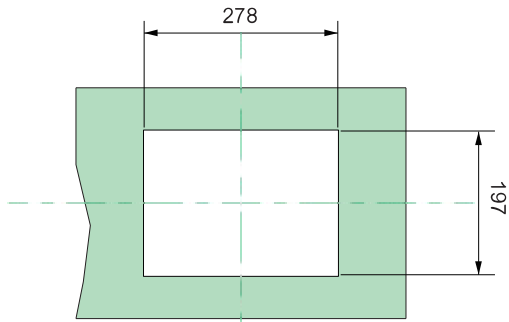

Front-panel cutout / 前门板开孔




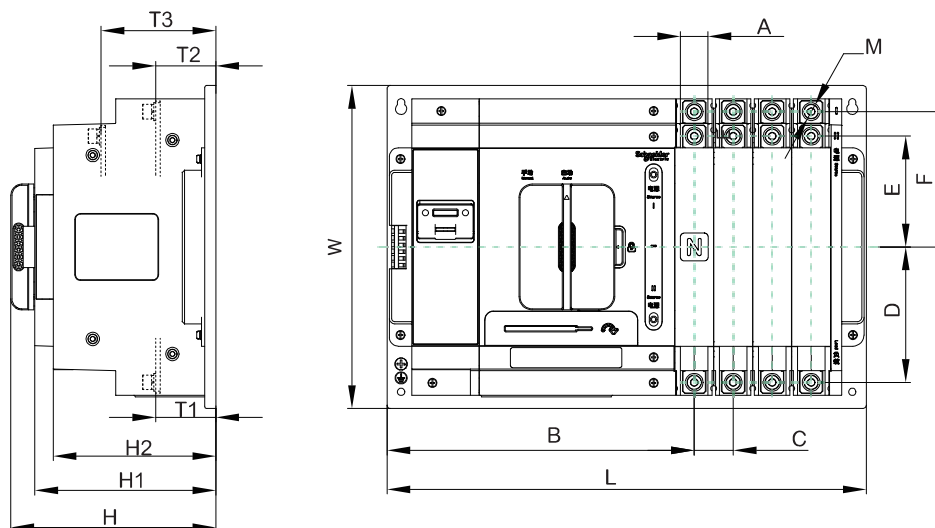


Poles / 极数	Fixing dimensions/固定尺寸 (mm)														
	L	W	H	H1	H2	A	B	C	D	E	F	M	T1	T2	T3
3	470	356	217.5	196	174	35.6	323	45	152	118	152	M10	63	63	124
4	515	356	217.5	196	174	35.6	323	45	152	118	152	M10	63	63	124

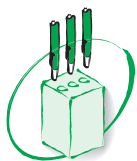



Compression Lugs Connections

接线片连接

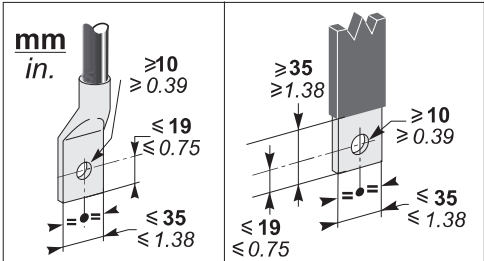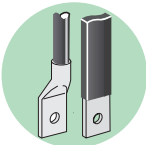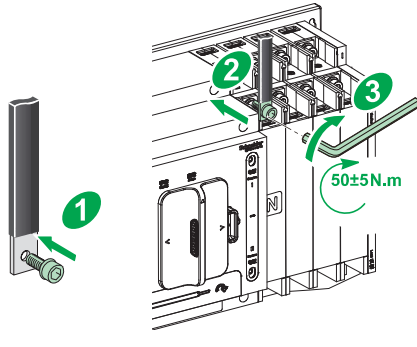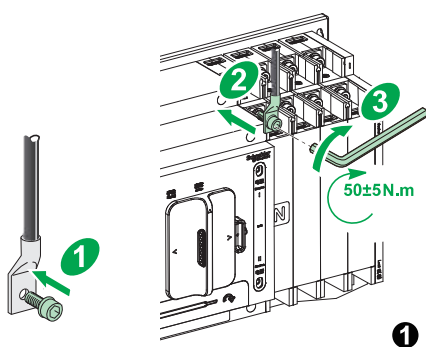


OF Module


OF模块

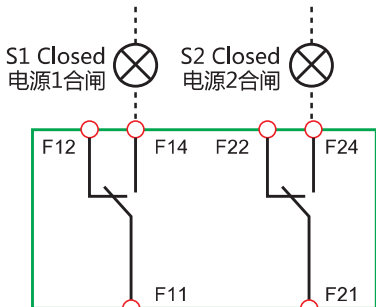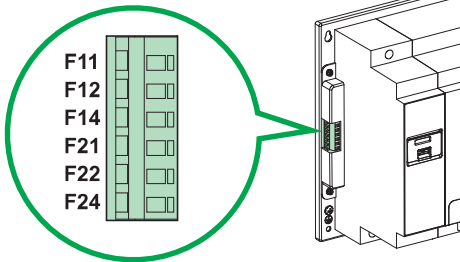

Split Type Controller Connection

分体式控制器连接示意

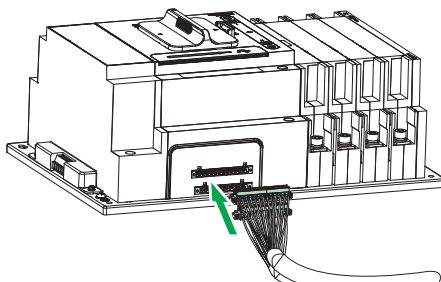

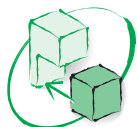




Extension Module Installation 扩展模块安装说明



Warning
警告

Power must be turned off before plugging or unplugging the extension module. Failure to follow these instructions can result in death or serious injury.

插拔扩展模块前必须关闭电源，不遵循上述说明可能导致人员伤亡。

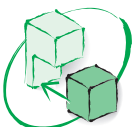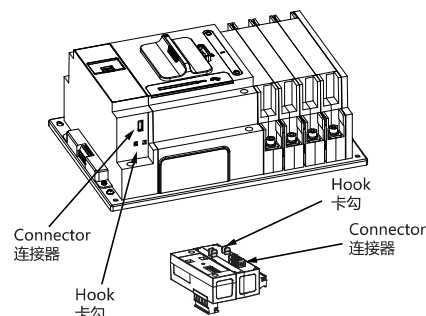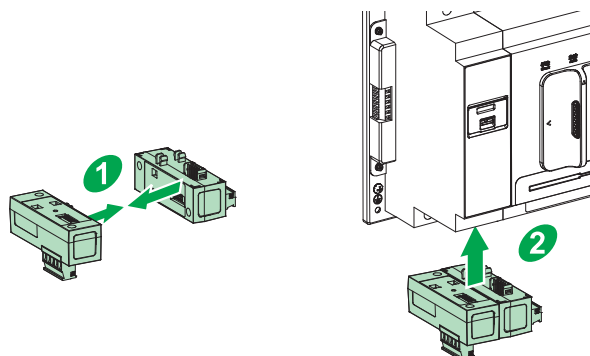





RTSE Module Installation And Connections RTSE模块安装及接线




Caution
注意

R1, R2, R3 can only have one of them connected to R0 at the same time. Please confirm the RTSE module has been installed before the product is powered on. Failure to follow these instructions will result in product failure or damage.



R1, R2, R3同时只能有一个和R0接通，产品上电前请先确认遥控模块已安装。不遵循上述说明将导致产品失效或损坏

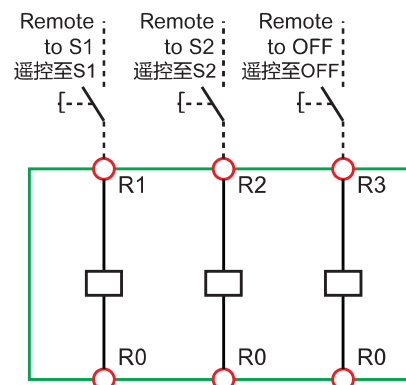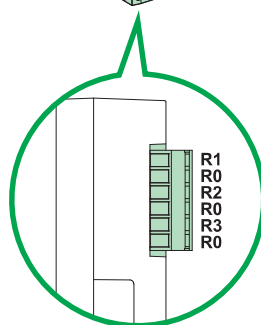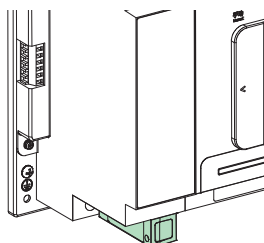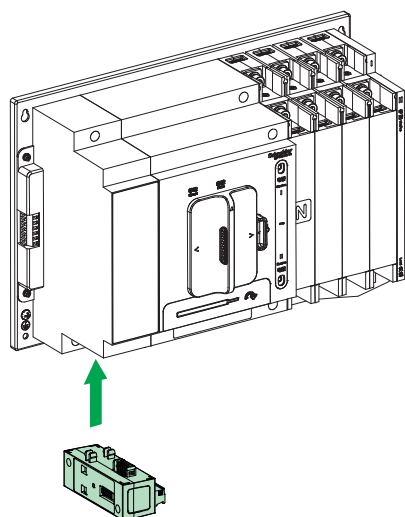


RTSE Remote control signal input time should be $\geq 100\text{ms}$
遥控型产品遥控信号输入时间需要 $\geq 100\text{ms}$

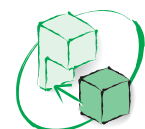

Interphase Barriers 相间隔板安装

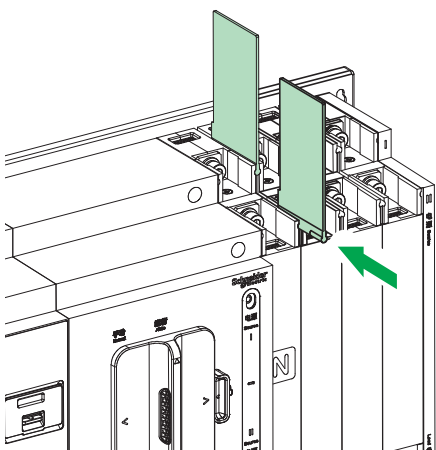 







Status-Auto 状态—自动

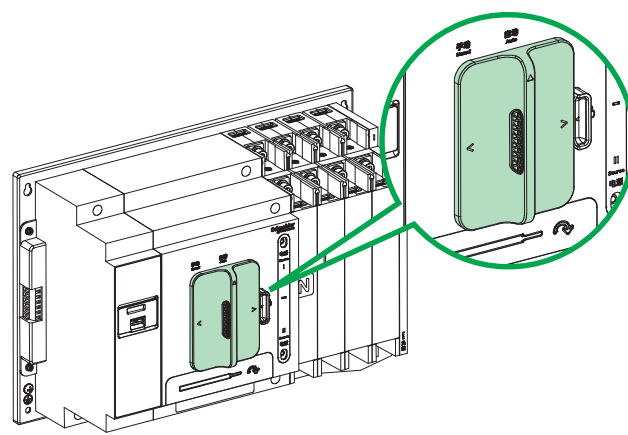






Manual Operation

手动操作

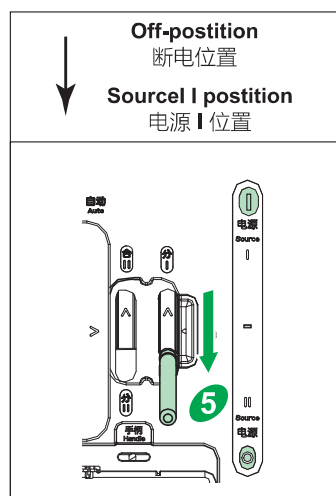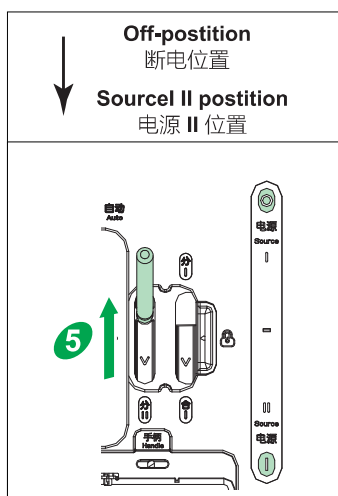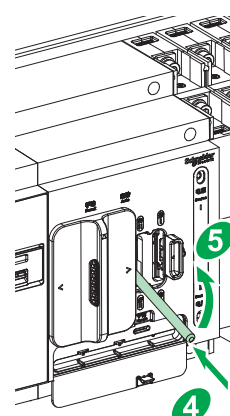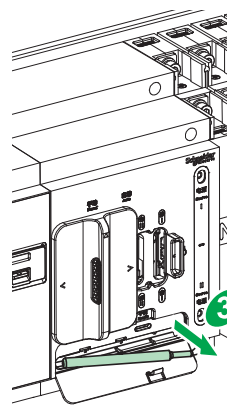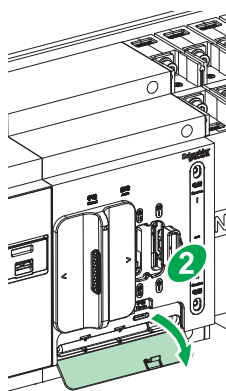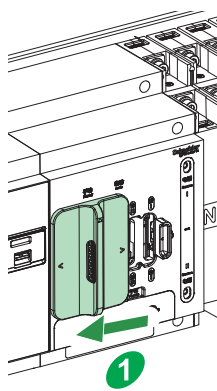

Lock

挂锁操作

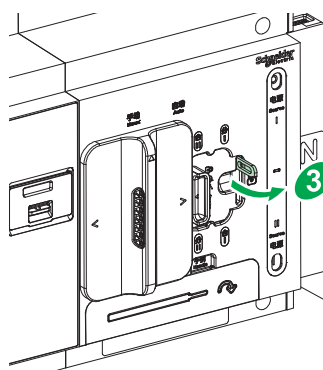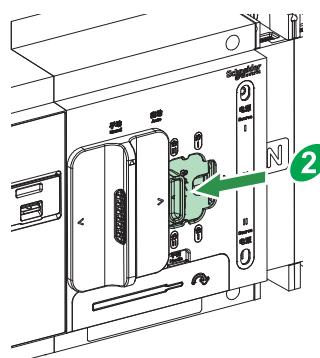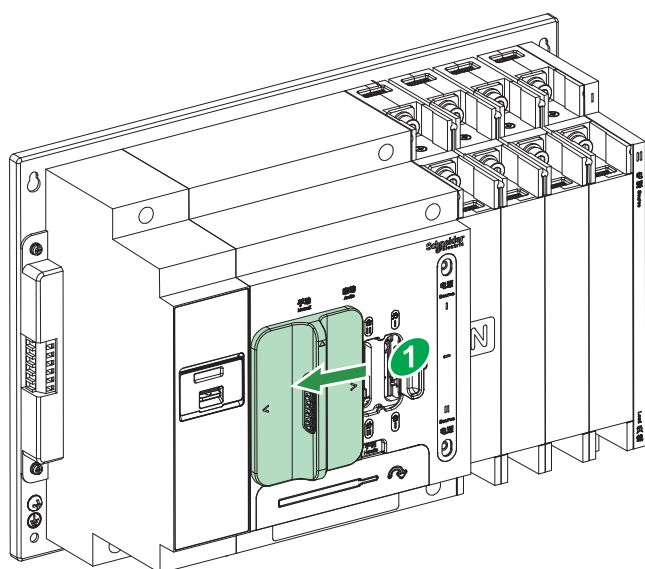

1-3
 $\varnothing \leq 4 \text{ mm}$