

Table 1: Replacement Deadfronts for Main Lug Interiors

Interior Pole Spaces		18	30	42	54	66	84
125 A	No Options	NFRPL18L1 NFRPL418L1	NFRPL30L NFRPL430L1	NFRPL42L1 NFRPL442L1	NFRPL54L1 NFRPL454L1	N/A	
	With FTL	N/A	NFRPL30L1TFL NFRPL430L1TFL	NFRPL42L1TFL NFRPL442L1TFL	NFRPL54L1TFL NFRPL454L1TFL	N/A	
250 A	No Options	N/A	NFRPL30L2 NFRPL430L2	NFRPL42L2 NFRPL442L2	NFRPL54L2 NFRPL454L2	NFRPL66L2 NFRPL466L2	N/A
	With FTL	N/A	NFRPL30L2TFL NFRPL430L2TFL	NFRPL42L2TFL NFRPL442L2TFL	NFRPL54L2TFL NFRPL454L2TFL	NFRPL66L2TFL NFRPL466L2TFL	N/A
	With SFB	NFRPLSFB2J or NFRPLSFB2H (Depends on SFB frame type)					
400 A	No Options	N/A	NFRPL30L4 NFRPL430L4	NFRPL42L4 NFRPL442L4	NFRPL54L4 NFRPL454L4	NFRPL66L4 NFRPL466L4	NFRPL84L4 NFRPL484L4
	With FTL	N/A	NFRPL30L4TFL NFRPL430L4TFL	NFRPL42L4TFL NFRPL442L4TFL	NFRPL54L4TFL NFRPL454L4TFL	NFRPL66L4TFL NFRPL466L4TFL	NFRPL84L4TFL NFRPL484L4TFL
	With SFB	N/A	NFRPLSFB4J, NFRPLSFB4H, NFRPLSFB4LA, NFRPLSFB4LC, NFRPLSFB4LAJ, NFRPLSFB4LAH				
600 A	No Options	N/A	NFRPL30L6 NFRPL430L6	NFRPL42L6 NFRPL442L6	NFRPL54L6 NFRPL454L6	NFRPL66L6 NFRPL466L6	NFRPL84L6 NFRPL484L6
	With SFL	N/A					
	With FTL	N/A	NFRPL30L6TFL NFRPL430L6TFL	NFRPL42L6TFL NFRPL442L6TFL	NFRPL54L6TFL NFRPL454L6TFL	NFRPL66L6TFL NFRPL466L6TFL	NFRPL84L6TFL NFRPL484L6TFL
	With SFB	N/A	NFRPLSFB4J, NFRPLSFB4H, NFRPLSFB4LA, NFRPLSFB4LC, NFRPLSFB4LAJ, NFRPLSFB4LAH				
	With TVSS	N/A					
800 A	No Options	N/A	NFRPL30L8 NFRPL430L8	NFRPL42L8 NFRPL442L8	NFRPL54L8 NFRPL454L8	N/A	
	With SFL	N/A					
	With FTL	N/A	NFRPL30L8TFL NFRPL430L8TFL	NFRPL42L8TFL NFRPL442L8TFL	NFRPL54L8TFL NFRPL454L8TFL	N/A	
	With SFB	N/A	NFRPLSFB4J, NFRPLSFB4H, NFRPLSFB4LA, NFRPLSFB4LC, NFRPLSFB4LAJ, NFRPLSFB4LAH				
	With TVSS	N/A					

Main Circuit Breaker Interiors

For replacement of main circuit breaker interior deadfronts, only the main breaker section of the deadfront is listed below. To order an entire main circuit breaker interior deadfront, please order the appropriate Main Lug Interior deadfront from the table above, and a Main Circuit Breaker Interior deadfront from the table below.

Table 2: Replacement Main Circuit Breaker Deadfront Sections¹

125 A	NFRPLMB1H NFRPLMB1FI	(For H Frame Mains) (For FI Mains)
250 A	NFRPLMB2J NFRPLMB2KI	(For J Frame Mains) (For KI Mains)
400 A	NFRPLMB4LA NFRPLMB6LCLI	(For LA/LH Mains) (For LC/LI Mains)
600 A	NFRPLMB4LA NFRPLMB6LCLI	(For LA/LH Mains) (For LC/LI Mains)

¹ These do not vary by circuit count.



For repairs not involving the service parts addressed in this document, please call the Square D / Schneider Electric Customer Information Center:
In the USA, 1-888-SquareD (1-888-778-2733)
In Canada, 1-800-565-6699