

 
 
 
INSTALLATION GUIDE

CAT. NO. 99AC AC220~240V 50Hz

Installation of Door Chime

AC Connection:

1. Mount the wallbox onto a suitable place.
2. Detach the chime cover by inserting screwdriver and twist.
3. Loosen the protective cover before connecting the input power line
4. Connect the main power source to the "L" and "N" terminals of the door chime transformer.
5. Connect the bell push switch (not included) to the "0" and "2" terminals of the door chime
6. Hold the power supply cable by cord grip and replace the protective cover
7. Drill two holes by placing the template in the desired location on the wall. Ensure the hole centres align vertically. Insert the screws into mounting holes and drive in the screws tightly.
8. Replace the chime cover.
9. Mount the bell push switch onto the wallbox.

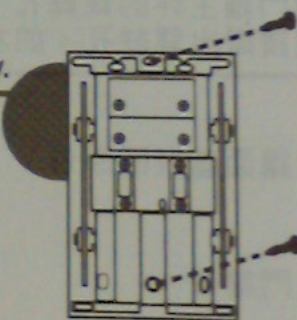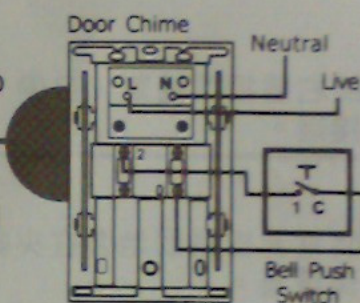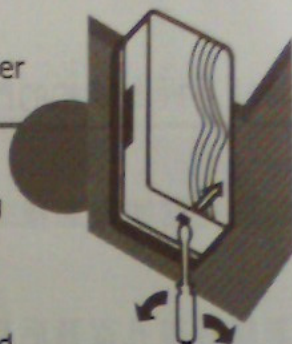

Notes:

1. Before wiring, power must be turned off.
2. Please check your local wiring regulation before actual installation.
3. It is recommended to install the door chime by qualified electrician.
4. The door chime is for indoor use only.

Recommended Specifications of Bell Push Switch:
Clipsal E31BP2A/3 Bell push switch
250V AC 50Hz 3A

to the "L" and
transformer.

ot included) to
door chime

cord grip and

mplate in the
ure the hole

