


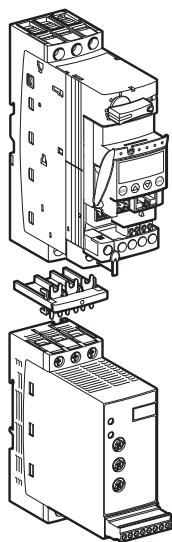

00162468814046

Altistart

ATSU01N2●●LT



⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


- Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation and who have received safety training to recognize and avoid hazards involved are authorized to work on and with this soft starter system. Installation, adjustment, repair, and maintenance must be performed by qualified personnel.
- The system integrator is responsible for compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Many components of the product, including the printed circuit boards, operate with mains voltage. Do not touch. Use only electrically insulated tools.
- Do not touch unshielded components or terminals with voltage present.
- AC voltage can couple voltage to unused conductors in the motor cable. Insulate both ends of unused conductors of the motor cable.
- Before performing work on the soft starter system:
 - Disconnect all power, including external control power that may be present.
 - Place a "Do Not Turn On" label on all power switches.
 - Lock all power switches in the open position.
- Install and close all covers before applying voltage.

Failure to follow these instructions will result in death or serious injury.


Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.


No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this product.





© 2013 Schneider Electric. All Rights Reserved.



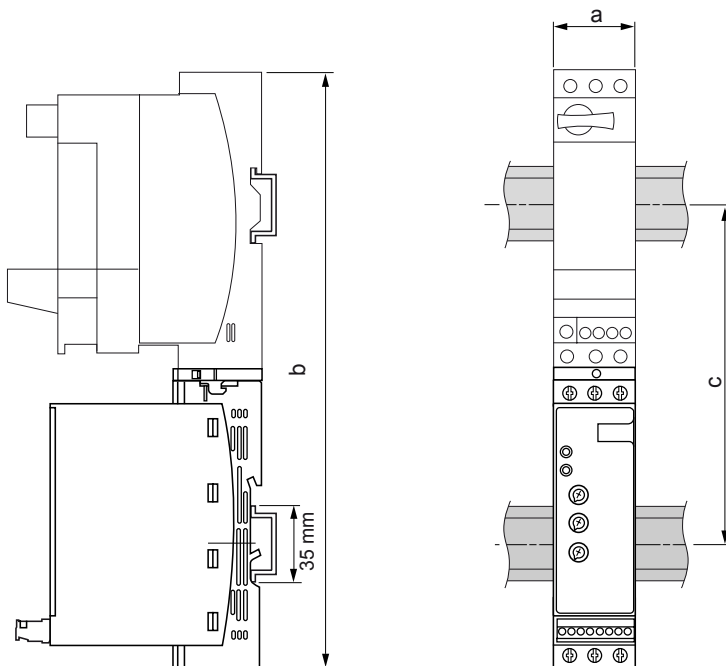




	a mm in	b mm in	c mm in
ATSU 01N206LT	45	234	150
ATSU 01N209LT	1.8	9.2	5.9
ATSU 01N212LT			
ATSU 01N222LT	45	314	170
ATSU 01N232LT	1.8	12.4	6.7

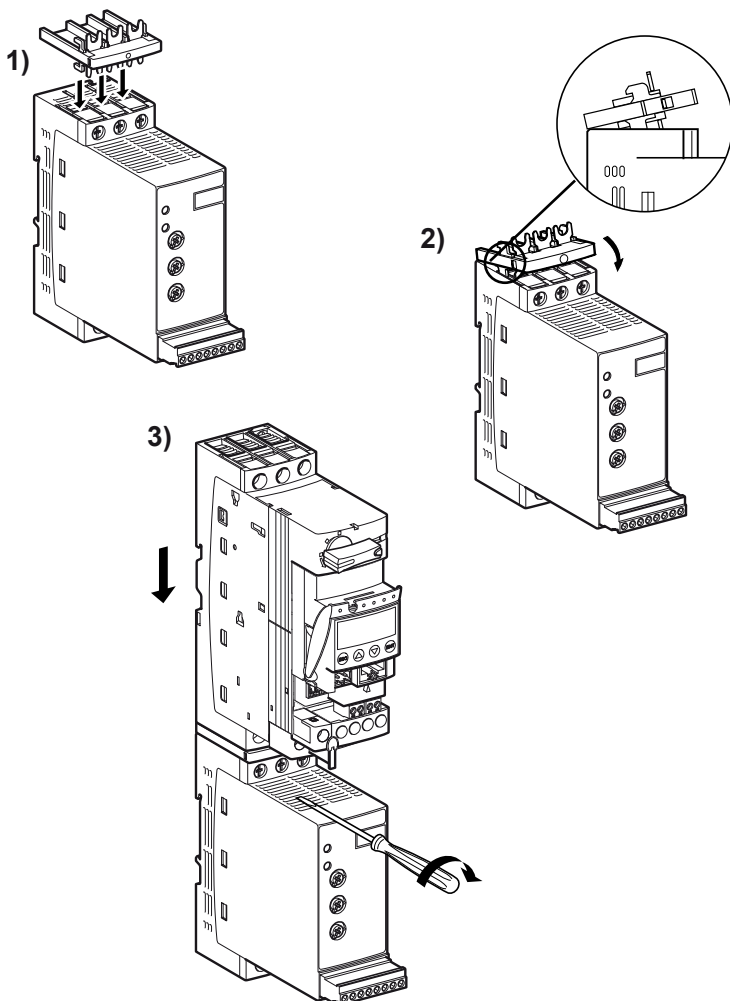


				
	[mm ²]	AWG	Nm	lb/in
1/L1, 3/L2, 5/L3 2/T1, 4/T2, 6/T3	≤ 10	≤ 8	1,9...2,5	17...22
R1A, R1C, COM, LI1, LI2, + 24 V, BOOST, LO1	≤ 2,5	≤ 14	0,5	4,5

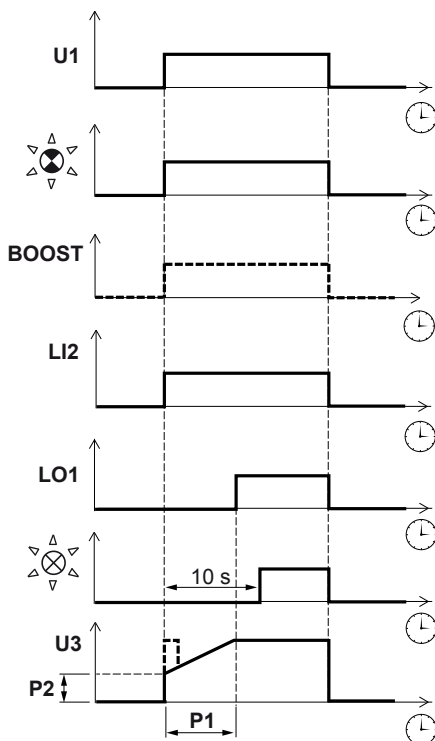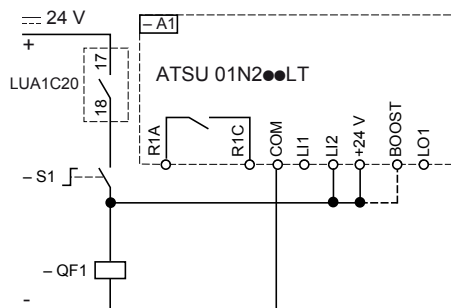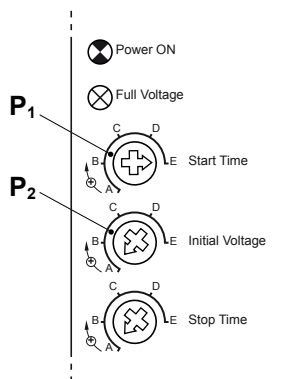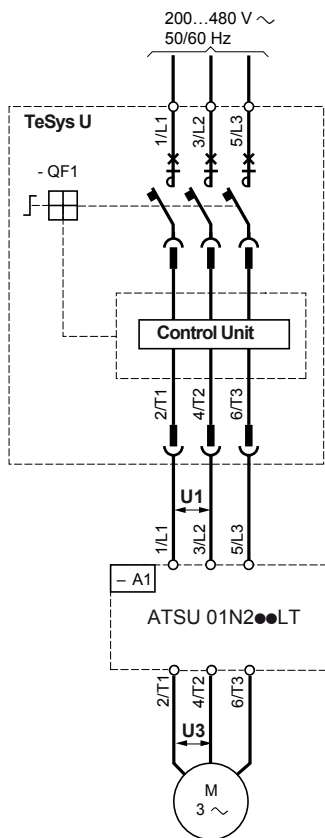

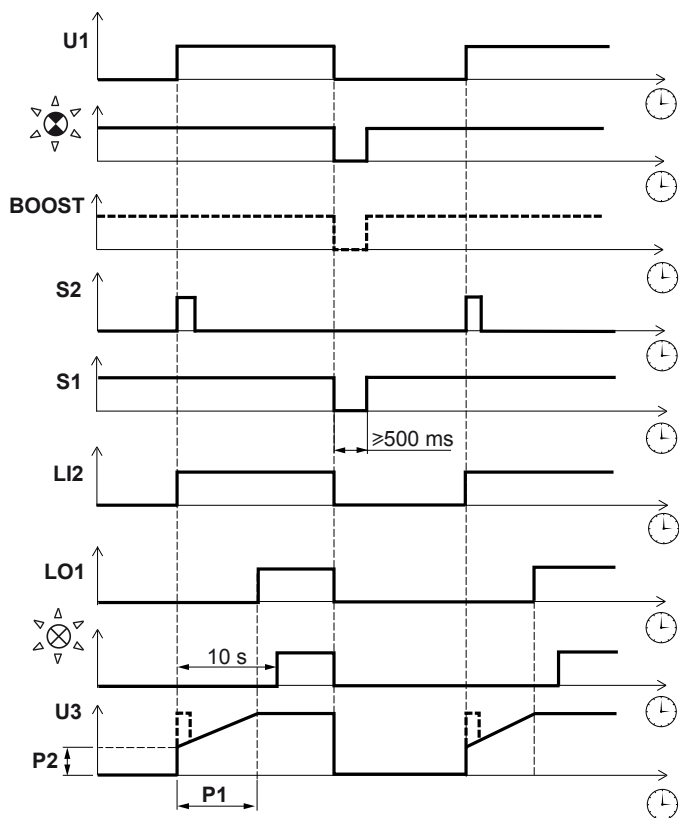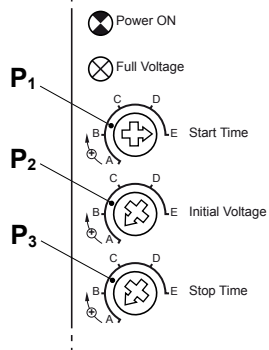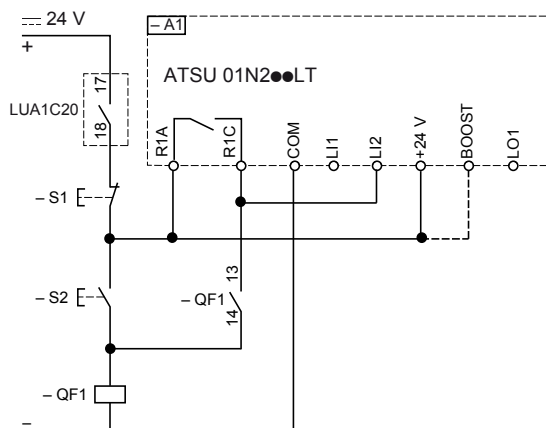

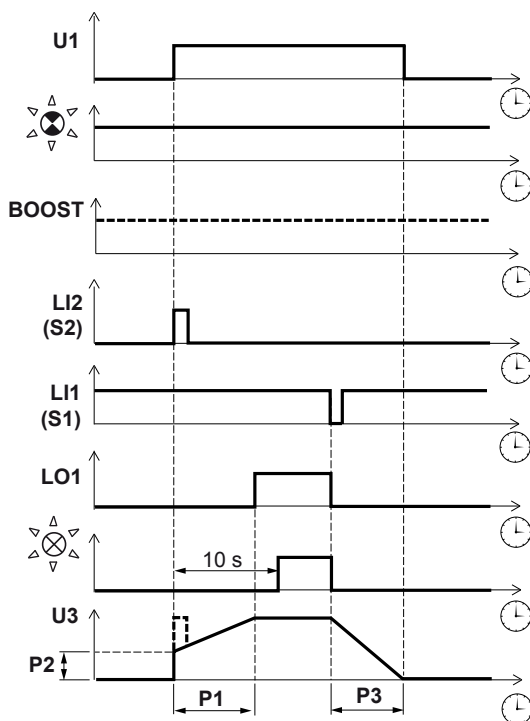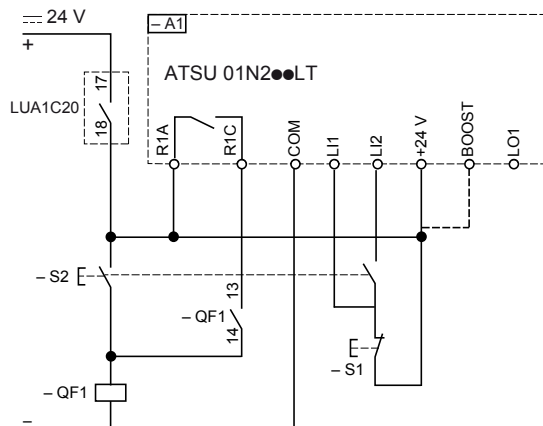

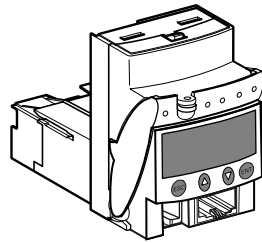

LUCM●●BL

Off /A l'arrêt /Paro/Bereit /Off

ENT

Main menu /Menu /Menu /Hauptmenu /Principale

1 Reference /Profil /Info /Profil /Profilo

▼ x3

Main menu /Menu /Menu /Hauptmenu /Principale

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.

ENT

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.

41 Trip Class /41_Classe /41_Classe /41_Ausklasse /41_Classe

ENT

41 Trip Class /41_Classe /41_Classe /41_Ausklasse /41_Classe

▼ x5

ENT

10

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.

41 Trip Class /41_Classe /41_Classe /41_Ausklasse /41_Classe

▼ x5

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.

46_Groundflt /46_def Terre /46_Def Tierra /46_Erd Fehl. /46_Diff Terra

ENT

46_Groundflt /46_def Terre /46_Def Tierra /46_Erd Fehl. /46_Diff Terra

Trip Level/Seuil Declenchement/Nivel Disparo/Auslösewert/Soglia sgan

ENT

Trip Level /Seuil Declenchement /Nivel Disparo /Auslösewert /Soglia sgan

▲ x2

ENT

4A

ESC

46_Groundflt /46_def Terre /46_Def Tierra /46_Erd Fehl. /46_Diff Terra

Trip Level/Seuil Declenchement/Nivel Disparo/Auslösewert/Soglia sgan

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.

46_Groundflt /46_def Terre /46_Def Tierra /46_Erd Fehl. /46_Diff Terra

▼

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.

47_Phase Imb /47_Deseglbre /47_Desfase /47_Ph Unsym /47_Disequil

ENT

47_Phase Imb /47_Deseglbre /47_Desfase /47_Ph Unsym /47_Disequil

Trip Time Strt /Tps Lors Dem /Temp Disp arran /T Bis Auslö /T a Avviam

ENT

Trip Time Strt /Tps Lors Dem /Temp Disp arran /T Bis Auslö /T a Avviam

▲ x10

ENT

15s

47_Phase Imb /47_Deseglbre /47_Desfase /47_Ph Unsym /47_Disequil

Trip Time Strt /Tps Lors Dem /Temp Disp arran /T Bis Auslö /T a Avviam

ESC ESC

ESC

Main menu /Menu /Menu /Hauptmenu /Principale

4_AdvSetUp /Paramétrer /Ajustar /Parameter /Parametr.