


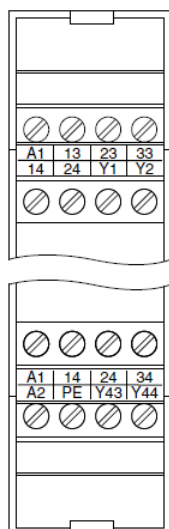



XPSAC is replaced by XPSBAC

XPSAC



XPSBAC



Commercial Reference	Commercial Reference
XPSAC1321	XPSBAC34AP
XPSAC1321P	XPSBAC34AP
XPSAC3421	XPSBAC34AP
XPSAC3421P	XPSBAC34AP


Commercial Reference	Commercial Reference
XPSAC3721	XPSBAC34AP
XPSAC3721P	XPSBAC34AP
XPSAC5121	XPSBAC14AP
XPSAC5121P	XPSBAC14AP

XPSAC is replaced by XPSBAC

XPSAC




XPSBAC

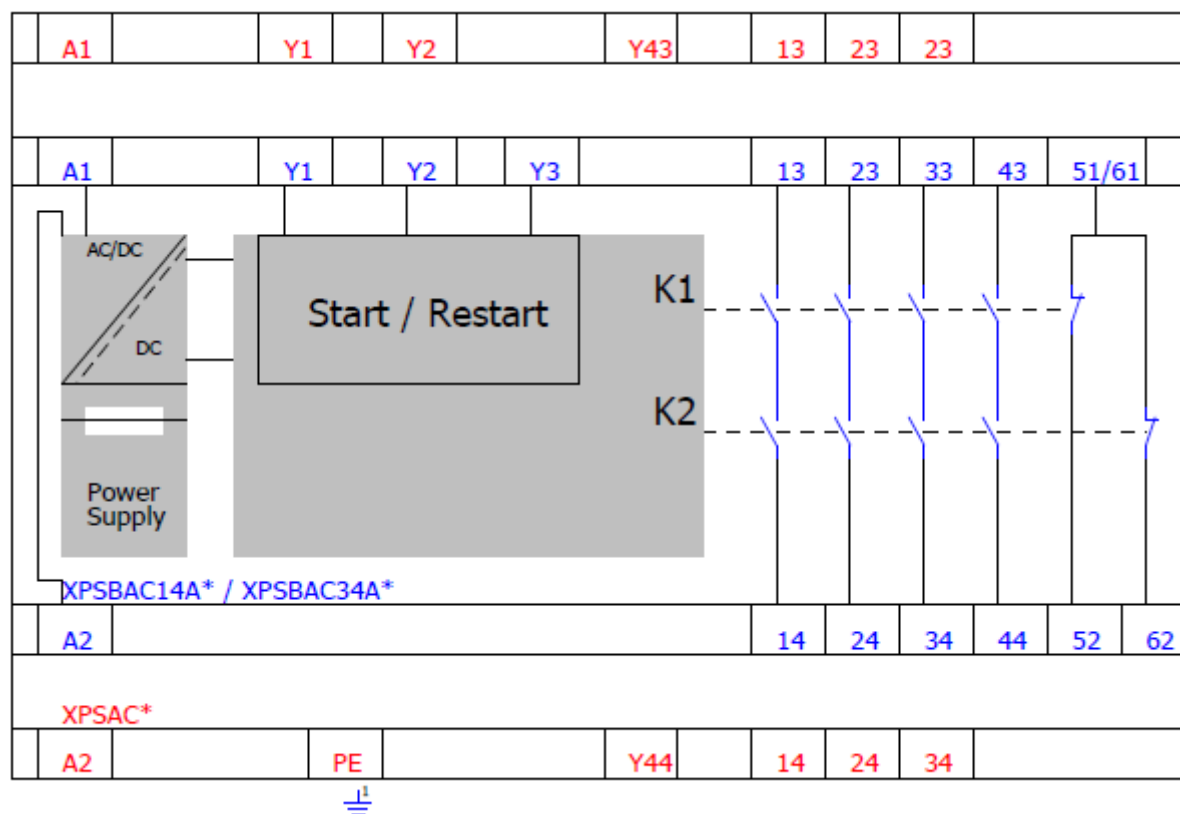

Wiring **Emergency Stop** diagram XPSAC & XPSBAC

XPSAC

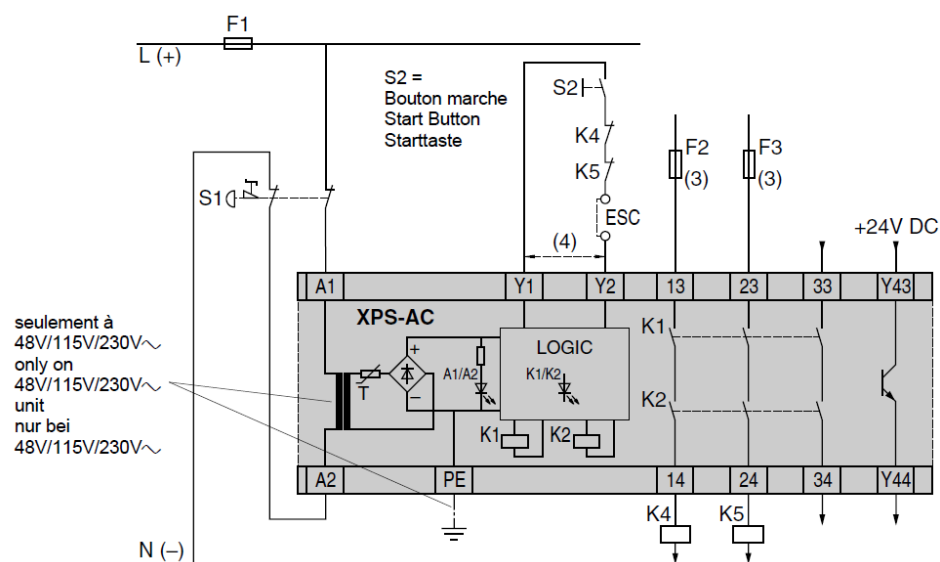

(3) =

Voir caractéristiques techniques pour le calibre maximal des fusibles

See Technical Data for maximum fuse sizes

Siehe technische Daten für max. Sicherung


(4) =

Bornes Y1-Y2 shuntées - démarrage automatique

Terminals Y1-Y2 jumpered, automatic start

Mit Brücke Y1-Y2, automatischer Start

XPSBAC

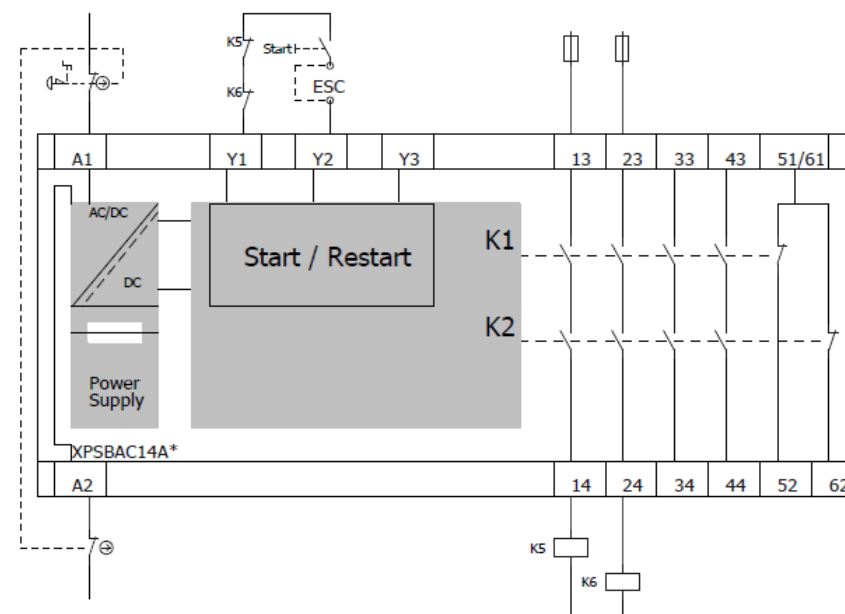

Y1- Control output of Start/Restart input

Y2- Input channel for automatic/manual start/restart


Y3- Input channel for monitored start/restart with falling edge

Note:

1. The two normally closed relay contacts (terminals 51/61, 52, 62) can be connected in series or in parallel, please refer to page 34 of your user guide
2. Install fuses with the rating specified in the chapter Electrical Characteristics, page 20 of your user guide.
3. With appropriated input and output devices, XPSBAC can reach up to PLe, SILCL3

Wiring **Emergency Stop single channel** diagram XPSAC & XPSBAC

XPSAC

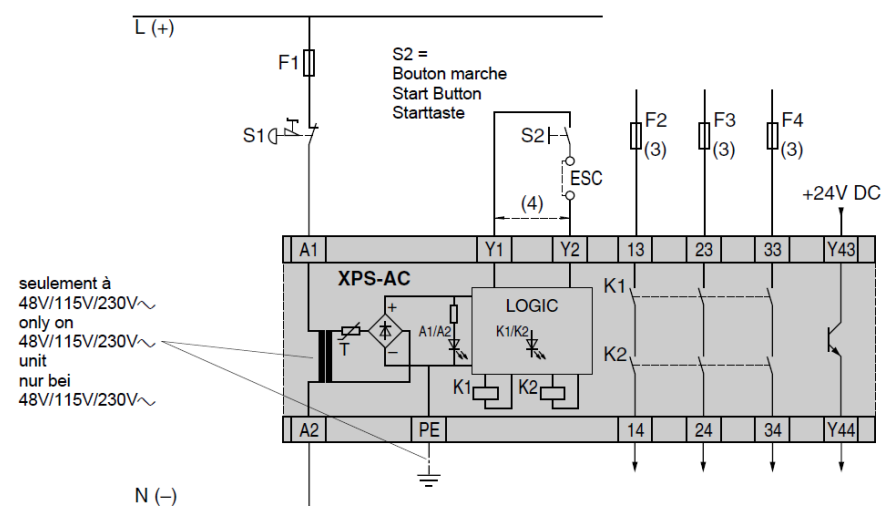

(3) =

Voir caractéristiques techniques pour le calibre maximal des fusibles

See Technical Data for maximum fuse sizes

Siehe technische Daten für max. Sicherung


(4) =

Bornes Y1-Y2 shuntées - démarrage automatique

Terminals Y1-Y2 jumpered, automatic start

Mit Brücke Y1-Y2, automatischer Start

XPSBAC

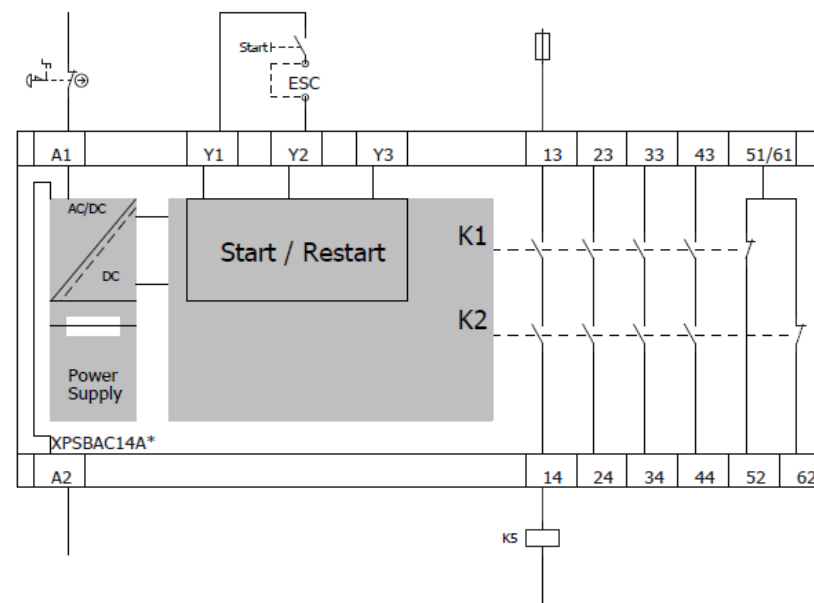

Y1- Control output of Start/Restart input

Y2- Input channel for automatic/manual start/restart


Y3- Input channel for monitored start/restart with falling edge

Note:


1. The two normally closed relay contacts (terminals 51/61, 52, 62) can be connected in series or in parallel, please refer to page 34 of your user guide
2. Install fuses with the rating specified in the chapter Electrical Characteristics, page 20 of your user guide.
3. With appropriated input and output devices, XPSBAC can reach up to PLC, SILCL1

XPSAXE is replaced by XPSBAC


XPSAXE

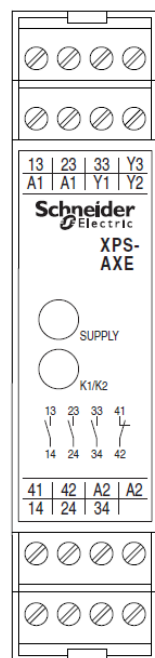

24V ~



XPSBAC




A1 13 23 33

Y1 Y2 51/61 43

Y3 52 62 44

A2 14 24 34

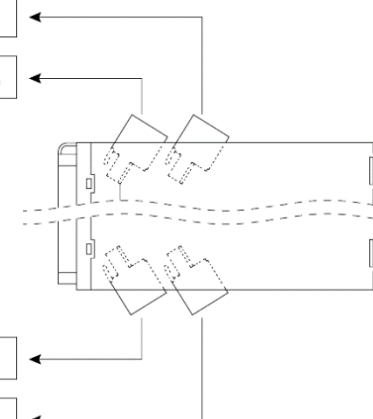

Commercial Reference

XPSAXE5120C

XPSAXE5120P

Commercial Reference

XPSBAC14AC


XPSBAC14AP

XPSAXE is replaced by XPSBAC

XPSAXE




XPSBAC

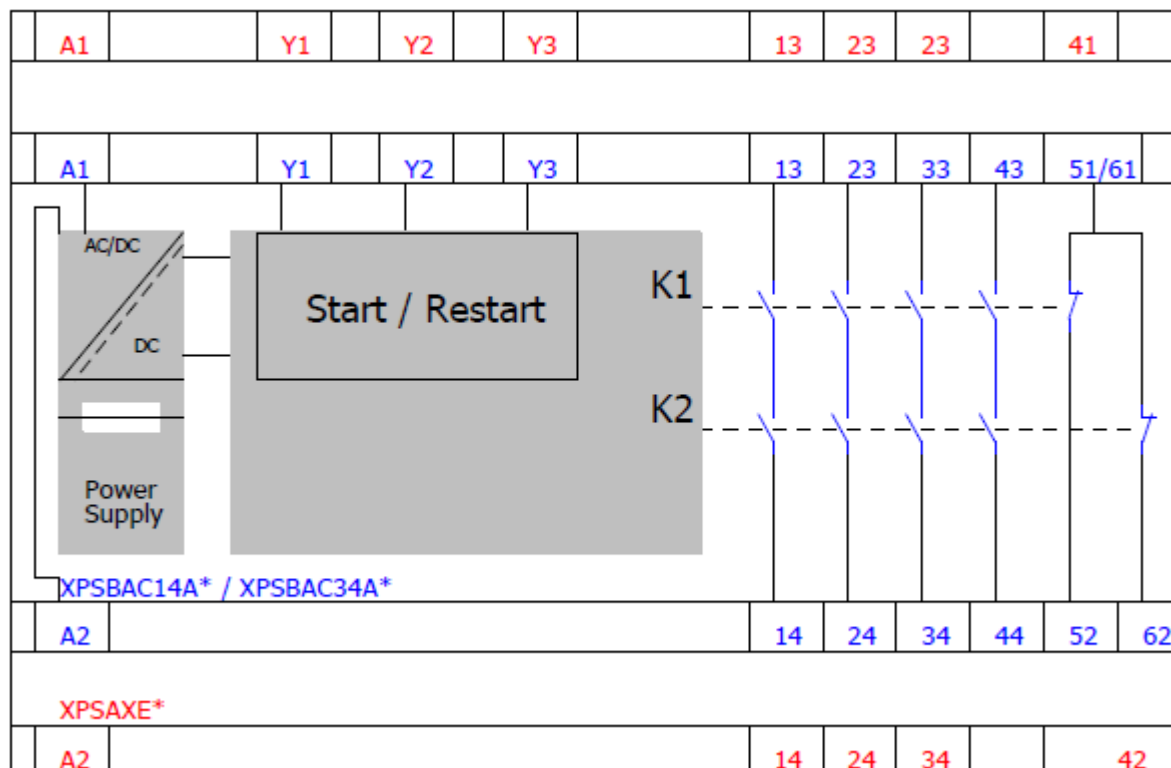

Wiring **Emergency Stop** diagram XPSAXE & XPSBAC


XPSAXE

XPSBAC

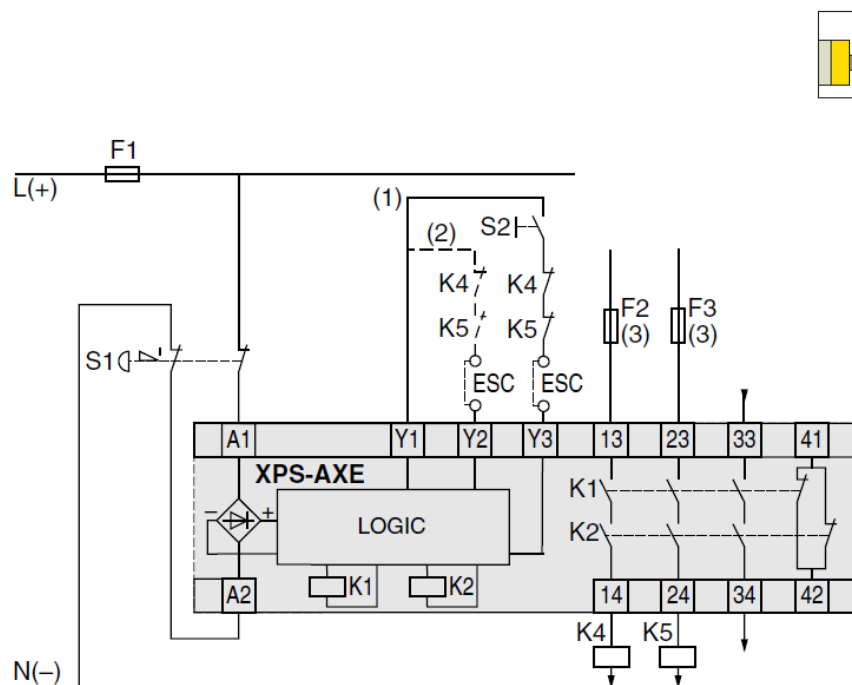

ESC =
Conditions de démarrage
externes
External start conditions
Externe Startbedingungen
(1) =
Reset manuel
Manual reset
Manueller Reset

(2) =
Reset automatique
Automatic reset
Automatischer Reset
(3) =
Voir caractéristiques
techniques pour le calibre
maximal des fusibles.
See Technical Data for
maximum fuse sizes.
Siehe technische Daten für
max. Sicherung.

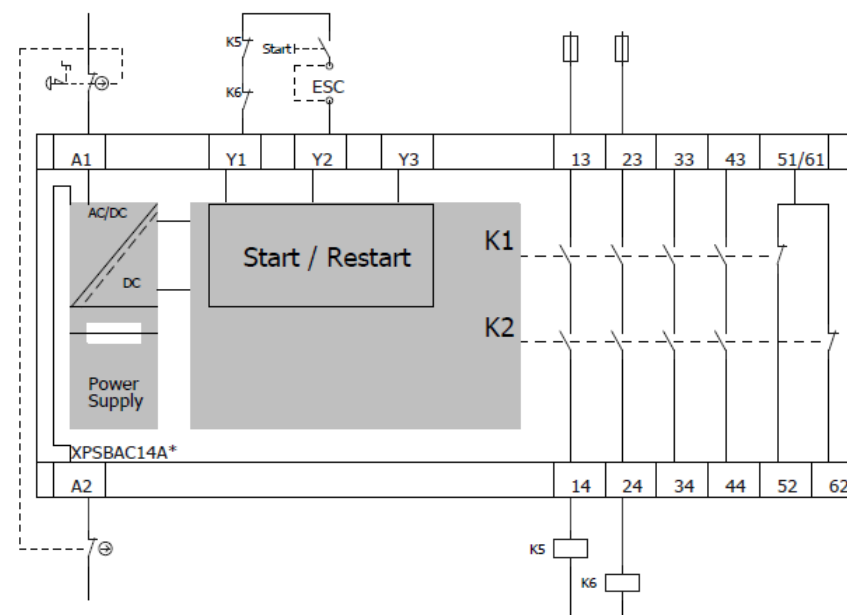

Y1- Control output of Start/Restart input
Y2- Input channel for automatic/manual start/restart
Y3- Input channel for monitored start/restart with falling edge


Note:

1. The two normally closed relay contacts (terminals 51/61, 52, 62) can be connected in series or in parallel, please refer to page 34 of your user guide
2. Install fuses with the rating specified in the chapter Electrical Characteristics, page 20 of your user guide.
3. With appropriated input and output devices, XPSBAC can reach up to PLe, SILCL3

Wiring **Emergency Stop single channel** diagram XPSAXE & XPSBAC

XPSAXE

XPSBAC

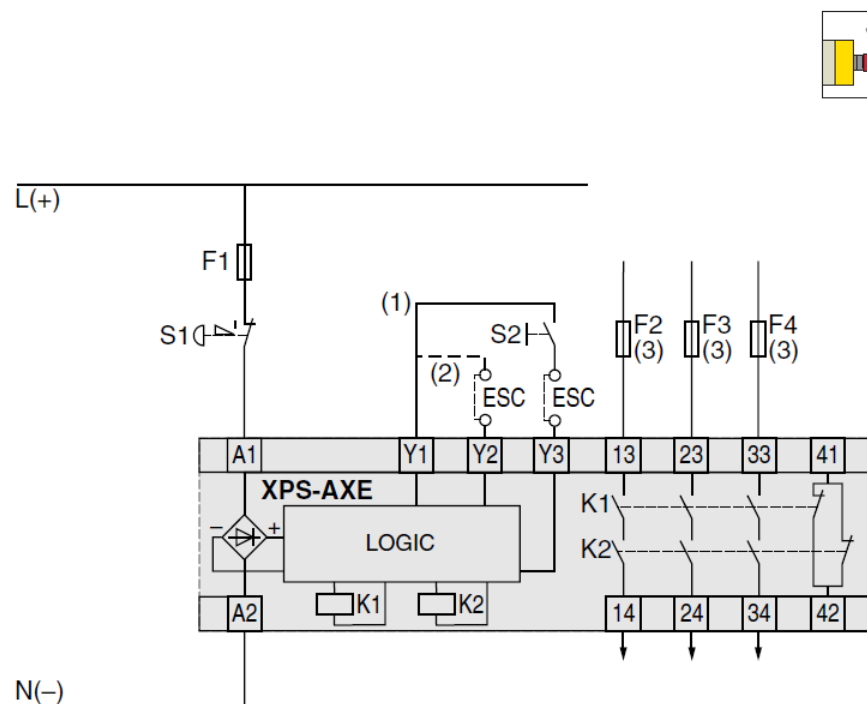


ESC =
Conditions de démarrage
externes
External start conditions
Externe Startbedingungen

(1) =
Reset manuel
Manual reset
Manueller Reset

(2) =
Reset automatique
Automatic reset
Automatischer Reset

(3) =
Voir caractéristiques
techniques pour le calibre
maximal des fusibles.
See Technical Data for
maximum fuse sizes.
Siehe technische Daten für
max. Sicherung.

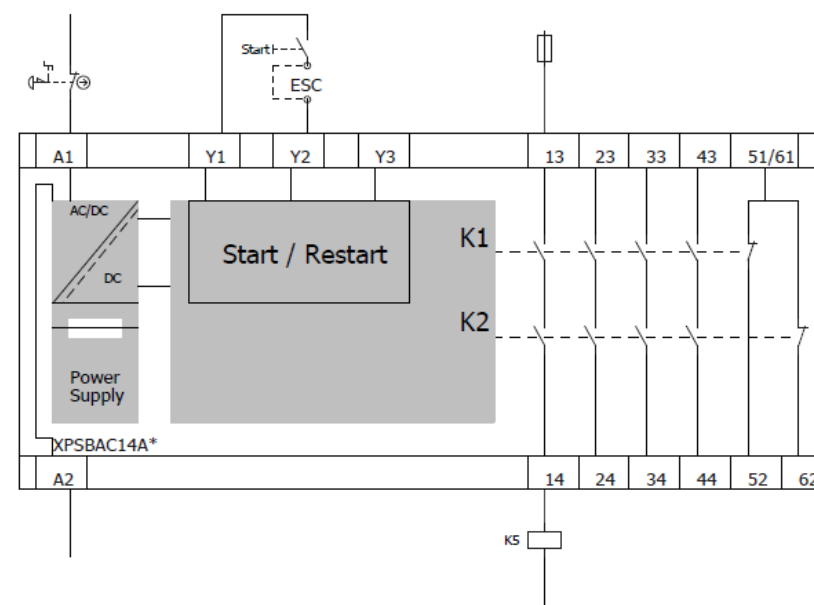

Y1- Control output of Start/Restart input
Y2- Input channel for automatic/manual start/restart
Y3- Input channel for monitored start/restart with falling edge

Note:

1. The two normally closed relay contacts (terminals 51/61, 52, 62) can be connected in series or in parallel, please refer to page 34 of your user guide
2. Install fuses with the rating specified in the chapter Electrical Characteristics, page 20 of your user guide.
3. With appropriated input and output devices, XPSBAC can reach up to PLC, SILCL1

CAUTION

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.