


ONE PER FUSE.

TIENE ADAPTADORES
PARA RECHAZAR
RENTES DE CLASE R.
LE.

E COMPREND TROIS
DE FUSIBLES POUR
FUSIBLES AUTRES QUE
SE R. UN PAR FUSIBLE.

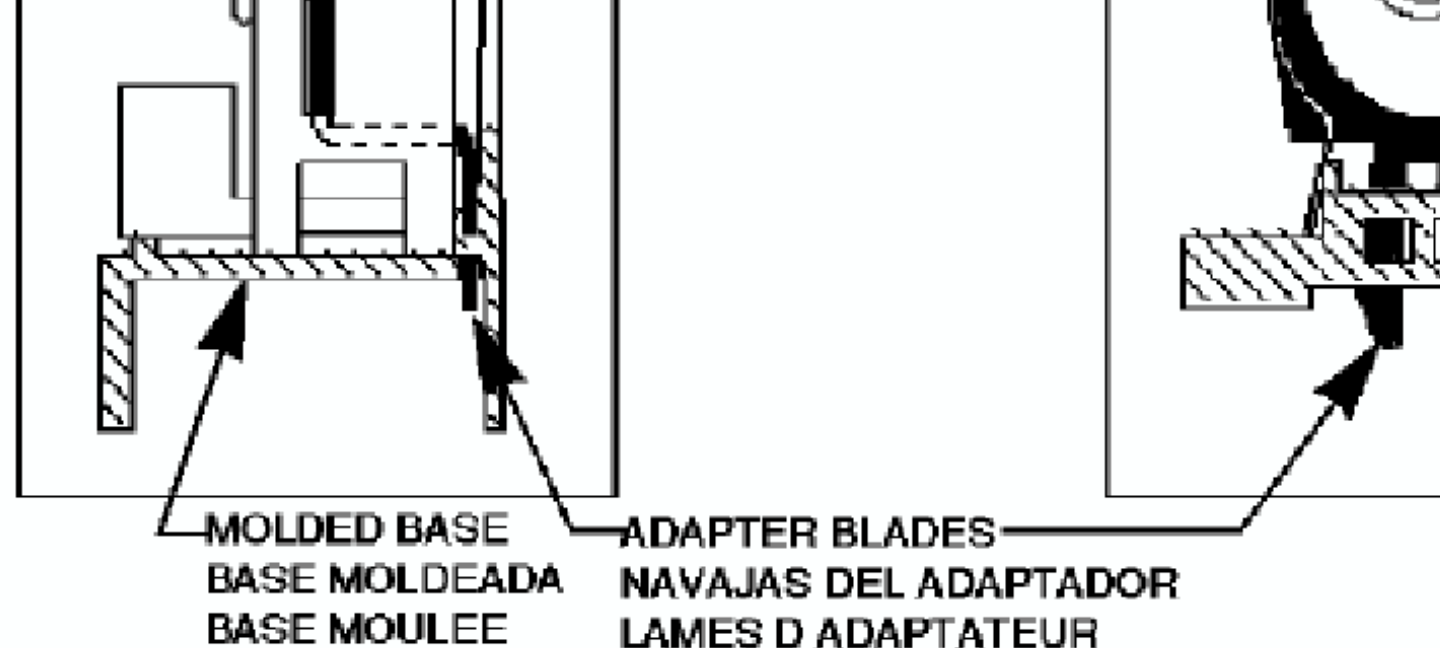

TURN OFF AND DISCONNECT POWER AHEAD OF SWITCH BEFORE INSTALLING FUSIBLES. FUSIBLES GOES ON THE LOAD BASE ONLY. EACH FUSE HAS REJECTION PROVISIONS ON ONE END ONLY. BLADES ON MOLDED BASE NEAR FUSE CLIP.

INSERT FIRMLY INTO SLOTS IN BASE WITH BARBS GOING INTO SLOTS IN EITHER SIDE OF FUSE CLIP. MAKE SURE FUSE IS UNDER FUSE CLIP SO THAT ADAPTER CANNOT BE REMOVED.

APAGUE Y DESCONECTE LA ENERGIA ADELANTE DEL INTERRUPTOR ANTES DE INSTALAR LOS ADAPTADORES DE FUSIBLE.

EL FUSIBLE VA UNICAMENTE EN LA BASE DE CARGA. CADA FUSIBLE TIENE PROVISIONES DE RECHAZO EN UNO DE LOS EXTREMOS. LAS NAVAJAS DEL ADAPTADOR VAN DENTRO DE LAS RANURAS DE LA BASE MOLDEADA CERCA DEL PORTAFUSIBLE. INSERTE FIRMEMENTE AL ADAPTADOR DENTRO DE LAS RANURAS DE LA BASE CON LAS PUNTAS DEL ADAPTADOR EN LAS RANURAS DE LA BASE DE MANERA QUE EL ADAPTADOR NO PUEDE SER REMOVIDO.

ARRÊTEZ ET DEBRANCHEZ LE COURANT EN AMONT DU DISJONCTEUR AVANT D'INSTALLER LES ADAPTATEURS DE FUSIBLES.

LE FUSIBLE VA SUR LA BASE DE CHARGE SEULEMENT. CHAQUE FUSIBLE A DES DISPOSITIFS DE REJET SUR UN SEUL DES DEUX EXTRÊMITÉS. LES LAMES SUR LES ADAPTATEURS S'ADAPTENT DANS LES FENTES DE LA BASE MOULEE PRES DE LA PINCE À FUSIBLE. INSÉRÉZ FERMEMENT DANS LES FENTES DE LA BASE LES CROCHETS ENTRANT DANS LES FENTES DE CHAQUE CÔTÉ