Low Voltage

EasyPact MVS

LV power circuit breakers and switch-disconnectors
800 to 4000A

Catalogue
2018



Schneider Electric

Exceptional reliability,flexibility and convenience

+

Quality and safety you can trust

=

Performance without compromise

Outstanding value for an optimized feature set

Buildings

Industry

Panelbuilders

EasyPact MVS range

The easy choice for reliable performance



- > Performance without compromise
- > Assured quality and safety you can trust
- > Deliver exceptional reliability and flexibility in its class
- > Outstanding value for an optimized feature set
- > Precision engineered to meet your needs
- > Unbeatable value throughout its lifecycle
- > Simple to choose and easy to install

Choose the leader

- 800 to 4000A ratings
- Breaking capacity: 50 & 65kA
- Suitable for 690V applications
- Complete selectivity with Ics=Icu=Icw (1 s)
- Intelligent ET range of trip system with display
- Fully protected neutral on 4 pole breakers
- Common accessories for complete range
- Conforms to IEC 60947- 2 & 3



EasyPact MVS Benefits for every customer

EasyPact MVS08 to MVS40

Panel builders/ contractors

- Single frame size from 800 to 4000A with identical door cut-outs
- Suitable for copper & Aluminium termination with a single pole pitch of 115 mm
- Terminal orientation can be converted from horizontal to vertical and vice-versa at workshop
- Direct mounting Door frames (escutcheon) without drilling any holes
- Front fitted accessories like under-volt release, shunt release & closing coil for complete range
- Conversion of manual operated breaker in to electrical operated, with single bolt fixing

EasyPact MVS with single frame size,common accessories helps to increase the shop floor efficiency,enabling faster delivery of swith boards.

End Users

- Moulded case design ensures high endurance without maintenance
- Intelligent ET range of trip system with thermal memory and display for measurements.
- Overload run alarm & individual LED indications enable fault identification
- Icu=Ics=Icw(1sec)=50kA & 65kA ensures complete selectivity
- Inbuilt safety shutter & interlocks
- Designed to provide utmost user safety during installation, during use, and while under maintenance.
- All 4 pole breakers are with fully rated neutral and protected with adjustable settings at OFF – 50%-100%

EasyPact MVS answers even to the most stringent application with most reliable distribution systems assuring continuity of service

Designers

- Conforms to IEC60947-2 for breakers & IEC60947-3 for disconnectors
- Designed and manufactured using advanced manufacturing methods to match your quality expectations and the needs of each project.
- Continuous rated coils helps in simple interlocking schemes
- Extensive choice of software tools & documentation to reduce design time.
- EasyPact MVS respects the environment throughout their life cycle

EasyPact MVS is designed to meet the needs of your customers with flexibility to achieve system efficiency during the design phase







The Key values

90%

of applications are covered

The performance you need

EasyPact MVS provides the ideal level of capability for your installation from 800 to 4000 A.

Reduce stock by up to

30%

At a cost-effective investment

Pay for what you need: Get outstanding durability with the features you need, with the benefit of easy to order and stock.

100%

Commitment to quality

With the quality you demand

Designed and manufactured by Schenider Electric using advanced manufacturing methods and premium materials.


Gain peace of mind and optimised cost for every installation



Green Premium, stamping the most eco-friendly products of the industry

Green Premium™ Product

Green Premium is the only label allowing you to develop effectively an environmental policy and to promote it, while preserving your business efficiency.

It guarantees compliance with the most up-to-date environmental regulations, but it is more than this.

With Green Premium eco-mark, Schneider Electric helps you:

- Calculate the carbon footprint of the solutions you offer
- Ensure full regulation compliance about substances and chemical components
- Deliver all appropriate information to certify eco-design of your solutions
- Easily manage products end of life, while ensuring optimized recycling.

With Green Premium, Schneider Electric commits to be transparent disclosing extensive and reliable information on environmental impacts of its products:

RoHS

Schneider Electric applies RoHS requirements to all its products and worldwide, even for the numerous ones which are not in the scope of the regulation. Compliance certificates are available for all products involved.

REACh

Schneider Electric applies REACh regulation worldwide, and releases all information about presence of Substances of Very High-Concern (SVHC) in its products.

PEP: Product Environmental Profile

For all its products, Schneider Electric publishes the most complete set of environmental data, including carbon footprint and energy consumption for each of the life cycle phases, in compliance with ISO 14025 PEPecopassport program.

EoLI: End of Life Instructions

Available at a click, these documents provide:

- Recyclability rates of the products
- Information to mitigate personnel hazards during dismantling and before recycling operations
- Parts identification either for re-use, or for selective treatment to mitigate environmental hazards, or incompatibility with usual recycling process.

Discover what we mean by green .... and

CHECK a PRODUCT!

General contents

Functions and characteristics A-1

Installation recommendations B-1

Dimensions and connection C-1

Electrical diagrams D-1

Additional characteristics E-1

Catalogue numbers and order form F-1

Functions and characteristics

Functions and characteristics

General overview **A-2**
Detailed contents A-2

Circuit breakers and switch-disconnectors **A-4**
MVS08 to MVS40 A-4

Identifying ET range of trip system **A-6**

Overview of functions **A-8**
ET trip system A-8
ETA trip system A-10
ETV trip system A-12

ET range of trip system **A-14**
Accessories and test equipment A-14

Connections **A-15**
Overview of solutions and accessories A-15
Accessories and auxiliaries A-17

Locking **A-19**
On the device A-19
On the chassis A-20

Indication contacts **A-21**

Remote operation **A-22**
Remote ON / OFF A-22
Remote tripping A-24

Source-changeover systems **A-25**
Mechanical interlocking A-25

Accessories **A-26**

Installation recommendations *B-1*
Dimensions and connection *C-1*
Electrical diagrams *D-1*
Additional characteristics *E-1*
Catalogue numbers and order form *F-1*

General overview
Detailed contents

This overview describes all the functions offered by EasyPact MVS devices.

CPB100000



CDB500000



ET2I trip system.

CDB500001



ET5S trip system.

CDB500002



ET6G trip system.

Circuit breakers and switch-disconnectors page A-4
- Ratings:
  - EasyPact MVS 800 to 4000 A
- Circuit breakers type N, H
- Switch-disconnectors type NA, HA
- 3 or 4 poles
- Fixed or draw-out versions


ET trip system page A-8
- 2I basic protection
- 5S selective protection
- 6G selective + earth-fault protection
- Standard long-time rating plug:
  - Current setting (A) 0.4 to 1 x In

ETA trip system with current measurement page A-10
- 2I basic protection
- 5S selective protection
- 6G selective + earth-fault protection
- Standard long-time rating plug:
  - Current setting (A) 0.4 to 1 x In
- External power-supply module

ETV trip system with voltage measurement page A-12
- 2I basic protection
- 5S selective protection
- 6G selective + earth-fault protection
- Standard long-time rating plug:
  - Current setting (A) 0.4 to 1 x In
- External power-supply module

Connections page A-15
- Rear connection:
  - Horizontal
  - Vertical
- Optional accessories:
  - Interphase barriers
  - Safety shutters and shutter locking blocks

E46459



Safety shutters


DB101149



Interphase barriers


Locking page A-18
- Pushbutton locking by padlockable transparent cover
- OFF-position locking by keylock
- Chassis locking in disconnected position by keylock
- Chassis locking in connected, disconnected and test positions
- Door interlock (inhibits door opening with breaker in ‘connected’ or ‘test’ position

DB101109

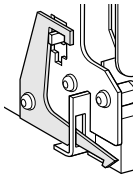

Door interlock

DB101110

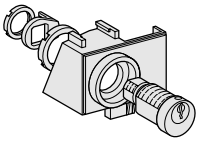

Chassis key lock

PB104354A40



CPB100003



CPB100015




CPB100016



Indication contacts page A-20


- ■ Standard:
- □ ON/OFF indication (OF)
- □ "Fault" trip indication (SDE)
- ■ Optional:
- □ Additional ON/OFF indication (OF)
- □ Ready-to-close contact (PF)
- □ Carriage switches for connected (CE) disconnected (CD) and test (CT) positions

E46438



Ready-to-close contact

DB101112

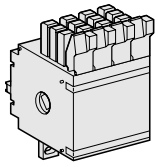


OF contact

Remote operation page A-21


- ■ Remote ON/OFF:
- □ Gear motor
- □ XF closing or MX opening voltage releases
- ■ Remote tripping function:
- □ MN voltage release
- - Standard
- - Adjustable or non-adjustable delay

DB101113

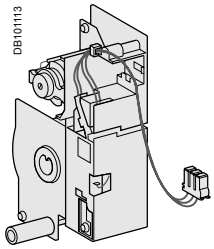

Gear motor

DB101114




MX, XF and MN volage releases

Accessories page A-25

- ■ Auxiliary terminal shield
- ■ Operation counter
- ■ Escutcheon (Door sealing frame)
- ■ Transparent cover for escutcheon
- ■ Escutcheon blanking plate

E46668

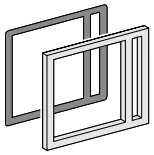


Escutcheon

E46669



Transparent cover

DB101115

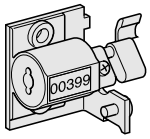


Mechanical operation counter

Source-changeover systems page A-24

- ■ Mechanical interlocking using cables:
- □ Interlocking between two devices
- □ Interlocking between three devices

CDB500053

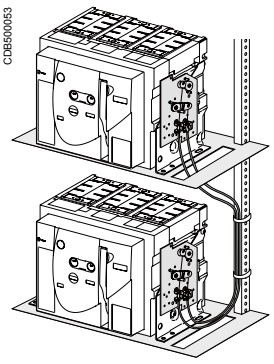

Interlocking of two devices

Circuit breakers and switch-disconnectors
MVS08 to MVS40

CPB100000



Circuit breaker.

CPB100014



Switch disconnector.

Common characteristics			
Number of poles			3/4
Rated insulation voltage (V)	Ui		1000
Impulse withstand voltage (kV)	Uimp		12
Rated operational voltage (V AC 50/60 Hz)	Ue		690
Suitability for isolation	IEC 60947-2		Yes
Degree of pollution	IEC 60664-1		4
Basic circuit-breaker			
Circuit-breaker as per IEC 60947-2			
Rated current (A)	In		at 40°C(1)
Rating of 4th pole (A)			
Sensor ratings (A)			
Type of circuit breaker			
Ultimate breaking capacity (kA rms)	Icu		220...440V
V AC 50/60 Hz			690 V
Rated service breaking capacity (kA rms)	Ics		% Icu
Utilisation category			
Rated short-time withstand current (kA rms)	Icw	1s	220...440 V
V AC 50/60 Hz			690V
		3s	440/690V
Rated making capacity (kA peak)	Icm		220...440 V
V AC 50/60 Hz			690 V
Breaking time (ms) between tripping order and arc extinction			
Closing time (ms)			
Switch-disconnector as per IEC60947-3 and Annex A			
Type of switch-disconnector			
Operational current AC23A			
Rated making capacity (kA peak)	Icm		
Rated short-time withstand current (kA rms)	Icw	1s	
		3s	
Maintenance/Connection/Installation			
Service life C/O cyclesx1000	Mechanical	with maintenance	
		without maintenance	
	Electrical	without maintenance	440 V
			690 V
Connection		Horizontal	
		Vertical	
Dimensions (mm) (H x W x D)		Draw-out	3P
			4P
		Fixed	3P
			4P
Weight (kg) (approximate)		Draw-out	3P/4P
		Fixed	3P/4P

(1) Refer page no. B-12 for details on temperature derating.

	MVS08		MVS10		MVS12		MVS16		MVS20		MVS25		MVS32		MVS40	
	800		1000		1250		1600		2000		2500		3200		4000	
	800		1000		1250		1600		2000		2500		3200		4000	
	800		1000		1250		1600		2000		2500		3200		4000	
	N	**H**	**N**	**H**	**N**	**H**	**N**	**H**	**N**	**H**	**N**	**H**	**N**	**H**	**N**	**H**
	50	65	50	65	50	65	50	65	50	65	50	65	50	65	55	65
	42	50	42	50	42	50	42	50	42	50	42	50	42	50	42	50
	100%		100%		100%		100%		100%		100%		100%		100%	
	B		B		B		B		B		B		B		B	
	50	65	50	65	50	65	50	65	50	65	50	65	50	65	55	65
	42	50	42	50	42	50	42	50	42	50	42	50	42	50	42	50
	25	36	25	36	25	36	25	36	25	36	25	36	25	36	30	36
	105	143	105	143	105	143	105	143	105	143	105	143	105	143	121	143
	88	105	88	105	88	105	88	105	88	105	88	105	88	105	88	105
	25		25		25		25		25		25		25		25	
	<70		<70		<70		<70		<70		<70		<70		<70	
	MVS08		**MVS10**		**MVS12**		**MVS16**		**MVS20**		**MVS25**		**MVS32**		**MVS40**	
	NA	**HA**	**NA**	**HA**	**NA**	**HA**	**NA**	**HA**	**NA**	**HA**	**NA**	**HA**	**NA**	**HA**	**NA**	**HA**
	800		1000		1250		1600		2000		2500		3200		4000	
	105	143	105	143	105	143	105	143	105	143	105	143	105	143	121	143
	50	65	50	65	50	65	50	65	50	65	50	65	50	65	55	65
	25	36	25	36	25	36	25	36	25	36	25	36	25	36	30	36
	20		20		20		20		20		20		20		20	
	10		10		10		10		10		10		10		10	
	6000		6000		6000		6000		6000		5000		5000		5000	
	4000		4000		4000		4000		4000		2500		2500		2500	
	Yes															
	Yes															
	439 x 441 x 395															
	439 x 556 x 395															
	352 x 422 x 297															
	352 x 537 x 297															
	70/85										90/120					
	40/50										60/80					

Identifying ET range of trip system

EasyPact MVS circuit breakers equipped with ET range of trip system are designed to protect power circuit and connected loads.
Measurement of current and voltage helps users to maintain continuity of service and optimize installation.

CPB100011



Dependability

Integration of protection functions in an ASIC electronic component used in all trip units guarantees a high degree of reliability and immunity to conducted or radiated disturbances.
On ET range, measurement functions are managed by an independent microprocessor. Protection functions are independent of measurement functions, ensure system protection even at very low load currents.

Accessories


Certain functions require the addition of trip unit accessories, described on page A-14.

Trip unit name codes

Type of protection
- 2I for basic protection
- 5S for selective protection
- 6G for selective + earth-fault protection


Type of measurement
- ET for basic
- ETA for “Current”
- ETV for “Current” and “Voltage”

ET2I: basic protection

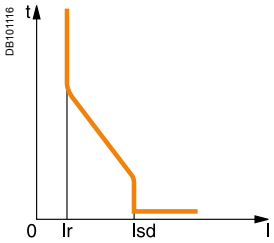


Protection:
long time
+ instantaneous

ET5S: selective protection

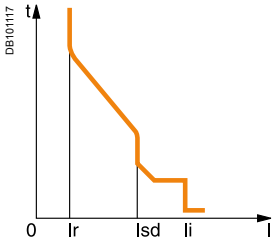

Protection:
long time
+ short time
+ instantaneous

ET6G: selective + earth-fault protection

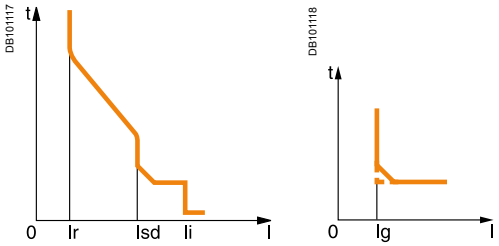


Protection:
long time
+ short time
+ instantaneous
+ earth fault

Protection and measurement functions

ET	ETA	ETV
■ Fault indications ■ Settings in amperes and in seconds	■ I_1, I_2, I_3, I_N, $I_{earth-fault}$, and maximeter for these measurements: □ Fault indications □ Settings in amperes and in seconds	■ Incorporates all the rms measurements of ETA trip unit, plus voltage readings: □ Calculates the current demand value □ "Quickview" function for the automatic cyclical display of the most useful values
2I  CDB500000	**2I**  CDB500028	**2I**  CDB500035
5S  CDB500001	**5S**  CDB500029	**5S**  CDB500030
6G  CDB500002	**6G**  CDB500003	**6G**  CDB500004

Overview of functions
ET trip system

ET trip unit protect power circuits, under overload & short-circuit conditions. They are equipped with individual fault trip indication LEDs. ET6G provides earth-fault protection.

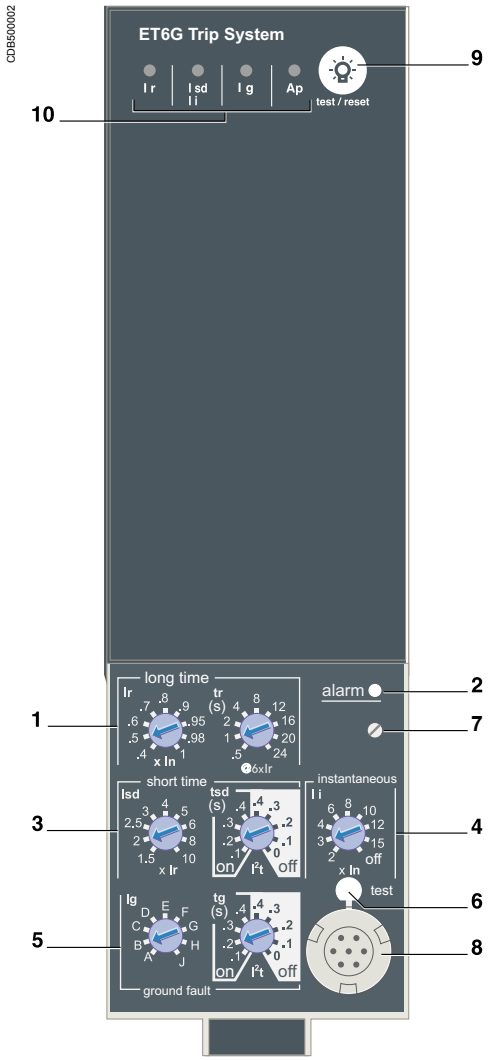

1 Long-time threshold and tripping delay.
2 Overload alarm (LED) at 1,125 Ir.
3 Short-time pick-up and tripping delay.
4 Instantaneous pick-up.
5 Earth-fault pick-up and tripping delay.
6 Earth-fault test button.
7 Long-time rating plug screw.
8 Test connector.
9 Lamp test, reset and battery test.
10 Indication of tripping cause.

(1) The thermal memory continuously accounts for the amount of heat in the cables , both before and after tripping , whatever the value of the current(presence of an overload or not).The thermal memory optimises the long-time protection function of the circuit breaker by taking into account the temperature rise in the cables .The thermal memory assumes a cable cooling time of approximately 20 minutes.
(2) Refer to page D-5 for more details on ZSI.

***Note:** ET trip control units come with a transparent leadseal cover as standard.*

Protection
Protection thresholds and delays are set using the adjustment dials.

Overload protection
True rms long-time protection.
Protects cables (phase and neutral) against overloads
Thermal memory(1): thermal image before and after tripping.

Short-time protection
- The short-time protection function protects the distribution system against impedant short-circuits
- The short-time tripping delay can be used to ensure discrimination with downstream circuit breaker
- The I^2t ON and I^2t OFF options enhance discrimination with a downstream protection devices
- Use of I^2t curves with short-time protection:
  - I^2t OFF selected: the protection function implements a constant time curve
  - I^2t ON selected: the protection function implements an I^2t inverse-time curve up to 10 Ir. Above 10 Ir, the time curve is constant

Earth-fault protection on ET6G trip system
Residual earth fault protection.
Selection of I^2t type (ON or OFF) for delay.
A ground fault in the protection conductors can provoke local temperature rise at the site of the fault or in the conductors. The purpose of the ground-fault protection function is to eliminate this type of fault.

Type	Description
Residual	■ The function determines the zero-phase sequence current, i.e. the vectorial sum of the phase and neutral currents ■ It detects faults downstream of the circuit breaker

Instantaneous protection
The Instantaneous-protection function protects the distribution system against solid short-circuits. Contrary to the short-time protection function, the tripping delay for instantaneous protection is not adjustable. The tripping order is sent to the circuit breaker as soon as current exceeds the set value, with a fixed time delay of 20 milliseconds.

Neutral protection
On three-pole circuit breakers, neutral protection is not possible.
On four-pole circuit breakers, neutral protection may be set using a three-position switch: neutral unprotected (4P 3d), neutral protection at 0.5 Ir (4P 3d + N/2), neutral protection at Ir (4P 4d).

Zone selective interlocking (ZSI)
A ZSI(2) terminal block may be used to interconnect a number of control units to provide total discrimination for short-time and earth-fault protection, without a delay before tripping.

Overload alarm
A yellow alarm LED goes on when the current exceeds the long-time trip threshold.


Fault indications
LEDs indicate the type of fault:
- Overload (long-time protection Ir)
- Short-circuit (short-time Isd or instantaneous Ii protection)
- Earth fault (Ig)
- Internal fault (Ap)

Battery power
The fault indicating LEDs are powered by an in-built battery. The fault indication LEDs remain on until the test/reset button is pressed.

Test
A hand-held test kit may be connected to the test connector on the front to check circuit-breaker operation. For ET6G trip unit, the operation of earth-fault protection can be checked by pressing the test button located above the test connector.


Protection — ET2I


Long time			ET2I								
Current setting (A)	**Ir** = In x ...		0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Tripping between 1.05 and 1.20 x Ir											
Time setting		**tr (s)**	0.5	1	2	4	8	12	16	20	24
Time delay (s)	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
	Accuracy: 0 to -20 %	6 x Ir	0.7(1)	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7(2)	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory			20 minutes before and after tripping								
(1) 0 to -40 % - (2) 0 to -60 %											
Instantaneous											
Pick-up (A)	**Isd** = Ir x ...		1.5	2	2.5	3	4	5	6	8	10
Accuracy: ±10 %											
Time delay			Max resettable time: 20 ms Max break time: 80 ms								

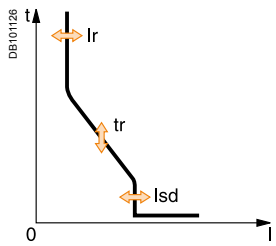

Protection — ET5S/ET6G

Long time			ET5S/ET6G								
Current setting (A)	**Ir** = In x ...		0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Tripping between 1.05 and 1.20 x Ir											
Time setting		**tr (s)**	0.5	1	2	4	8	12	16	20	24
Time delay (s)	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
	Accuracy: 0 to -20 %	6 x Ir	0.7(1)	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7(2)	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory			20 minutes before and after tripping								
(1) 0 to -40 % - (2) 0 to -60 %											
Short time											
Pick-up (A)	**Isd** = Ir x ...		1.5	2	2.5	3	4	5	6	8	10
Accuracy: ±10 %											
Time setting tsd (s)	Settings	I^2t Off	0	0.1	0.2	0.3	0.4				
		I^2t On	-	0.1	0.2	0.3	0.4				
Time delay (ms) at 10 x Ir	**tsd** (max resettable time)		20	80	140	230	350				
(I^2t Off or I^2t On)	**tsd** (max break time)		80	140	200	320	500				
Instantaneous											
Pick-up (A)	**Ii** = In x ...		2	3	4	6	8	10	12	15	off
Accuracy: ±10 %											
Time delay			Max resettable time: 20 ms Max break time: 50 ms								
Earth fault			**ET6G**								
Pick-up (A)	**Ig** = In x ...		A	B	C	D	E	F	G	H	J
Accuracy: ±10 %	In ⩽ 400 A		0.3	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	400 A < In ⩽ 1000 A		0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	In ⩾ 1250 A		500	640	720	800	880	960	1040	1120	1200
Time setting tg (s)	Settings	I^2t Off	0	0.1	0.2	0.3	0.4				
		I^2t On	-	0.1	0.2	0.3	0.4				
Time delay (ms)	**tg** (max resettable time)		20	80	140	230	350				
at In or 1200 A (I^2t Off or I^2t On)	**tg** (max break time)		80	140	200	320	500				

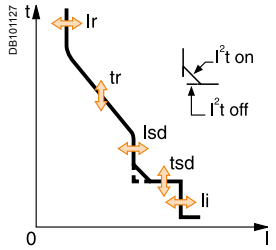


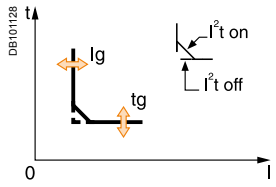

Note: *All current-based protection functions require no auxiliary source.*
The test / reset button, clears the tripping indication and tests the battery.

Overview of functions
ETA trip system

ETA trip units include all functions offered by ET trip unit. In addition, they also offer measurements, display and current maximeters.

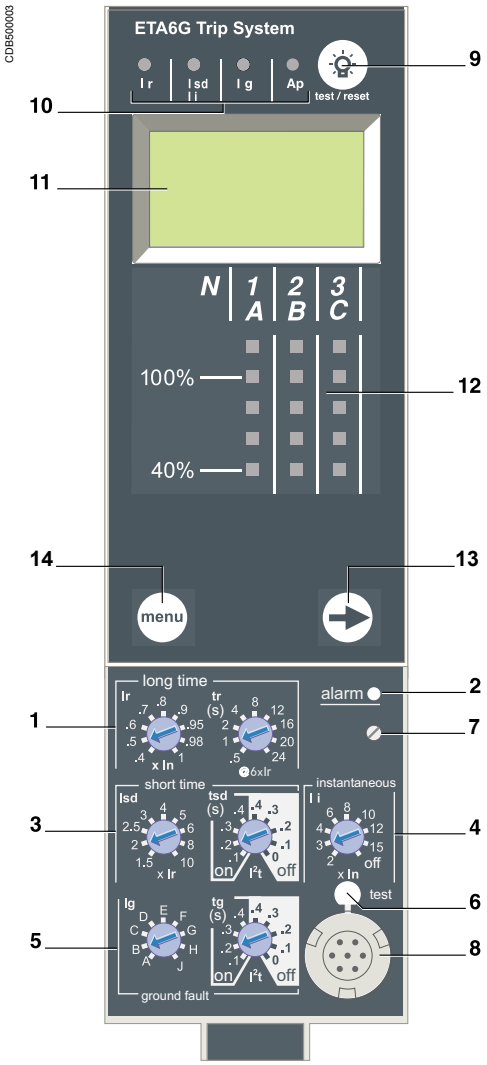

1 Long-time threshold and tripping delay.
2 Overload alarm (LED) at 1,125 Ir.
3 Short-time pick-up and tripping delay.
4 Instantaneous pick-up.
5 Earth-fault pick-up and tripping delay.
6 Earth-fault test button.
7 Long-time rating plug screw.
8 Test connector.
9 Lamp test, reset and battery test.
10 Indication of tripping cause.
11 Digital display.
12 Three-phase bargraph and ammeter.
13 Navigation button to view menu contents.
14 Navigation button to change menu.

(1) The thermal memory continuously accounts for the amount of heat in the cables , both before and after tripping , whatever the value of the current(presence of an overload or not).The thermal memory optimises the long-time protection function of the circuit breaker by taking into account the temperature rise in the cables .The thermal memory assumes a cable cooling time of approximately 20 minutes.
(2) Refer to page D-5 for more details on ZSI.

***Note:** ETA trip units come with a transparent leadseal cover as standard.*

"Ammeter" measurements

ETA trip units measure the true (rms) value of currents.
They provide continuous current measurements from 0.2 to 1.2 In and are accurate to within 1.5 % (including the sensors).
A digital LCD screen continuously displays the most heavily loaded phase (Imax) or displays the I_1, I_2, I_3, I_N, I_g, stored-current (maximeter) and setting values by successively pressing the navigation button.
The optional external power supply makes it possible to display currents < 20 % In. Below 0.1 In, measurements are not significant. Between 0.1 and 0.2 In, accuracy changes linearly from 4 % to 1.5 %.

Protection

Protection thresholds and delays are set using the adjustment dials.

Overload protection

True rms long-time protection.
Protects cables (phase and neutral) against overloads
Thermal memory(1): thermal image before and after tripping.

Short-time protection

- The short-time protection function protects the distribution system against impedant short-circuits
- The short-time tripping delay can be used to ensure discrimination with downstream circuit breaker
- The I^2t ON and I^2t OFF options enhance discrimination with a downstream protection devices
- Use of I^2t curves with short-time protection:
  - I^2t OFF selected: the protection function implements a constant time curve
  - I^2t ON selected: the protection function implements an I^2t inverse-time curve up to 10 Ir. Above 10 Ir, the time curve is constant

Earth-fault protection on ETA6G trip system

Residual earth fault protection.
Selection of I^2t type (ON or OFF) for delay.
A ground fault in the protection conductors can provoke local temperature rise at the site of the fault or in the conductors. The purpose of the ground-fault protection function is to eliminate this type of fault.

Type	Description
Residual	■ The function determines the zero-phase sequence current, i.e. the vectorial sum of the phase and neutral currents ■ It detects faults downstream of the circuit breaker

Instantaneous protection

The Instantaneous-protection function protects the distribution system against solid short-circuits. Contrary to the short-time protection function, the tripping delay for instantaneous protection is not adjustable. The tripping order is sent to the circuit breaker as soon as current exceeds the set value, with a fixed time delay of 20 milliseconds.

Neutral protection

On three-pole circuit breakers, neutral protection is not possible.
On four-pole circuit breakers, neutral protection may be set using a three-position switch: neutral unprotected (4P 3d), neutral protection at 0.5 Ir (4P 3d + N/2), neutral protection at Ir (4P 4d).

Zone selective interlocking (ZSI)

A ZSI(2) terminal block may be used to interconnect a number of control units to provide total discrimination for short-time and earth-fault protection, without a delay before tripping.

Overload alarm

A yellow alarm LED goes on when the current exceeds the long-time trip threshold.

Fault indications

LEDs indicate the type of fault:
- Overload (long-time protection Ir)
- Short-circuit (short-time Isd or instantaneous Ii protection)
- Earth fault (Ig)
- Internal fault (Ap)

Battery power


The fault indicating LEDs are powered by an in-built battery. The fault indication LEDs remain on until the test/reset button is pressed.

Test

A hand-held test kit may be connected to the test connector on the front to check circuit-breaker operation. For ETA6G trip unit, the operation of earth-fault protection can be checked by pressing the test button located above the test connector.


Protection — ETA2I


Long time			ETA2I								
Current setting (A)	**Ir** = In x ...		0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Tripping between 1.05 and 1.20 x Ir											
Time setting		**tr (s)**	0.5	1	2	4	8	12	16	20	24
Time delay (s)	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
	Accuracy: 0 to -20 %	6 x Ir	0.7(1)	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7(2)	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory			20 minutes before and after tripping								
(1) 0 to -40 % - (2) 0 to -60 %											
Instantaneous											
Pick-up (A)	**Isd** = Ir x ...		1.5	2	2.5	3	4	5	6	8	10
Accuracy: ±10 %											
Time delay			Max resettable time: 20 ms								
			Max break time: 80 ms								

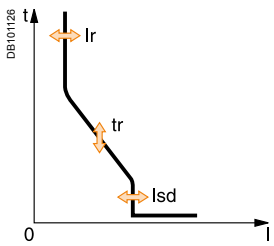

Protection — ETA5S/ETA6G

Long time			ETA5S/ETA6G								
Current setting (A)	**Ir** = In x ...		0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Tripping between 1.05 and 1.20 x Ir											
Time setting		**tr (s)**	0.5	1	2	4	8	12	16	20	24
Time delay (s)	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
	Accuracy: 0 to -20 %	6 x Ir	0.7(1)	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7(2)	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory			20 minutes before and after tripping								
(1) 0 to -40 % - (2) 0 to -60 %											
Short time											
Pick-up (A)	**Isd** = Ir x ...		1.5	2	2.5	3	4	5	6	8	10
Accuracy: ±10 %											
Time setting tsd (s)	Settings	I^2t Off	0	0.1	0.2	0.3	0.4				
		I^2t On	-	0.1	0.2	0.3	0.4				
Time delay (ms) at 10 x Ir	**tsd** (max resettable time)		20	80	140	230	350				
(I^2t Off or I^2t On)	**tsd** (max break time)		80	140	200	320	500				
Instantaneous											
Pick-up (A)	**Ii** = In x ...		2	3	4	6	8	10	12	15	off
Accuracy: ±10 %											
Time delay			Max resettable time: 20 ms								
			Max break time: 50 ms								
Earth fault			**ETA6G**								
Pick-up (A)	**Ig** = In x ...		A	B	C	D	E	F	G	H	J
Accuracy: ±10 %	In ⩽ 400 A		0.3	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	400 A < In ⩽ 1000 A		0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	In ⩾ 1250 A		500	640	720	800	880	960	1040	1120	1200
Time setting tg (s)	Settings	I^2t Off	0	0.1	0.2	0.3	0.4				
		I^2t On	-	0.1	0.2	0.3	0.4				
Time delay (ms)	**tg** (max resettable time)		20	80	140	230	350				
at In or 1200 A (I^2t Off or I^2t On)	**tg** (max break time)		80	140	200	320	500				

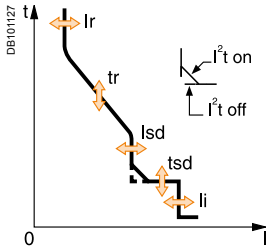

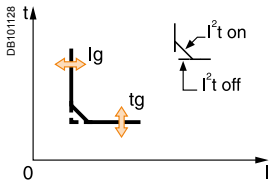


Ammeter — ETA2I/ETA5S/ETA6G

Type of measurements		Range	Accuracy
Instantaneous currents	I_1, I_2, I_3, In	0.2 x In to 1.2 x In	± 1.5 %
	Ig (ETA6G)	0.2 x In to In	± 10 %
Current maximeters of	I_1, I_2, I_3, In	0.2 x In to 1.2 x In	± 1.5 %

Note: *All current-based protection functions require no auxiliary source.*
The test / reset button resets maximeters, clears the tripping indication and tests the battery.

Overview of functions
ETV trip system

ETV trip units include all the functions offered by ETA. In addition, they measure voltage values.
They also offer trip history & display tripping cause.

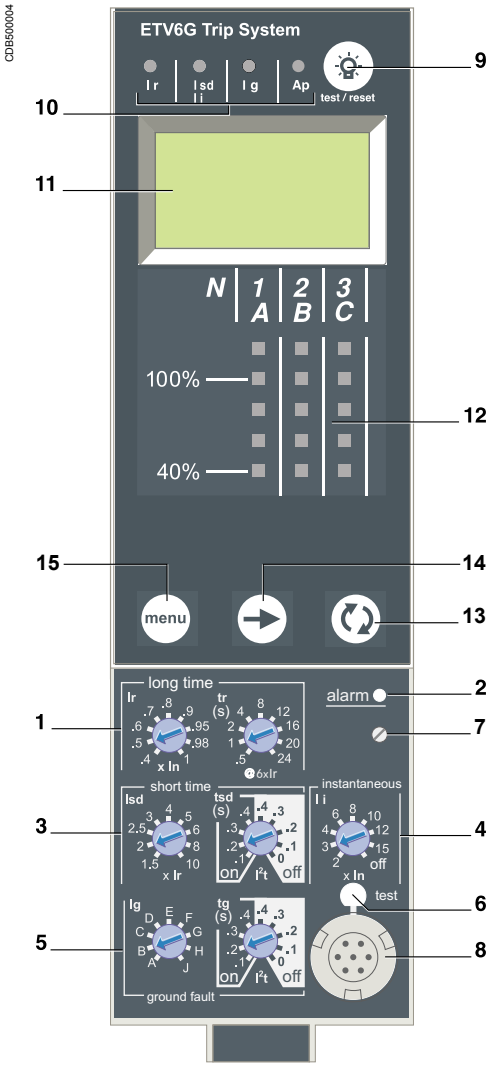

1 Long-time threshold and tripping delay.
2 Overload alarm (LED) at 1,125 Ir.
3 Short-time pick-up and tripping delay.
4 Instantaneous pick-up.
5 Earth-fault pick-up and tripping delay.
6 Earth-fault test button.
7 Long-time rating plug screw.
8 Test connector.
9 Lamp test, reset and battery test.
10 Indication of tripping cause.
11 Digital display.
12 Three-phase bargraph and ammeter.
13 Navigation button "quick View" (only with ETV).
14 Navigation button to view menu contents.
15 Navigation button to change menu.

(1) The thermal memory continuously accounts for the amount of heat in the cables , both before and after tripping , whatever the value of the current(presence of an overload or not).The thermal memory optimises the long-time protection function of the circuit breaker by taking into account the temperature rise in the cables .The thermal memory assumes a cable cooling time of approximately 20 minutes.
(2) Refer to page D-5 for more details on ZSI.

***Note:** ETV trip units come with a transparent leadseal cover as standard.*

"Voltage meter" measurements

In addition to the ammeter measurements of ETA
ETV trip units measure and display:
- Current demand
- Voltages: phase to phase, phase to neutral, average and unbalanced

The range of measurement is the same as current with ETA, depending of an external power supply module.

Protection

Protection thresholds and delays are set using the adjustment dials.

Overload protection
True rms long-time protection.
Protects cables (phase and neutral) against overloads
Thermal memory(1): thermal image before and after tripping.

Short-time protection
- The short-time protection function protects the distribution system against impedant short-circuits
- The short-time tripping delay can be used to ensure discrimination with downstream circuit breaker
- The I^2t ON and I^2t OFF options enhance discrimination with a downstream protection devices
- Use of I^2t curves with short-time protection:
  - I^2t OFF selected: the protection function implements a constant time curve
  - I^2t ON selected: the protection function implements an I^2t inverse-time curve up to 10 Ir. Above 10 Ir, the time curve is constant

Earth-fault protection on ETV6G trip system
Residual or source ground return earth fault protection.
Selection of I^2t type (ON or OFF) for delay.
A ground fault in the protection conductors can provoke local temperature rise at the site of the fault or in the conductors. The purpose of the ground-fault protection function is to eliminate this type of fault.

Type	Description
Residual	■ The function determines the zero-phase sequence current, i.e. the vectorial sum of the phase and neutral currents ■ It detects faults downstream of the circuit breaker

Instantaneous protection
The Instantaneous-protection function protects the distribution system against solid short-circuits. Contrary to the short-time protection function, the tripping delay for instantaneous protection is not adjustable. The tripping order is sent to the circuit breaker as soon as current exceeds the set value, with a fixed time delay of 20 milliseconds.

Neutral protection
On three-pole circuit breakers, neutral protection is not possible.
On four-pole circuit breakers, neutral protection may be set using a three-position switch: neutral unprotected (4P 3d), neutral protection at 0.5 Ir (4P 3d + N/2), neutral protection at Ir (4P 4d).

Zone selective interlocking (ZSI)
A ZSI(2) terminal block may be used to interconnect a number of control units to provide total discrimination for short-time and earth-fault protection, without a delay before tripping.

Overload alarm

A yellow alarm LED goes on when the current exceeds the long-time trip threshold.

Fault indications

LEDs indicate the type of fault:
- Overload (long-time protection Ir)
- Short-circuit (short-time Isd or instantaneous Ii protection)
- Earth fault (Ig)
- Internal fault (Ap)

Trip history
The trip history displays the list of the last 10 trips. For each trip, the following indications are recorded and displayed:
- the tripping cause: Ir, Isd, Ii, Ig or Auto-protection (Ap) trips


Battery power
The fault indicating LEDs are powered by an in-built battery. The fault indication LEDs remain on until the test/reset button is pressed.

Test

A hand-held test kit may be connected to the test connector on the front to check circuit-breaker operation. For ETV6G trip unit, the operation of earth-fault protection can be checked by pressing the test button located above the test connector.


Protection — ETV2I


Long time			ETV2I								
Current setting (A)	**Ir** = In x ...		0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Tripping between 1.05 and 1.20 x Ir											
Time setting		**tr (s)**	0.5	1	2	4	8	12	16	20	24
Time delay (s)	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
	Accuracy: 0 to -20 %	6 x Ir	0.7(1)	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7(2)	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory			20 minutes before and after tripping								
(1) 0 to -40 % - (2) 0 to -60 %											
Instantaneous											
Pick-up (A)	**Isd** = Ir x ...		1.5	2	2.5	3	4	5	6	8	10
Accuracy: ±10 %											
Time delay			Max resettable time: 20 ms Max break time: 80 ms								

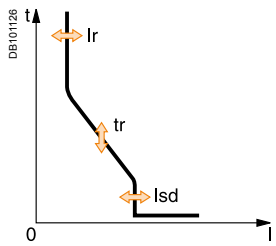

Protection — ETV5S/ETV6G

Long time			ETV5S/ETV6G								
Current setting (A)	**Ir** = In x ...		0.4	0.5	0.6	0.7	0.8	0.9	0.95	0.98	1
Tripping between 1.05 and 1.20 x Ir											
Time setting		**tr (s)**	0.5	1	2	4	8	12	16	20	24
Time delay (s)	Accuracy: 0 to -30 %	1.5 x Ir	12.5	25	50	100	200	300	400	500	600
	Accuracy: 0 to -20 %	6 x Ir	0.7(1)	1	2	4	8	12	16	20	24
	Accuracy: 0 to -20 %	7.2 x Ir	0.7(2)	0.69	1.38	2.7	5.5	8.3	11	13.8	16.6
Thermal memory			20 minutes before and after tripping								
(1) 0 to -40 % - (2) 0 to -60 %											
Short time											
Pick-up (A)	**Isd** = Ir x ...		1.5	2	2.5	3	4	5	6	8	10
Accuracy: ±10 %											
Time setting tsd (s)	Settings	I^2t Off	0	0.1	0.2	0.3	0.4				
		I^2t On	-	0.1	0.2	0.3	0.4				
Time delay (ms) at 10 x Ir	**tsd** (max resettable time)		20	80	140	230	350				
(I^2t Off or I^2t On)	**tsd** (max break time)		80	140	200	320	500				
Instantaneous											
Pick-up (A)	**Ii** = In x ...		2	3	4	6	8	10	12	15	off
Accuracy: ±10 %											
Time delay			Max resettable time: 20 ms Max break time: 50 ms								
Earth fault			ETV6G								
Pick-up (A)	**Ig** = In x ...		A	B	C	D	E	F	G	H	J
Accuracy: ±10 %	In ⩽ 400 A		0.3	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	400 A < In ⩽ 1000 A		0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	In ⩾ 1250 A		500	640	720	800	880	960	1040	1120	1200
Time setting tg (s)	Settings	I^2t Off	0	0.1	0.2	0.3	0.4				
		I^2t On	-	0.1	0.2	0.3	0.4				
Time delay (ms)	**tg** (max resettable time)		20	80	140	230	350				
at In or 1200 A (I^2t Off or I^2t On)	**tg** (max break time)		80	140	200	320	500				

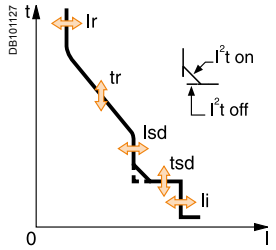

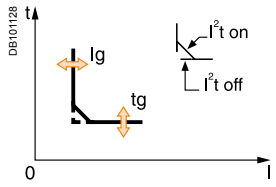


Energy — ETV2I/5S/6G

Type of measurements		Range	Accuracy
Instantaneous currents	I_1, I_2, I_3, In	0.2 x In to 1.2 x In	± 1.5 %
	Ig (ETV6G)	0.2 x In to In	± 10 %
Current maximeters of	I_1, I_2, I_3, In	0.2 x In to 1.2 x In	± 1.5 %
Demand currents of	I_1, I_2, I_3, Ig	0.2 x In to 1.2 x In	± 1.5 %
Voltages	V_{12}, V_{23}, V_{31}, V_{1N}, V_{2N}, V_{3N}	100 to 690 V	± 0.5 %

Note: *All current-based protection functions require no auxiliary source.*
The test / reset button resets maximeters, clears the tripping indication and tests the battery.

ET range of trip system
Accessories and test equipment

DB101524

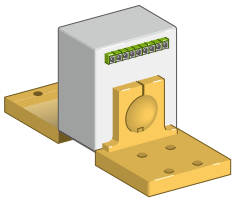

External sensor (CT).

PB101026-32A




External 24 V DC power supply module.

PB100775-32



Lead-seal cover.

CDB500038

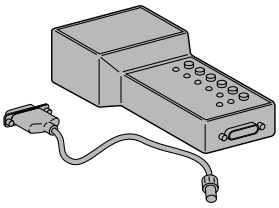

Hand-held test kit.

External sensors

External sensor for earth-fault protection

The sensors, used with the 3P circuit breakers, are installed on the neutral conductor for:

- Residual type earth-fault protection (with 6G trip units)

The rating of the sensor (CT) must be compatible with the rating of the circuit breaker:

- MVS08 to MVS20: TC 400/2000
- MVS25 to MVS40: TC 1000/4000

Voltage measurement inputs[(1)]

As standard, the control unit is supplied by internal voltage measurement inputs placed downstream of the pole for voltages between 220 and 690 V AC.

External 24 V DC power-supply module

The external power-supply module makes it possible to use the display (ETA and ETV trip systems) even if the circuit breaker is open or not supplied (for the exact conditions of use, see the “electrical diagrams” part of this catalogue).

Characteristics

- Power supply:
  - 110/130, 200/240, 380/415 V AC (+10 % -15 %)
  - 24/30, 48/60, 100/125 V DC (+20 % -20 %)
- Output voltage: 24 V DC ±5 %, 1 A
- Ripple < 1 %
- Dielectric withstand : 3.5 kV rms between input/output, for 1 minute
- Overvoltage category: as per IEC 60947-1 cat. 4

Spare parts

Lead-seal covers

A lead-seal cover controls access to the adjustment dials.
When the cover is closed:

- It is impossible to modify settings using the keypad unless the settings lockout pin on the cover is removed
- The test connector remains accessible
- The test button for the earth-fault protection function remains accessible

Characteristics

- Transparent cover for all trip units

Spare battery

A battery supplies power to the LEDs identifying the tripping causes.The healthiness of the battery to be checked periodically. A test button on the front of the control unit is used to check the battery condition. The battery may be replaced on site when discharged.

Test equipment

Hand-held test kit

The hand-held mini test kit may be used to:

- Check operation of the control unit and the tripping and pole-opening system by sending a signal simulating a short-circuit
- Power source: standard LR6-AA battery

(1) Refer to EasyPact MVS user manual on using 3 pole circuit breakers in 4 wire system with ETV trip system for voltage measurement.

Available connection:
- Rear connections: horizontal, vertical and mixed

The solutions presented are similar in principle for all EasyPact MVS fixed and draw-out devices.

Rear connection

Horizontal

PB104354A40



Vertical

PB104355A40



Mixed

PB104359A40



Simply turn a horizontal rear connector 90° to make it a vertical connector.

Connections
Overview of solutions and accessories

CPB100010



















Interphase barriers EIP
These barriers are flexible insulated partitions used to reinforce isolation of connection points in installations with busbars, whether insulated or not.
For EasyPact MVS devices, they are installed vertically between rear connection terminals. They are not compatible with spreaders.

PB104364A50














Safety shutters VO
Mounted on the chassis, the safety shutters automatically block access to the disconnecting contact cluster when the device is in the disconnected or test positions (degree of protection IP 20) When the device is removed from its chassis, no live parts are accessible.
The shutter-locking system is made up of a moving block (optional device) that can be padlocked (padlock not supplied). The block:
- Prevents connection of the device
- Locks the shutters in the closed position

For EasyPact MVS08 to MVS40
A support at the bottom of the chassis is used to store the blocks when they are not used:
- 2 blocks for MVS08 to MVS40

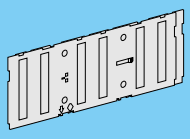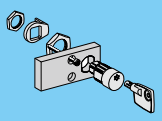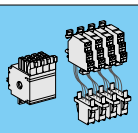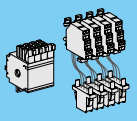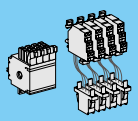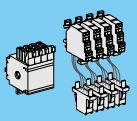Type of accessory	EasyPact MVS08 to MVS40	
	Fixed breaker Rear connection	Draw-out breaker Rear connection
Interphase barriers	 Optional	 Optional
Safety shutters		 Standard
Safety shutters locking blocks		 Optional
Door interlock		 Optional
Pushbutton locking device	 Optional	 Optional
OFF position locking	 Optional	 Optional
"Disconnected" position locking		 Optional
ON/OFF indication contacts(OF)	 Standard	 Standard
Additional ON/OFF indication contacts(OF)	 Optional	 Optional
"Fault trip" indication contact(SDE)	 Standard	 Standard


Accessories and auxiliaries

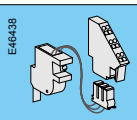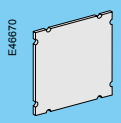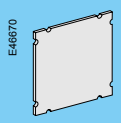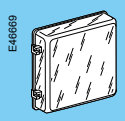Type of accessory	EasyPact MVS08 to MVS40	
	Fixed breaker Rear connection	Draw-out breaker Rear connection
"Connected, disconnected, test position" indication contact(CE,CD,CT)		 Optional
"Ready to close" contact(PF)	 Optional	 Optional
Escutcheon(CDP)	 Standard	 Standard
Mechanical operation counter(CDM)	 Optional	 Optional
Escutcheon blanking plate	 Optional	 Optional
Auxiliary terminal shield(CB)		 Optional
Transparent cover (IP54)		 Optional

Locking
On the device

1 *Reset button for mechanical trip indication.*
2 *OFF pushbutton.*
3 *OFF position lock.*
4 *Door interlock.*
5 *ON pushbutton.*
6 *Spring charge indication.*
7 *Pushbutton locking.*
8 *Contact position indication.*
9 *Operation counter.*

CDB500006

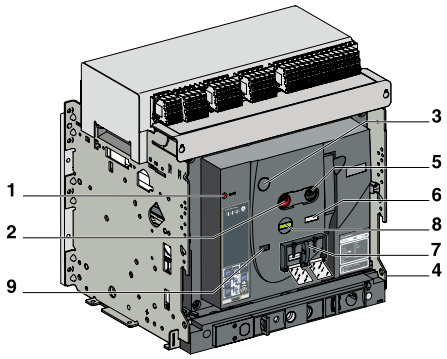

PB100811-32



Access to pushbuttons protected by transparent cover.

PB100810-32



Pushbutton locking using a padlock.

CPB100007



OFF position locking using a keylock.

CPB100008



Door interlock.

Pushbutton locking VBP

The transparent cover blocks access to the pushbuttons used to open and close the device.
It is possible to independently lock the opening button and the closing button.
The locking device is often combined with a remote operating mechanism.
The pushbuttons may be locked using either:
- Three padlocks (not supplied)
- Lead seal
- Two screws


Device locking in the OFF position by keylocks VSPO

The circuit breaker is locked in the OFF position by physically maintaining the opening pushbutton pressed down:
- Using keylocks (one or two keylocks, supplied)

Keys may be removed only when locking is effective (Profalux or Ronis type locks).
The keylocks are available in any of the following configurations:
- One keylock
- One keylock mounted on the device + one identical keylock supplied separately for interlocking with another device

A locking kit (without locks) is available for installation of one or two keylocks (Ronis, Profalux).

CDB500036

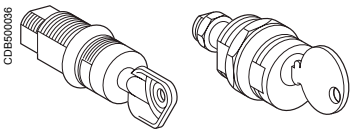

Profaulx *Ronis*

Door interlock catch VPEC


Mounted on the right or left-hand side of the chassis, this device inhibits opening of the cubicle door when the circuit breaker is in “connected” or “test” position. It the breaker is put in the “connected” position with the door open, the door may be closed without having to disconnect the circuit breaker.

Automatic spring discharge before breaker removal DAE

This option discharges the springs before the breaker is removed from the chassis.

Locking
On the chassis

CDB500007

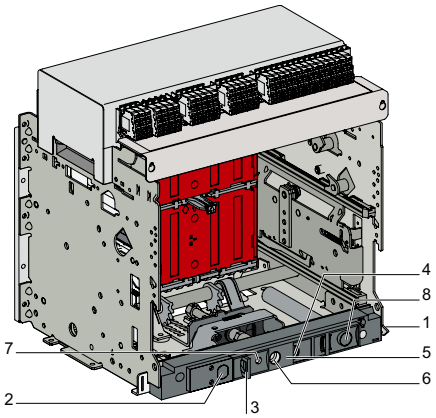

1 *Door interlock.*
2 *Keylock locking.*
3 *Padlock locking.*
4 *Position indicator.*
5 *Chassis front plate (accessible with cubicle door closed).*
6 *Racking-handle entry.*
7 *Release button.*
8 *Racking-handle storage.*

CPB100006



"Disconnected" position locking by padlock.

CPB100017



"Disconnected" position locking by keylock.

"Connected", "disconnected" and "test" position racking interlock

The "connected", "disconnected" and "test" positions are shown by an indicator and are mechanically indexed. The exact position is obtained when the racking handle blocks. A release button is used to free it.

"Disconnected" position locking by padlocks or keylocks VSPD

Mounted on the chassis and accessible with the door closed, these devices lock the circuit breaker in the "disconnected" position in two manners:

- Using padlocks (standard), up to three padlocks (not supplied)
- Using keylocks (optional), one or two different keylocks are available


Profalux and Ronis keylocks are available in different options:

- One keylock
- Two identical key locks - one keylock mounted on the device + one identical keylock supplied separately for interlocking with another device


A locking kit (without locks) is available for installation of one or two keylocks (Ronis, Profalux).

Padlock


Circuit breaker in "disconnected" position.

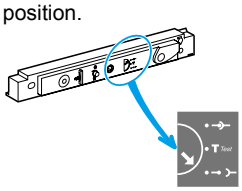


Pull out the tab.

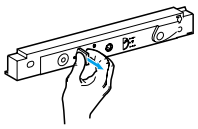

Insert the shackle (max. diameter 5 to 8 mm) of the padlock(s).

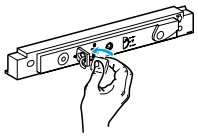


The crank connot be inserted.

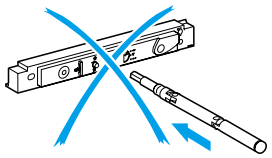


Keylock


Circuit breaker in "disconnected" position.

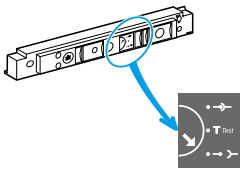


Turn the key(s).

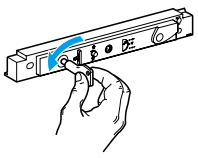

Remove the key(s)

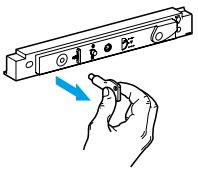


The crank cannot be inserted.

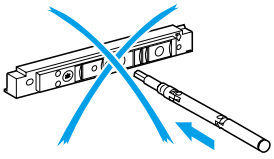

Indication contacts

Indication contacts are available:
- in the standard version for relay applications

PB100807-20

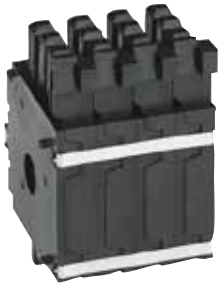

ON/OFF indication contacts (OF) (rotary type).

PB100818-16



"Fault-trip" indication contact (SDE).

PB100817-32



CE, CD and CT "connected/ disconnected/test" position carriage switches.

ON/OFF indication contacts OF

Indication contacts indicate the ON or OFF position of the circuit breaker:
- Rotary type changeover contacts directly driven by the mechanism for EasyPact MVS. These contacts trip when the minimum isolation distance between the main circuit-breaker contacts is reached

OF				MVS
Supplied as standard				1 (4 C/O)
Optional contact				1 (4 C/O)
Breaking capacity (A)	Standard			Minimum load: 100 mA/24 V
p.f.: 0.3		V AC	240/380	10/6 (1)
AC12/DC12			480	10/6 (1)
			690	6
		V DC	24/48	10/6 (1)
			125	10/6 (1)
			250	3

(1) Standard contacts: 10 A; optional contacts: 6 A.

"Fault-trip" indication contacts SDE

Circuit-breaker tripping due to a fault is signalled by:
- A red mechanical fault indicator (reset)
- One changeover contact SDE

Following tripping, the mechanical indicator must be reset before the circuit breaker may be closed. One SDE is supplied as standard.

SDE				MVS
Supplied as standard				1
Breaking capacity (A)	Standard			Minimum load: 100 mA/24 V
p.f.: 0.3		V AC	240/380	5
AC12/DC12			480	5
			690	3
		V DC	24/48	3
			125	0.3
			250	0.15

"Connected", "disconnected" and "test" position carriage switches CE, CD & CT

Three series of optional auxiliary contacts are available for the chassis:
- Changeover contacts to indicate the "connected" position CE
- Changeover contacts to indicate the "disconnected" position CD. This position is indicated when the required clearance for isolation of the power and auxiliary circuits is reached
- Changeover contacts to indicate the "test" position CT. In this position, the power circuits are disconnected and the auxiliary circuits are connected

				MVS
Contacts				**CE/CD/CT**
Maximum number	Standard			3 3 3
Breaking capacity (A)	Standard			Minimum load: 100 mA/24 V
p.f.: 0.3		V AC	240	8
AC12/DC12			380	8
			480	8
			690	6
		V DC	24/48	2.5
			125	0.8
			250	0.3

Remote operation
Remote ON / OFF

A point-to-point solution for remote operation of EasyPact MVS

PB104349A68



Note: *An opening order always takes priority over a closing order.*
If opening and closing orders occur simultaneously, the mechanism discharges without any movement of the main contacts. The circuit breaker remains in the open position (OFF).
In the event of maintained opening and closing orders, the standard mechanism provides an anti-pumping function by blocking the main contacts in open position.
Anti-pumping function. After fault tripping or intentional opening using the manual or electrical controls, the closing order must first be discontinued, then reactivated to close the circuit breaker.


The remote ON / OFF function is used to remotely open and close the circuit breaker.
It is made up of:
- An electric motor MCH equipped with a “springs charged” limit switch contact CH
- Two voltage releases:
  - A closing release XF
  - An opening release MX

Optionally, other function may be added:
- A “ready to close” contact PF

A remote-operation function is generally combined with:
- Device ON / OFF indication OF
- “Fault-trip” indication SDE

Wiring diagram of a point-to-point remote ON / OFF function

DB111783

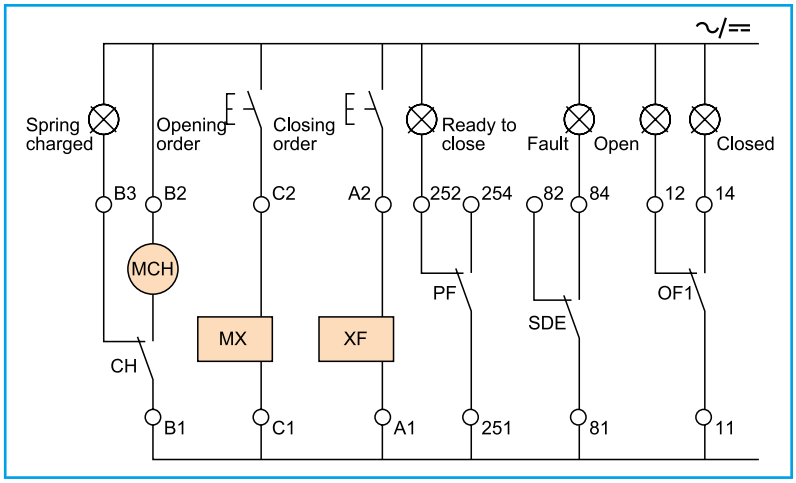

PB100808-32




Electric motor MCH for EasyPact MVS.

Electric motor MCH

The electric motor automatically charges and recharges the spring mechanism when the circuit breaker is closed. Instantaneous reclosing of the breaker is thus possible following opening. The spring-mechanism charging handle is used only as a backup if auxiliary power is absent.
The electric motor MCH is equipped as standard with a limit switch contact CH that signals the “charged” position of the mechanism (springs charged).

Characteristics		
Power supply	V AC 50/60 Hz	100/130 - 200/240 - 380/415
	V DC	24/30 - 48/60 - 100/125 - 200/250
Operating threshold		0.85 to 1.1 Un
Consumption (VA or W)		180
Motor overcurrent		2 to 3 In for 0.1 s
Charging time		Maximum 4 s
Operating frequency		Maximum 3 cycles per minute
CH contact		10 A at 240 V

DB117037

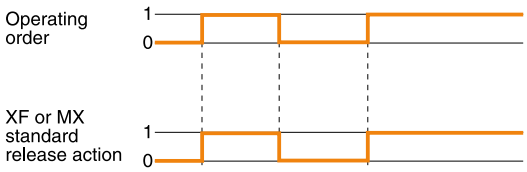

Voltage releases XF and MX

Their supply can be maintained or automatically disconnected.

Closing release XF

The XF release remotely closes the circuit breaker if the spring mechanism is charged.

Opening release MX

The MX release instantaneously opens the circuit breaker when energised. It locks the circuit breaker in OFF position if the order is maintained.

Characteristics		XF	MX
Power supply	V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 380/480	
	V DC	12 - 24/30 - 48/60 - 100/130 - 200/250	
Operating threshold		0.85 to 1.1 Un	0.7 to 1.1 Un
Consumption (VA or W)		Hold: 4.5	Hold: 4.5
		Pick-up: 200 (200 ms)	Pick-up: 200 (200 ms)
Circuit-breaker response time at Un		70 ms ±10	50 ms ±10

PB100809-16



MX voltage releases.



XF voltage release.

“Ready to close” contact PF

The “ready to close” position of the circuit breaker is indicated by a mechanical indicator and a PF changeover contact. This signal indicates that all the following are valid:

- ■ The circuit breaker is in the OFF position
- ■ The spring mechanism is charged
- ■ A maintained opening order is not present:
- □ MX energised
- □ Fault trip
- □ Remote tripping MN
- □ Device not completely racked in
- □ Device locked in OFF position
- □ Device interlocked with a second device

Characteristics				
Maximum number				1
Breaking capacity (A)	Standard			Minimum load: 100 mA/24 V
p.f.: 0.3		V AC	240/380	5
AC12/DC12			480	5
			690	3
		V DC	24/48	3
			125	0.3
			250	0.15

PB100818-16



“Ready to close” contacts PF.

Remote operation
Remote tripping

DB100809-16



MN voltage release.

Instantaneous voltage releases MN

The MN release instantaneously opens the circuit breaker when its supply voltage drops to a value between 35 % and 70 % of its rated voltage. If there is no supply on the release, it is impossible to close the circuit breaker, either manually or electrically. Any attempt to close the circuit breaker has no effect on the main contacts. Circuit breaker closing is enabled again when the supply voltage of the release returns to 85% of its rated value.

Characteristics			
Power supply	V AC 50/60 Hz	24 - 48 - 100/130 - 200/250 - 380/480	
	V DC	24/30 - 48/60 - 100/130 - 200/250	
Operating threshold	Opening	0.35 to 0.7 Un	
	Closing	0.85 Un	
Consumption (VA or W)		Pick-up: 200 (200 ms)	Hold: 4.5
MN consumption with delay unit (VA or W)		Pick-up: 200 (200 ms)	Hold: 4.5
Circuit-breaker response time at Un		90 ms ±5	

056422N



MN delay unit.

MN delay units

To eliminate circuit-breaker nuisance tripping during short voltage dips, operation of the MN release can be delayed. This function is achieved by adding an external delay unit in the MN voltage-release circuit. Two versions are available, adjustable and non-adjustable.

Characteristics			
Power supply	Non-adjustable	100/130 - 200/250	
V AC 50-60 Hz /DC	Adjustable	48/60 - 100/130 - 200/250 - 380/480	
Operating threshold	Opening	0.35 to 0.7 Un	
	Closing	0.85 Un	
Delay unit consumption		Pick-up: 200 (200 ms)	Hold: 4.5
Circuit-breaker response time at Un	Non-adjustable	0.25 s	
	Adjustable	0.5 s - 0.9 s - 1.5 s - 3 s	

CPB100009



Interlocking of two EasyPact circuit breakers using cable.

Interlocking of two EasyPact MVS or up to three EasyPact MVS devices using cables

For cable interlocking, the circuit breakers may be mounted one above the other or side-by-side. The interlocked devices may be fixed or draw-out, three-pole or four-pole, and have different ratings.

Interlocking between two devices

This function requires:

- An adaptation fixture on the right side of each device
- A set of cables with no-slip adjustments
- The use of a mechanical operation counter CDM is compulsory

The maximum distance between the fixing planes (vertical or horizontal) is 2000 mm.

Interlocking between three devices

This function requires:

- A specific adaptation fixture for each type of interlocking, installed on the right side of each device
- Two or three sets of cables with no-slip adjustments
- The use of a mechanical operation counter CDM is compulsory

The maximum distance between the fixing planes (vertical or horizontal) is 1000 mm.

Installation

The adaptation fixtures, sets of cables and circuit breakers or switch-disconnectors are supplied separately, ready for assembly by the customer.

Installation conditions for cable interlocking systems:

- Cable length: 2.5 m
- Radius of curvature: 100 mm
- Maximum number of curves: 3

Possible combinations of “Normal” and “Replacement” source circuit breakers	
“Normal N”	**“Replacement” R**
MVS08 to MVS40	MVS08 to MVS40
Ratings 800...4000A	■

Possible combinations of three device	
MVS08 to MVS40	MVS08 to MVS40
Ratings 800...4000A	■

All combinations of two or three EasyPact MVS devices are possible, whatever the rating of the devices.

Accessories

PB104740



Auxiliary terminal shield CB

Optional equipment mounted on the chassis, the shield prevents access to the terminal block of the electrical auxiliaries.


PB104382A32



Operation counter CDM

The operation counter sums the number of operating cycles and is visible on the front panel. It is compatible with manual and electrical control functions.
This option is compulsory for all the source-changeover systems.

DB101173

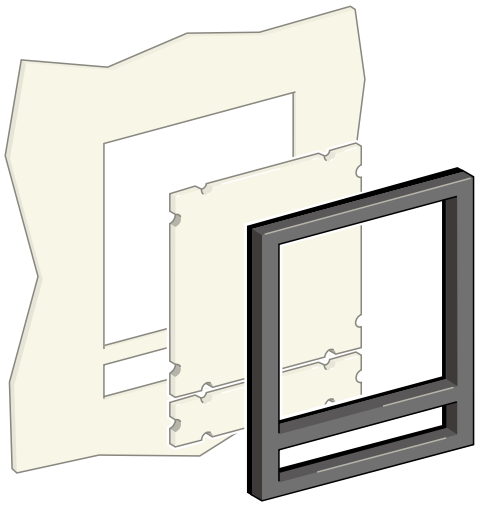

Escutcheon CDP

Standard equipment mounted on the door of the cubicle, the escutcheon increases the degree of protection to IP 40 (circuit breaker installed free standing: IP30) .
It is available in fixed and draw-out versions.

Blanking plate for escutcheon OP

Used with the escutcheon, this option closes off the door cut-out of a cubicle not yet equipped with a device. It may be used with the escutcheon for both fixed and draw-out devices.

Escutcheon CDP with blanking plate.

PB100776-42



Transparent cover for escutcheon CP

Optional equipment mounted on the escutcheon, the cover is hinged and secured by a screw. It increases the degree of protection to IP54, IK10. It adapts to draw-out devices.

Transparent cover CP for escutcheon.

Installation recommendations

Installation recommendations

Functions and characteristics *A-1*

Operating conditions **B-2**

Installation in switchboard **B-3**

Door interlock catch **B-5**

Control wiring **B-6**

Power connection **B-7**

Recommended busbars drilling **B-9**


Busbar sizing **B-10**

Temperature derating
Power dissipation **B-12**

Dimensions and connection *C-1*
Electrical diagrams *D-1*
Additional characteristics *E-1*
Catalogue numbers and order form *F-1*

Operating conditions

EasyPact MVS circuit breakers have been tested for operation in industrial atmospheres. It is recommended that the equipment be cooled or heated to the proper operating temperature and kept free of excessive vibration and dust.

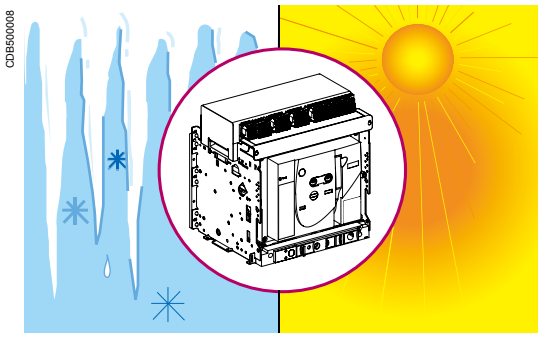


Ambient temperature

EasyPact MVS devices can operate under the following temperature conditions:

- The electrical and mechanical characteristics are stipulated for an ambient temperature of -5°C to +60°C
- Circuit-breaker closing is guaranteed down to -35°C

Storage conditions are as follows:

- -40 to +85°C for a Easypact MVS device without its control unit
- -25°C to +85°C for the control unit

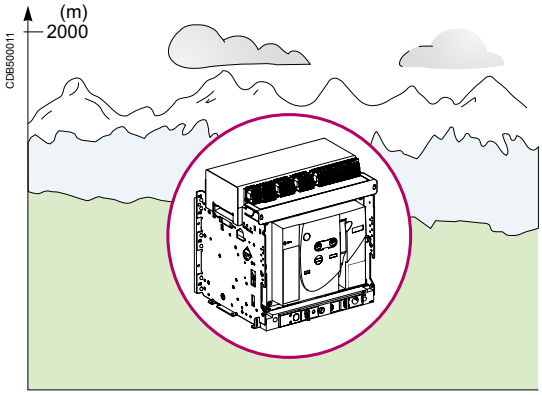


Altitude

At altitudes higher than 2000 metres, the modifications in the ambient air (electrical resistance, cooling capacity) lower the following characteristics as follows:

Altitude (m)	2000	3000
Impulse withstand voltage uimp (kV)	12	11
Rated insulation voltage (Ui)	1000	900
Maximum rated operationnal voltage 50/60 Hz Ue (V)	690	590
	1000	890
Rated current 40°C	1 x In	0.99 x In

Intermediate values may be obtained by interpolation.

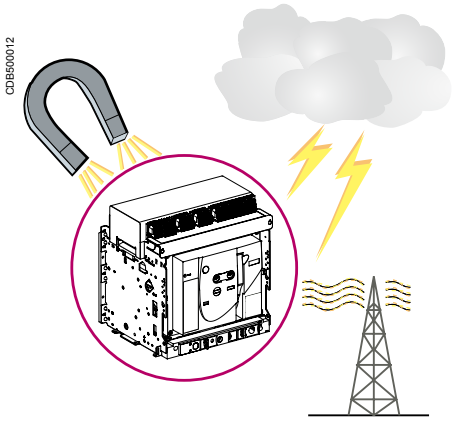

Electromagnetic disturbances

EasyPact MVS devices are protected against:

- Overvoltages caused by devices that generate electromagnetic disturbances
- Overvoltages caused by atmospheric disturbances or by a distribution-system outage (e.g. failure of a lighting system)
- Devices emitting radio waves (radios, walkie-talkies, radar, etc.)
- Electrostatic discharges produced by users


EasyPact MVS devices have successfully passed the electromagnetic-compatibility tests (EMC) defined by the following international standards:

- IEC 60947-2, appendix F

The above tests guarantee that:


- No nuisance tripping occurs
- Tripping times are respected

Possible positions

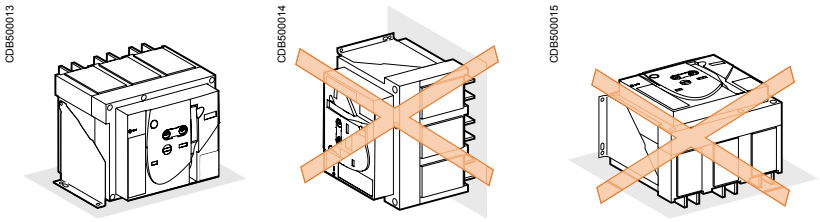


Power supply

EasyPact MVS devices can be supplied either from the top or from the bottom without reduction in performance, in order to facilitate connection when installed in a switchboard.

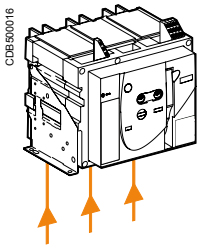

Mounting the circuit-breaker

It is important to distribute the weight of the device uniformily over a rigid mounting surface such as rails or a base plate.
This mounting plane should be perfectly flat (tolerance on support flatness: 2 mm). This eliminates any risk of deformation which could interfere with correct operation of the circuit breaker.
EasyPact devices can also be mounted on a vertical plane using the special brackets.

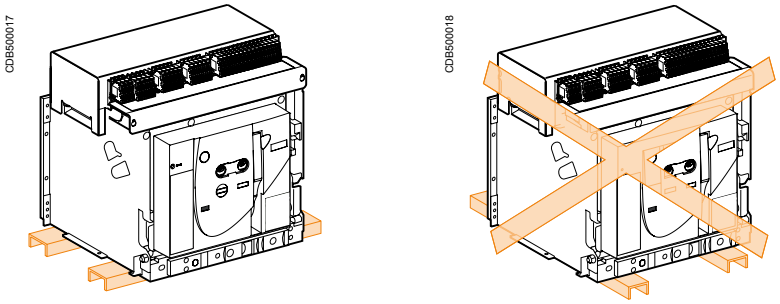


Mounting on rails.

Installation in switchboard

Partitions

Sufficient openings must be provided in partitions to ensure good air circulation around the circuit breaker; Any partition between upstream and downstream connections of the device must be made of nonmagnetic material.
For high currents, of 2500 A and upwards, the metal supports or barriers in the immediate vicinity of a conductor must be made of non-magnetic material **A**. Metal barriers through which a conductor passes must not form a magnetic loop.

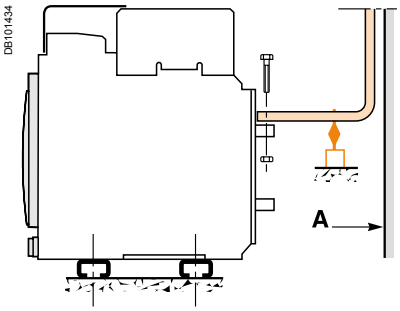



A : *Non magnetic material.*



Busbars


The mechanical connection must be exclude the possibility of formation of a magnetic loop around a conductor.

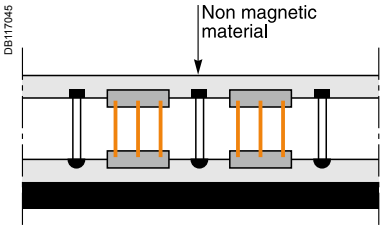


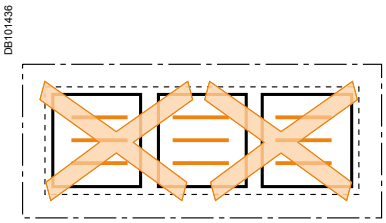

Interphase barrier

If the insulation distance between phases is not sufficient (⩽ 14 mm), it is advised to install phase barriers (taking into account the safety clearances).

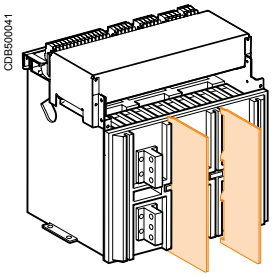

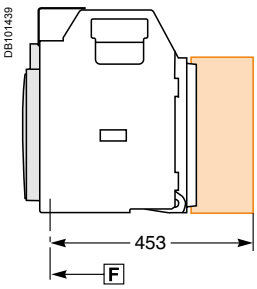


Door interlock catch

Door interlock VPEC

Mounted on the right or left-hand side of the chassis, this device inhibits opening of the cubicle door when the circuit breaker is in “connected” or “test” position. It the breaker is put in the “connected” position with the door open, the door may be closed without having to disconnect the circuit breaker.


Dimensions (mm)

Type	(1)	(2)
MVS08-40 (3P)	215	215
MVS08-40 (4P)	330	215

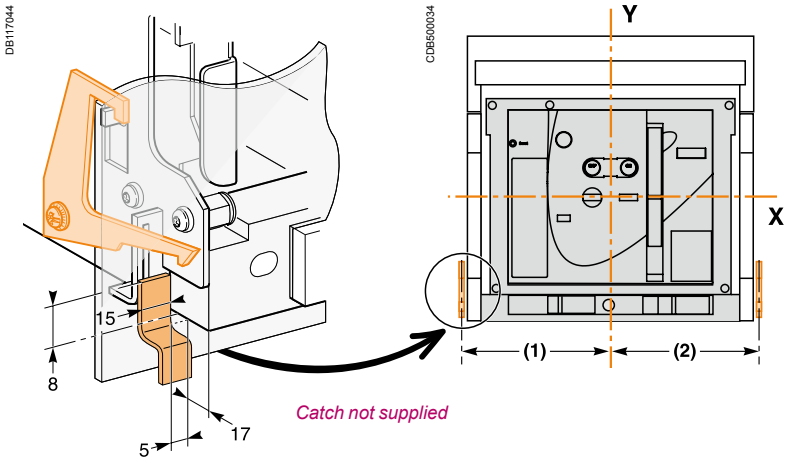


Breaker in “connected” or “test” position

Door cannot be opened

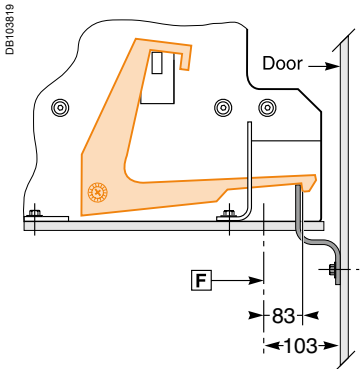

Breaker in “disconnected” position

Door can be opened

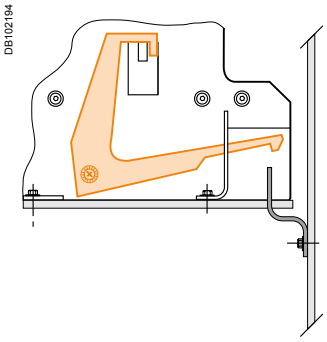

Note: *Dimensions are in mm.*

Note: *The door interlock can either be mounted on the right side or the left side of the breaker.*

F *: Datum.*

Control wiring

Wiring of voltage releases

During pick-up, the power consumed is approximately 150 to 200 VA. For low control voltages (12, 24, 48 V), maximum cable lengths are imposed by the voltage and the cross-sectional area of cables.

Recommended maximum cable lengths (meter).

		12 V		24 V		48 V	
		2,5 mm²	1,5 mm²	2,5 mm²	1,5 mm²	2,5 mm²	1,5 mm²
MN	U source 100 %	–	–	58	35	280	165
	U source 85 %	–	–	16	10	75	45
MX-XF	U source 100 %	21	12	115	70	550	330
	U source 85 %	10	6	75	44	350	210

Note: *The indicated length is that of each of the two wires.*

24 V DC power-supply module

External 24 V DC power-supply module (F1-, F2+)


- Do not connect the positive terminal (F2+) to earth
- The negative terminal (F1-) can be connected to earth
- A number of trip units can be connected to the same 24 V DC power supply (the consumption of a trip unit is approximately 100 mA)
- Do not connect any devices other than a trip unit
- The maximum length for each conductor is ten metres. For greater distances, it is advised to twist the supply wires together
- The 24 V DC supply wires must cross the power cables perpendicularly. If this is difficult, it is advised to twist the supply wires together
- The technical characteristics of the external 24 V DC power-supply module are indicated on page A-14.

Note: *Wiring of ZSI: it is recommended to use twisted shielded cable. The shield must be connected to earth at both ends.*

Cables connections


If cables are used for the power connections, make sure that they do not apply excessive mechanical forces to the circuit breaker terminals.
For this, make the connections as follows:

- ■ Extend the circuit breaker terminals using short bars designed and installed according to the recommendations for bar-type power connections:
- □ For a single cable, use solution **B** opposite
- □ For multiple cables, use solution **C** opposite
- ■ In all cases, follow the general rules for connections to busbars:
- □ Position the cable lugs before inserting the bolts
- □ The cables should firmly secured to the framework **E**

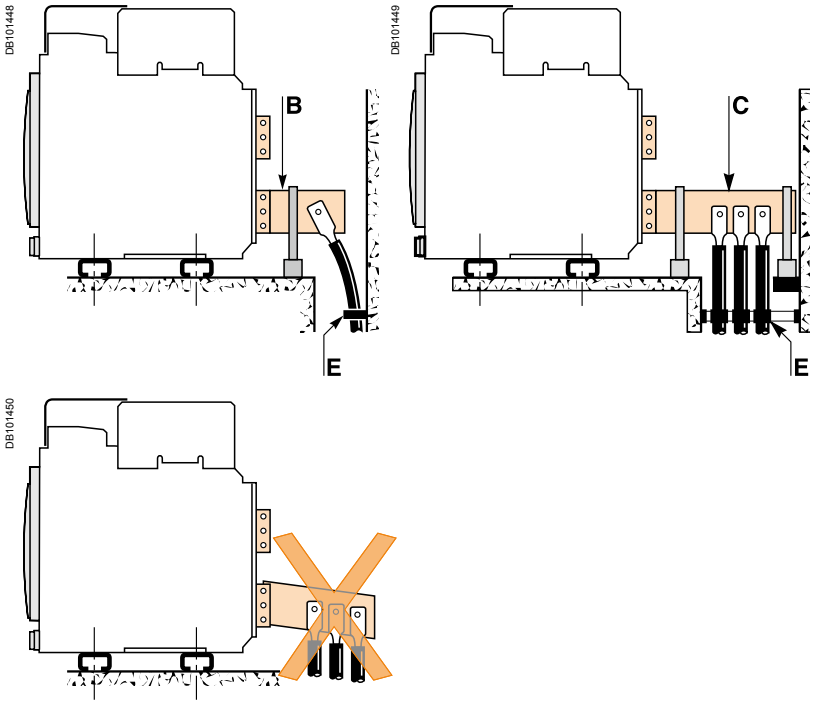

Busbars connections

The busbars should be suitably adjusted to ensure that the connection points are positioned on the terminals before the bolts are inserted **B**
The connections are held by the support which is solidly fixed to the framework of the switchboard, such that the circuit breaker terminals do not have to support its weight **C**. (This support should be placed close to the terminals).

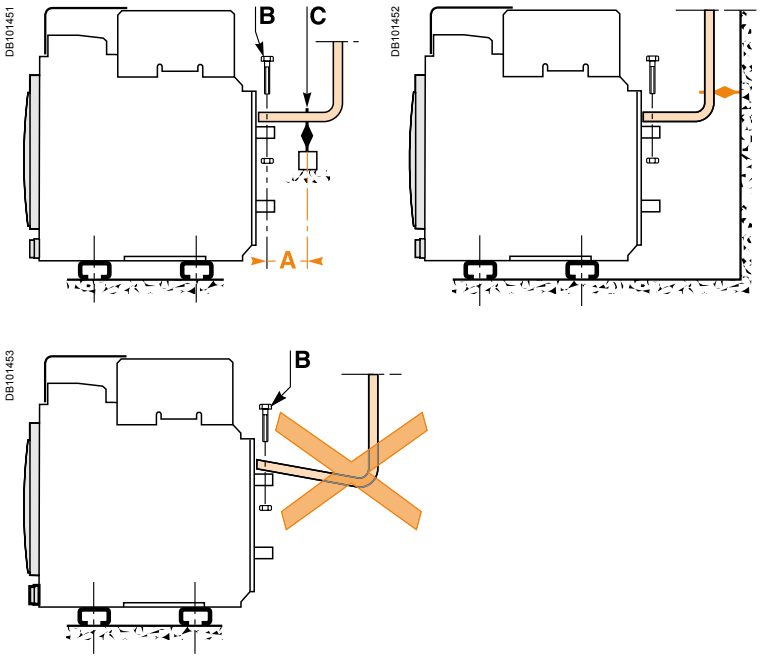


Electrodynamic stresses

The first busbar support or spacer shall be situated within a maximum distance from the connection point of the breaker (see table below). This distance must be respected so that the connection can withstand the electrodynamic stresses between phases in the event of a short circuit.

Maximum distance A between busbar to circuit breaker connection and the first busbar support or spacer with respect to the value of the prospective short-circuit current.			
Isc (kA)	30	50	65
Distance A (mm)	350	300	250

Power connection

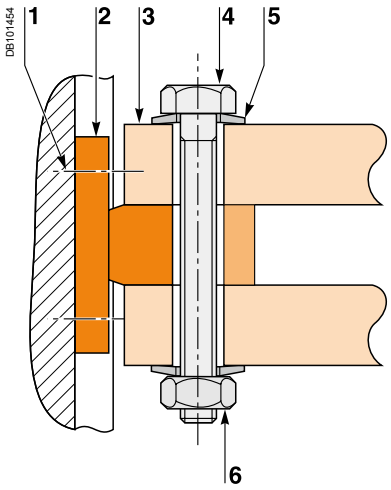


1 *Terminal screw factory-tightened to 16 Nm.*
2 *Breaker terminal.*
3 *Busbar.*
4 *Bolt.*
5 *Washer.*
6 *Nut.*

Clamping

Correct clamping of busbars depends amongst other things, on the tightening torques used for the nuts and bolts. Over-tightening may have the same consequences as under-tightening.
For connecting busbars (Cu ETP-NFA51-100) to the circuit breaker, the tightening torques to be used are shown in the table below.
These values are for use with copper busbars and steel nuts and bolts, class 8.8. The same torques can be used with AGS-T52 quality aluminium bars (French standard NFA 02-104 or American National Standard H-35-1).


Examples

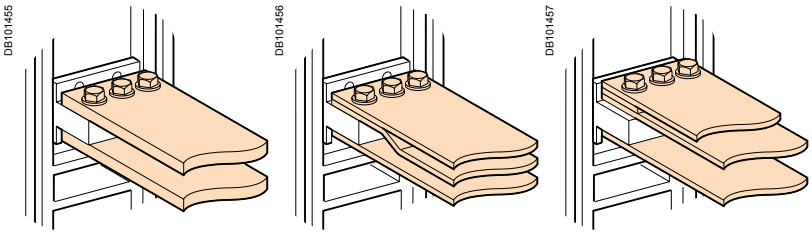


Tightening torques			
Ø (mm) Nominal	**Ø (mm) Drilling**	**Tightening torques (Nm) with grower or flat washers**	**Tightening torques (Nm) with contact or corrugatec washers**
10	11	37.5	50

Busbar drilling

Examples

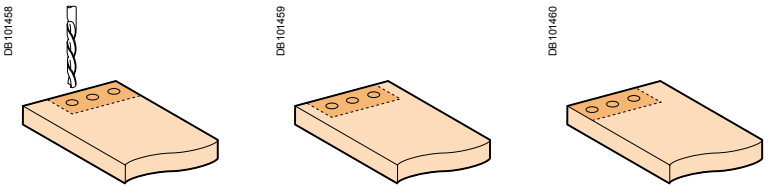

Isolation distance

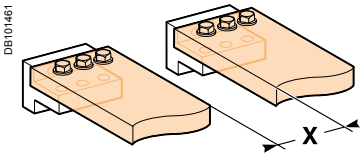


Dimensions (mm)

Ui	X min
600 V	8 mm
1000 V	14 mm

Busbar bending

When bending busbars maintain the radius indicated below(a smaller radius would cause cracks).

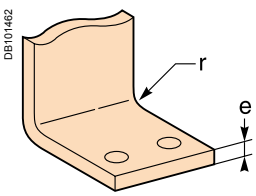



Dimensions (mm)


e	Radius of curvature r	
	Min	**Recommended**
5	5	7.5
10	15	18 to 20


Recommended busbars drilling
EasyPact MVS08 to MVS40

Horizontal rear connection MVS08 to MVS32

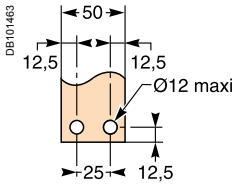


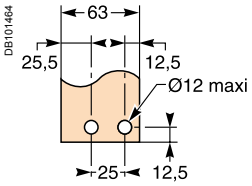


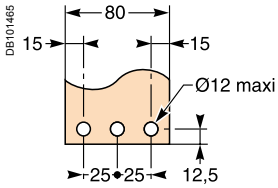


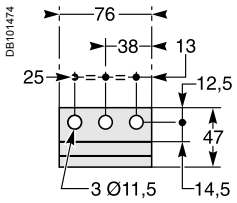


MVS40

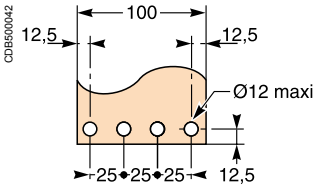


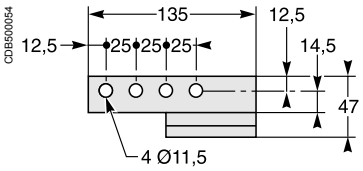


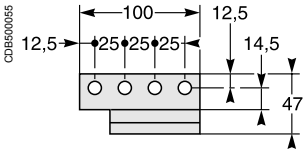


Vertical rear connection MVS08 to MVS32

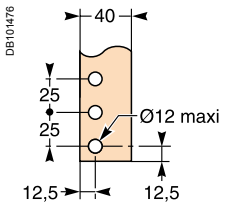


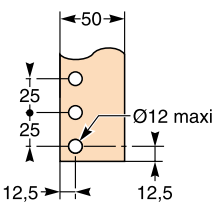


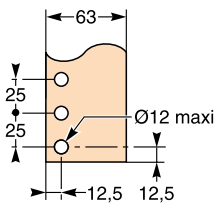

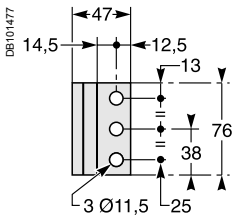

MVS40

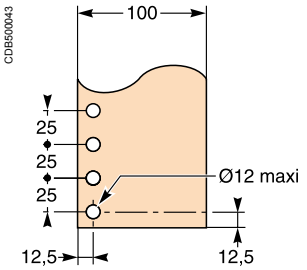


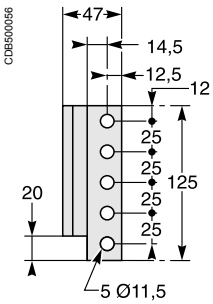

Busbar sizing

Basis of tables:
- Maximum permissible busbars temperature: 100 °C
- Ti: temperature around the ciruit breaker and its connection
- Busbar material is unpainted Copper / Aluminium

Rear horizontal connection

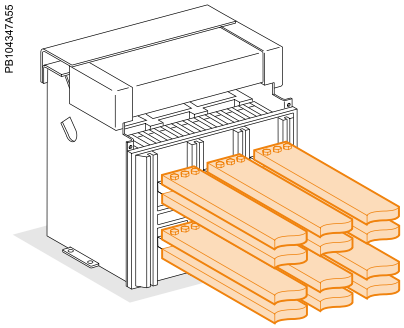

Unpainted Copper (Rear horizontal connection)					
EasyPact	Maximum service current	Ti : 40°C No. of 5 mm thick bars	Ti : 40°C No. of 10 mm thick bars	Ti : 50°C No. of 5 mm thick bars	Ti : 50°C No. of 10 mm thick bars
MVS08	800	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10
MVS10	1000	3b.50 x 5	1b.63 x 10	3b.50 x 5	2b.50 x 10
MVS12	1250	3b.50 x 5	2b.40 x 10	3b.50 x 5	2b.50 x 10
		2b.80 x 5	2b.40 x 10	2b.80 x 5	
MVS16	1600	3b.80 x 5	2b.63 x 10	3b.80 x 5	2b.63 x 10
MVS20	2000	3b.100 x 5	2b.80 x 10	3b.100 x 5	2b.80 x 10
MVS25	2500	4b.100 x 5	2b.100 x 10	4b.100 x 5	2b.100 x 10
MVS32	3200	6b.100 x 5	3b.100 x 10	8b.100 x 5	3b.100 x 10
MVS40	4000		5b.100 x 10		5b.100 x 10

Unpainted Aluminium			
EasyPact	Maximum service current	Busbar orientation	Ti : 50°C No. of 10 mm thick bars
MVS08	800	Horizontal	2b.40 x 10
MVS10	1000	Horizontal	2b.50 x 10
MVS12	1250	Horizontal	2b.80 x 10
MVS16	1600	Horizontal	3b.80 x 10

Example

Conditions:
- Drawout version
- Horizontal busbars
- T_i: 50°C
- Service current: 1600A

Solution:

For T_i = 50°C, use an MVS16 which can be connected with 2 bars-63x10mm copper (or) 3 bars-80x10mm Aluminium.


Note: *The values indicated in these tables have been extrapolated from test data and theoretical calculations. These tables are only intended as a guide and cannot replace industrial experience or a temperature rise test.*

Busbar sizing

Basis of tables:

- Maximum permissible busbars temperature: 100 °C
- Ti: temperature around the ciruit breaker and its connection
- Busbar material is unpainted Copper / Aluminium

Rear vertical connection

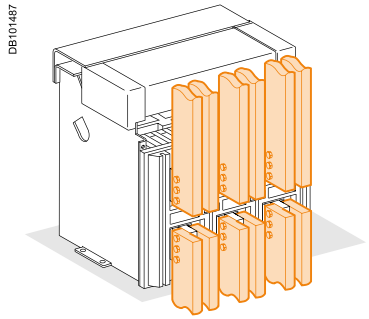

Unpainted Copper (Vertical connection)

EasyPact	Maximum service current	Ti : 40°C No. of 5 mm thick bars	Ti : 40°C No. of 10 mm thick bars	Ti : 50°C No. of 5 mm thick bars	Ti : 50°C No. of 10 mm thick bars
MVS08	800	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10
MVS10	1000	2b.50 x 5	1b.50 x 10	2b.50 x 5	1b.50 x 10
MVS12	1250	2b.63 x 5	1b.63 x 10	3b.50 x 5	2b.40 x 10
MVS16	1600	3b.63 x 5	2b.50 x 10	3b.63 x 5	2b.50 x 10
MVS20	2000	3b.100 x 5	2b.63 x 10	3b.100 x 5	2b.63 x 10
MVS25	2500	4b.100 x 5	2b.80 x 10	4b.100 x 5	2b.80 x 10
MVS32	3200	6b.100 x 5	3b.100 x 10	6b.100 x 5	3b.100 x 10
MVS40	4000		4b.100 x 10		4b.100 x 10

Unpainted Aluminium

EasyPact	Maximum service current	Busbar orientation	Ti : 50°C No. of 10 mm thick bars
MVS08	800	Vertical	2b.40 x 10
MVS10	1000	Vertical	2b.50 x 10
MVS12	1250	Vertical	2b.80 x 10
MVS16	1600	Vertical	3b.80 x 10
MVS20	2000	Vertical	4b.80 x 10
MVS25	2500	Vertical	4b.100 x 10
MVS32	3200	Vertical	4b.150 x 10
MVS40	4000	Vertical	5b.150 x 10

Example

Conditions:

- Drawout version
- Hertical connections
- T_i: 40 °C
- Service current: 1100 A.

Solution:

For T_i = 40 °C use an MVS12 which can be connected with two 63 x 5 mm bars or with one 63 x 10 mm bar.

Note: *The values indicated in these tables have been extrapolated from test data and theoretical calculations. These tables are only intended as a guide and cannot replace industrial experience or a temperature rise test.*

Temperature derating
Power dissipation

Temperature derating

The table below indicates the maximum current rating, for each connection type, as a function of Ti around the circuit breaker and the busbars.
For Ti greater than 60°C, consult us.
Ti: temperature around the circuit breaker and its connection.

Version	Draw-out										Fixed									
Connection	Rear horizontal					Rear vertical					Rear horizontal					Rear vertical				
Temp. Ti	40 °C	45 °C	50 °C	55 °C	60 °C	40 °C	45 °C	50 °C	55 °C	60 °C	40 °C	45 °C	50 °C	55 °C	60 °C	40 °C	45 °C	50 °C	55 °C	60 °C
MVS (50kA)																				
MVS08N	800					800					800					800				
MVS10N	1000					1000					1000					1000				
MVS12N	1250					1250					1250					1250				
MVS16N	1600					1600					1600					1600				
MVS20N	2000			1900	1800	2000				1900	2000				1920	2000				
MVS25N	2500				2450	2500					2500					2500				
MVS32N	3200		3100	3000	2900	3200					3200					3200				
MVS40N	4000		3900	3750	3650	4000				3900	4000		3900		3800	4000				
MVS (65kA)																				
MVS08H	800					800					800					800				
MVS10H	1000					1000					1000					1000				
MVS12H	1250					1250					1250					1250				
MVS16H	1600					1600					1600					1600				
MVS20H	2000			1900	1800	2000				1900	2000				1920	2000				
MVS25H	2500	2450	2400	2300	2200	2500		2450	2400	2300	2500					2500				
MVS32H	3200		3100	3000	2900	3200					3200					3200				
MVS40H	4000		3900	3750	3650	4000				3900	4000		3900		3800	4000				

Power dissipation

Total power dissipation is the value measured at I_N, 50/60 Hz, for a 3 pole or 4 pole breaker (values above the power $P = 3RI^2$). The resistance between input / output is the value measured per pole (cold state).

Type	Draw-out		Fixed	
50kA	Power loss (W)	Input/output resistance (µohm)	Power loss (W)	Input/output resistance (µohm)
MVS08N	120	36	60	19
MVS10N	180	36	100	19
MVS12N	280	36	140	19
MVS16N	460	36	200	19
MVS20N	470	30	250	13
MVS25N	600	19	260	13
MVS32N	670	13	420	8
MVS40N	900	11	650	8
65kA				
MVS08H	100	30	42	13
MVS10H	150	30	70	13
MVS12H	230	30	100	13
MVS16H	390	30	170	13
MVS20H	470	30	250	13
MVS25H	600	19	260	8
MVS32H	670	13	420	8
MVS40H	900	11	650	8

Dimensions and connection

Dimensions and connection

Functions and characteristics *A-1*
Installation recommendations *B-1*

MVS08 to MVS32 circuit breakers **C-2**
Fixed 3/4-poles device C-2
Draw-out 3/4-poles device C-4

MVS40 circuit breakers **C-6**
Fixed 3/4-poles device C-6
Draw-out 3/4-poles device C-8


Accessories **C-10**


External modules **C-11**

Electrical diagrams *D-1*
Additional characteristics *E-1*
Catalogue numbers and order form *F-1*


MVS08 to MVS32 circuit breakers
Fixed 3/4-poles device

Dimensions

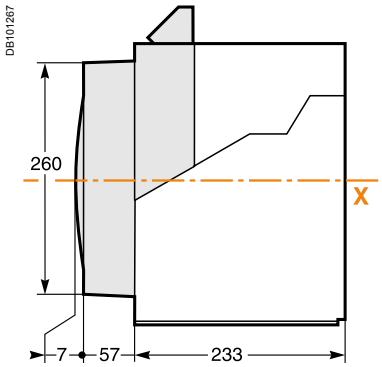


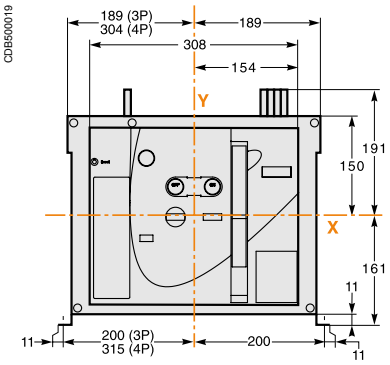


Mounting on base plate or rails

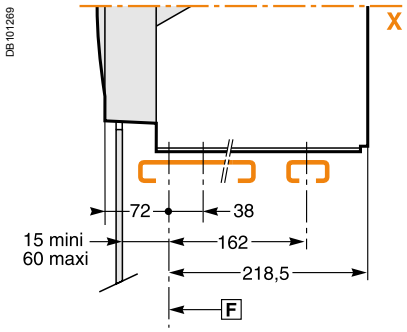



Mounting detail

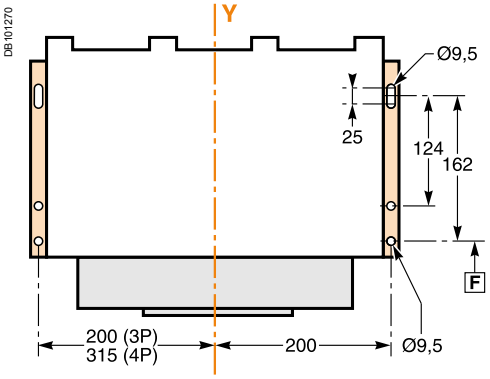

Safety clearances

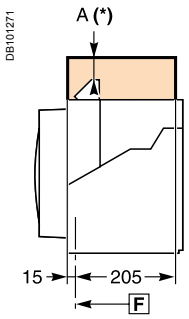

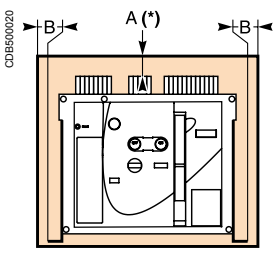

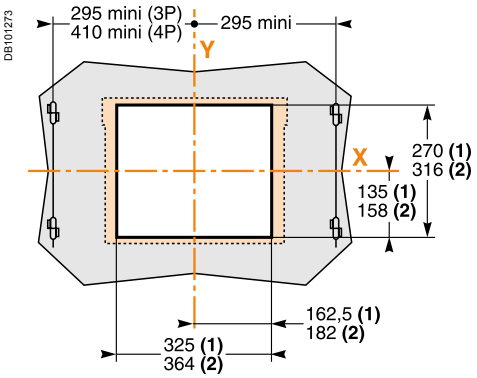

	Insulated parts	Metal parts	Energised parts
A	0	0	100
B	0	0	60


F : Datum.

(1) Without escutcheon.
(2) With escutcheon.
Note: X and Y are the symmetry planes for a 3-pole device.
A(*) An overhead clearance of 50 mm is required to remove the arc chutes.
An overhead clearance of 20 mm is required to remove the terminal block.


Connections

Horizontal rear connection

DB101274

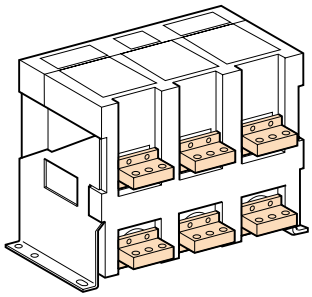


DB101276

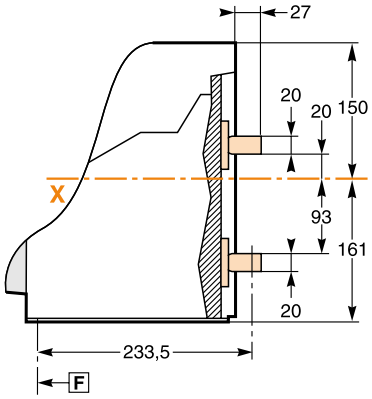


Detail

DB101277

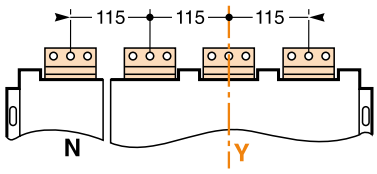


DB101278

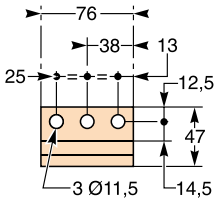


Vertical rear connection

DB101279

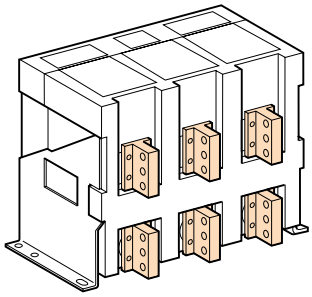


DB101280

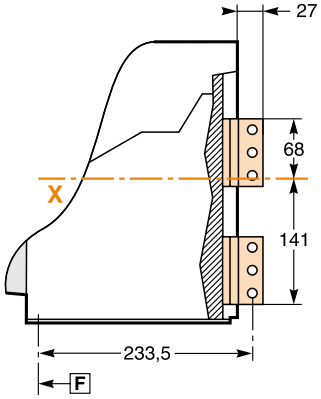


Detail

DB101287

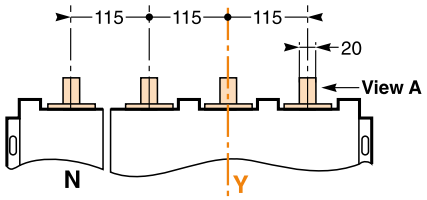

DB101282

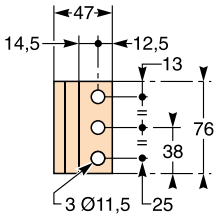



View A detail.

Note: *Recommended connection screws:* ***M10*** *class 8.8.*
Tightening torque: ***50 Nm*** *with contact washer.*

MVS08 to MVS32 circuit breakers
Draw-out 3/4-poles device


Dimensions

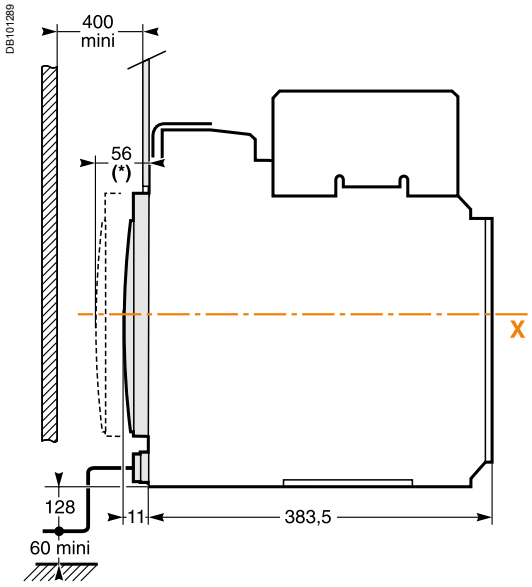

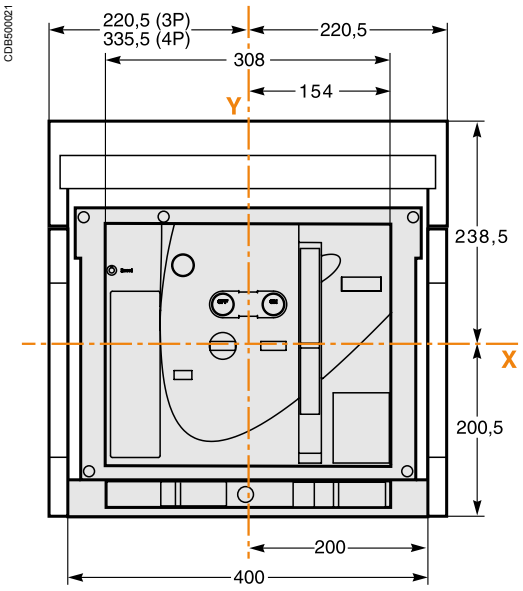


(*) Disconnected position.


Mounting on base plate or rails

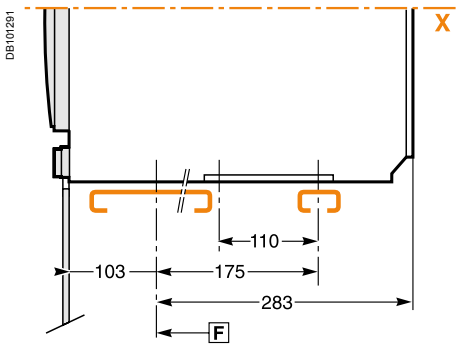


Mounting detail

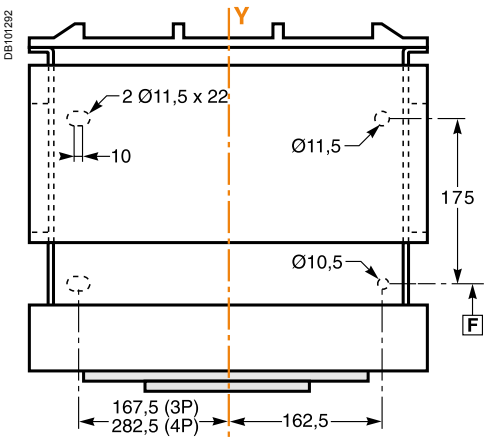

Safety clearances

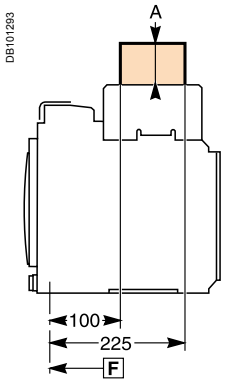


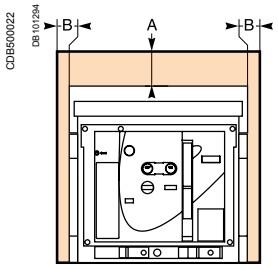

	Insulated parts	Metal parts	Energised parts
A	0	0	60
B	0	0	60

F : *Datum.*


Door cutout

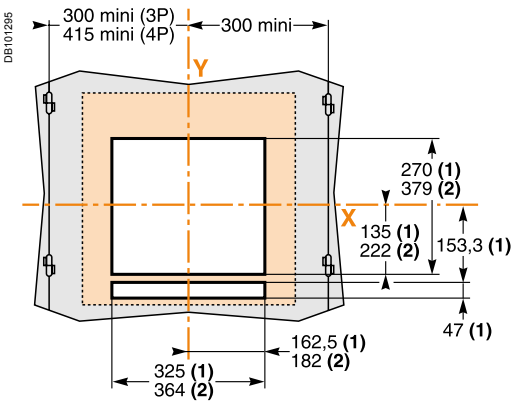


(1) Without escutcheon.
(2) With escutcheon.
***Note:** X and Y are the symmetry planes for a 3-pole device.*


Connections

Horizontal rear connection

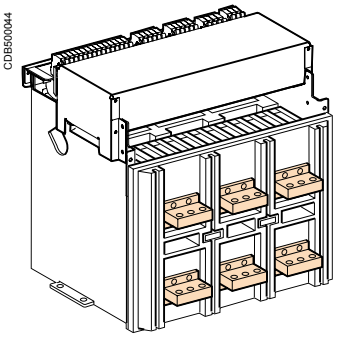


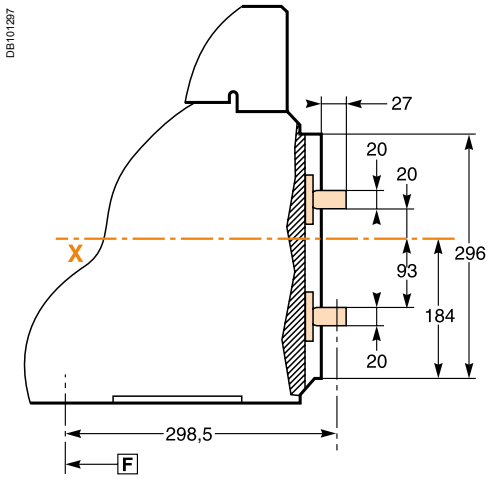


Detail

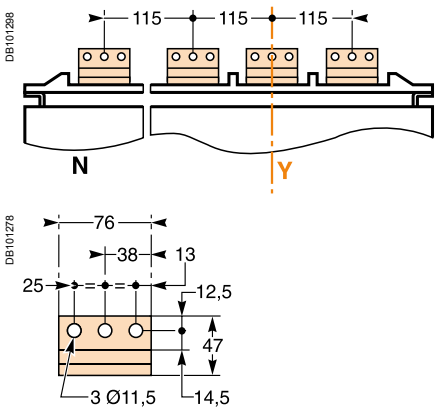


Vertical rear connection

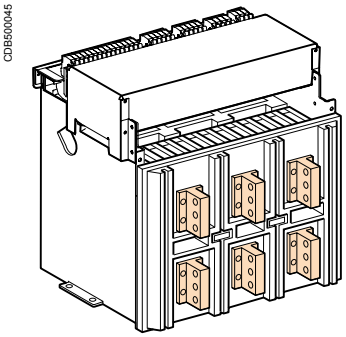

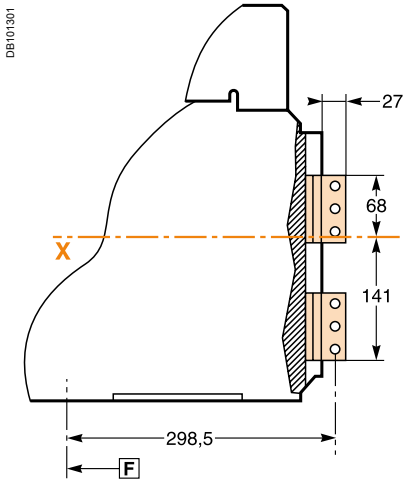

Detail

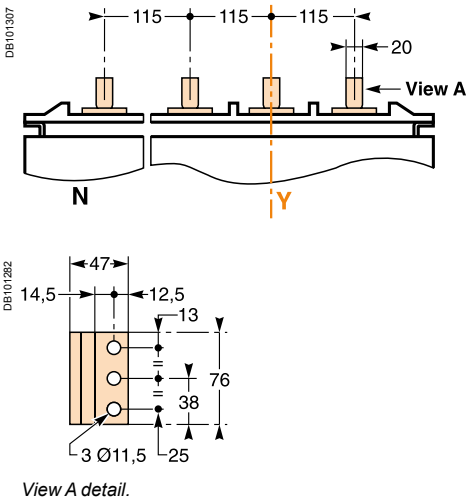



View A detail.

Note: *Recommended connection screws:* ***M10*** *class 8.8.*
Tightening torque: ***50 Nm*** *with contact washer.*


MVS40 circuit breakers
Fixed 3/4-poles device

Dimensions

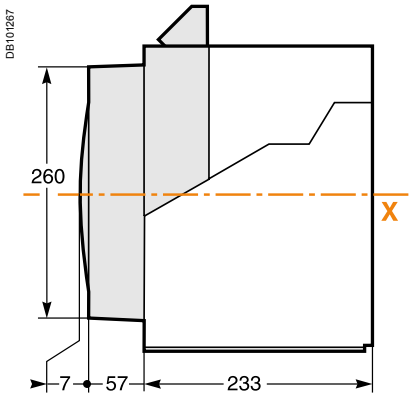


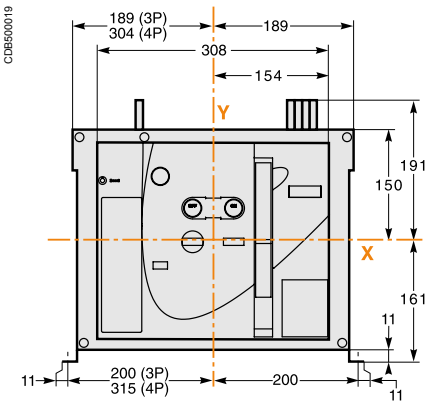


Mounting on base plate or rails

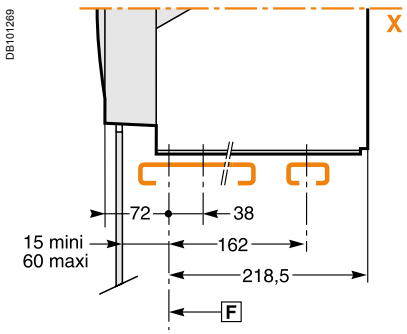


Mounting detail

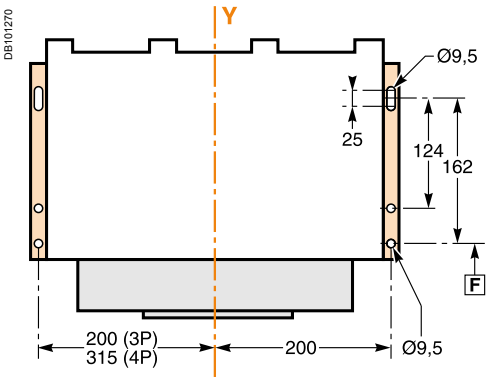


Safety clearances

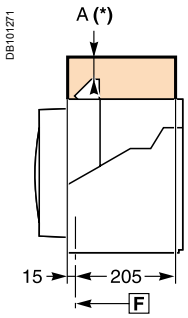

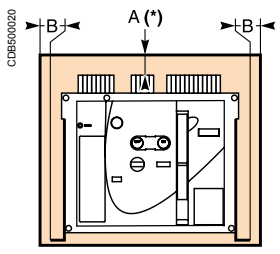

Door cutout

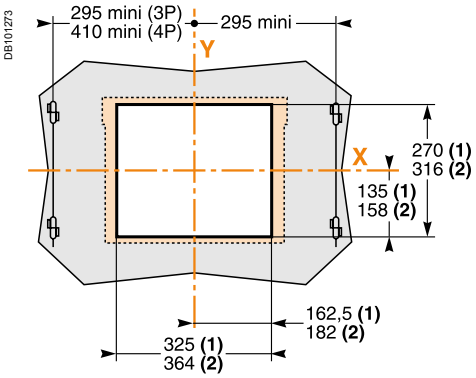

	Insulated parts	Metal parts	Energised parts
A	0	0	100
B	0	0	60


F : Datum.

(1) Without escutcheon.
(2) With escutcheon.
Note: X and Y are the symmetry planes for a 3-pole device.
A(*) An overhead clearance of 110 mm is required to remove the arc chutes.
An overhead clearance of 20 mm is required to remove the terminal block.


Connections

Horizontal rear connection

DB101309

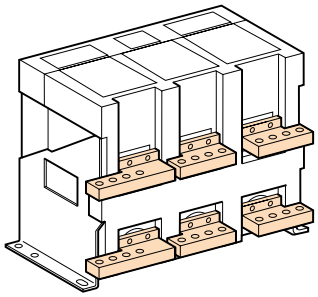


DB101276

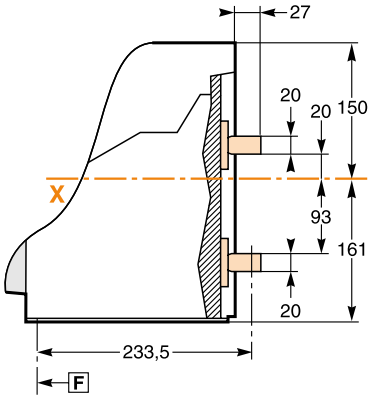


Detail


CDB500049

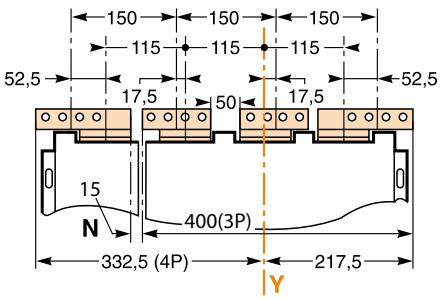

DB101311

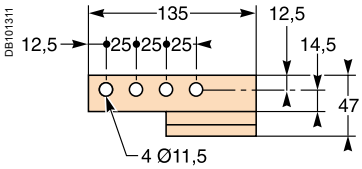


DB101315

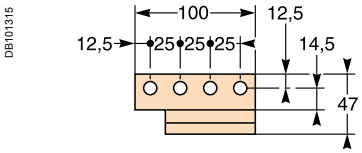


Vertical rear connection

DB101312

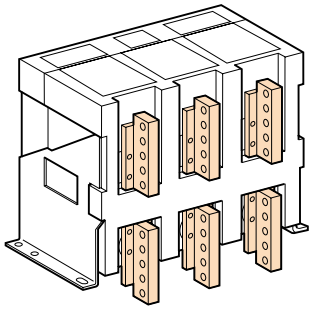


DB101313

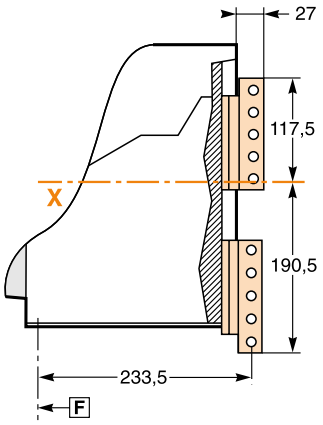


Detail

DB101287

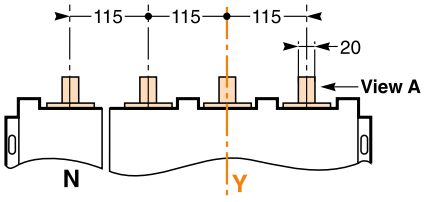


DB101314

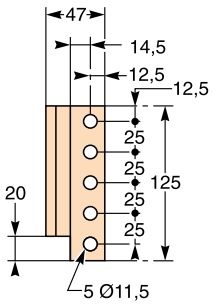


Note: *Recommended connection screws:* ***M10*** *class 8.8.*
Tightening torque: ***50 Nm*** *with contact washer.*

MVS40 circuit breakers
Draw-out 3/4-poles device


Dimensions

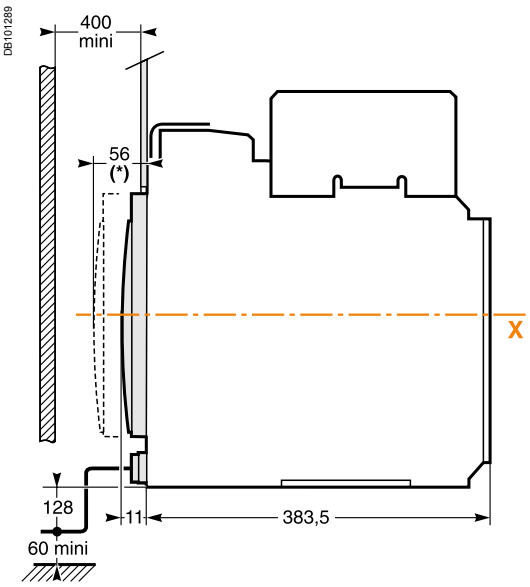

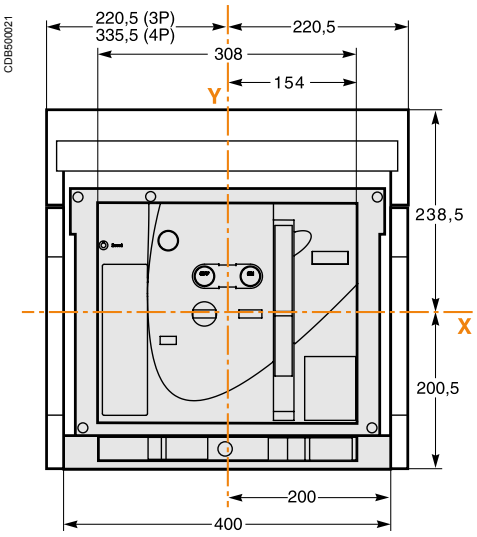


(*) Disconnected position.


Mounting on base plate or rails

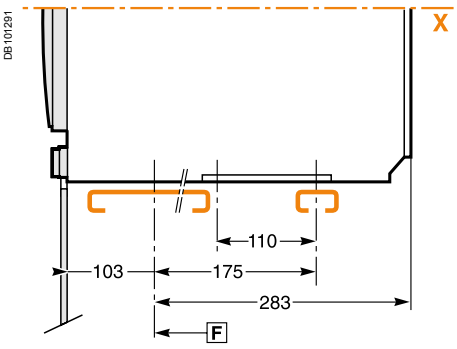


Mounting detail

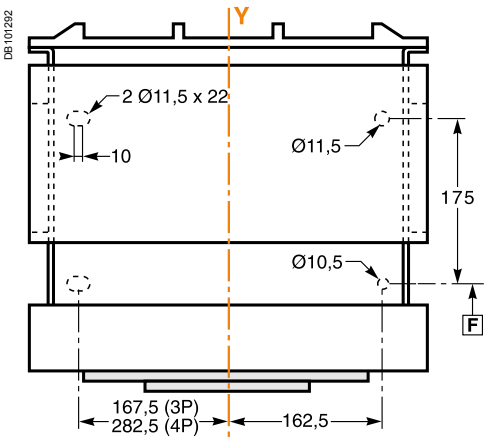

Safety clearances

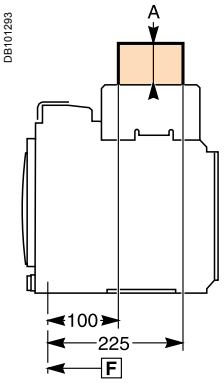


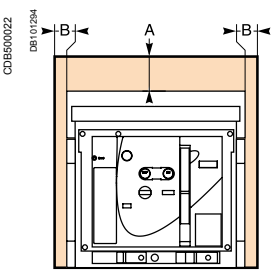

	Insulated parts	Metal parts	Energised parts
A	0	0	60
B	0	0	60

F : Datum.

Door cutout

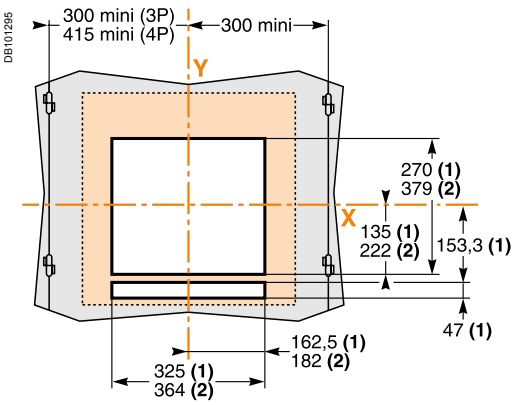


(1) Without escutcheon.
(2) With escutcheon.
Note: X and Y are the symmetry planes for a 3-pole device.
The safety clearances take into account the space required to remove the arc chutes.


Connections

Horizontal rear connection

CDB500046

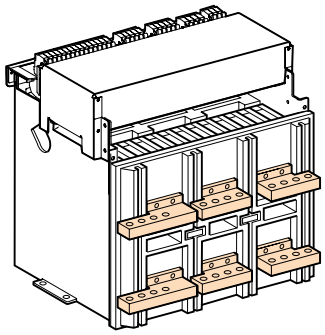


DB101297

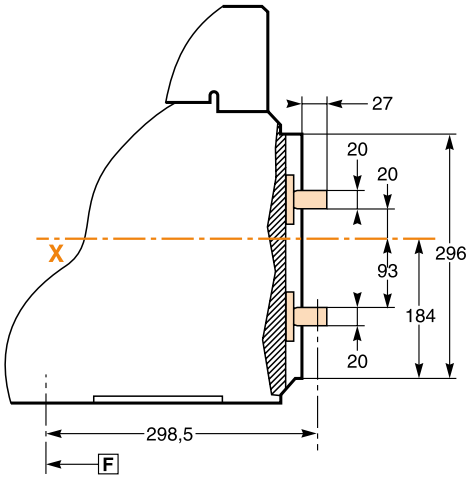


Detail


CDB500050

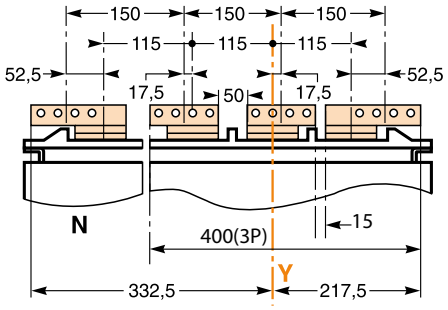

DB101311

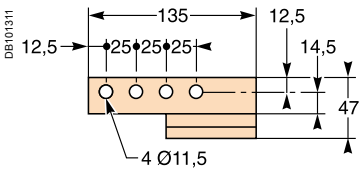


DB101315

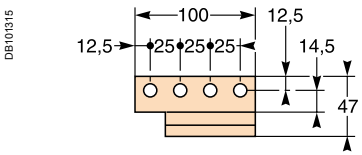


Vertical rear connection


CDB500047

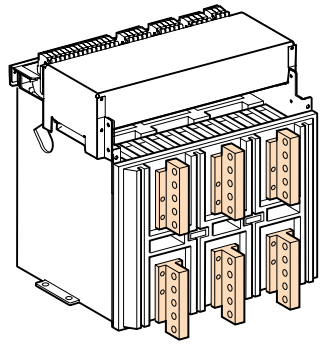

DB101319

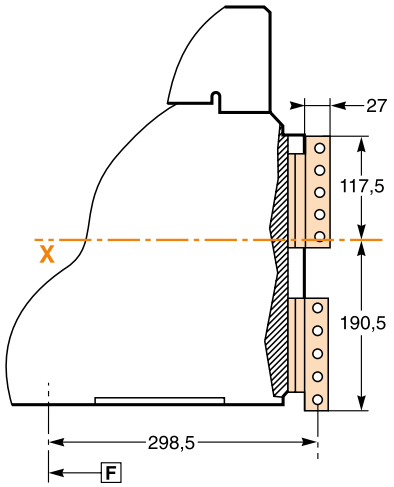


DB101314

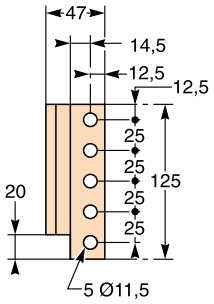

View A detail.

Detail

DB101307

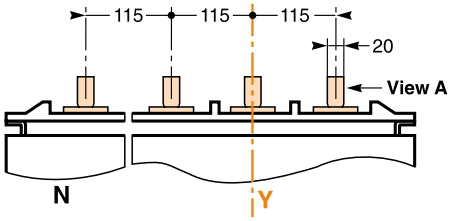


Note: *Recommended connection screws:* ***M10*** *class 8.8.*
Tightening torque: ***50 Nm*** *with contact washer.*


Accessories

Mounting on backplate with special brackets (EasyPact MVS08 to 32 fixed)


DB101350

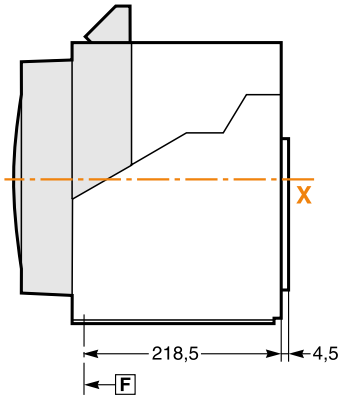


DB101351

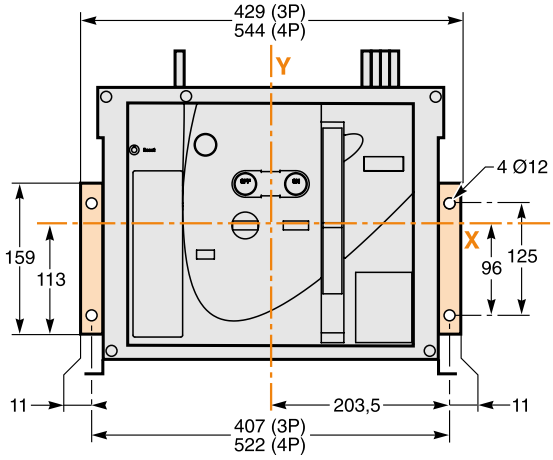


Connection of auxilary wiring to terminal block

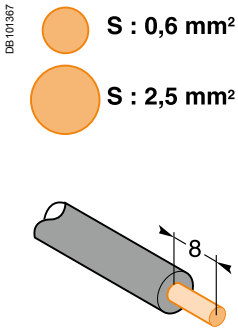


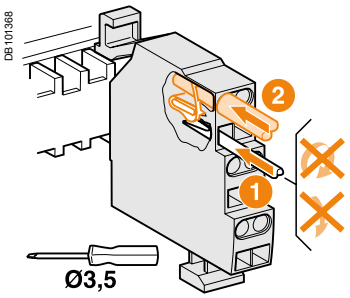


One conductor only per connection point.


External power supply module (AD)

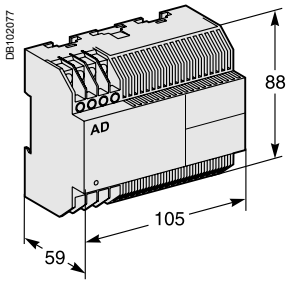

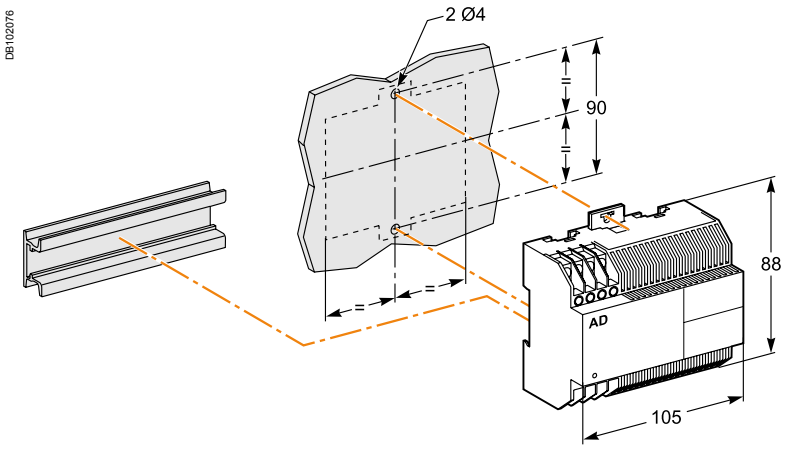

Delay unit for MN release

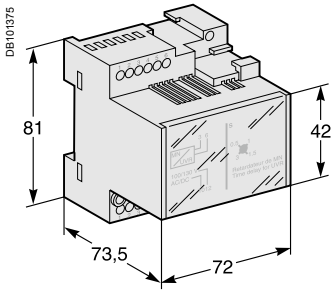

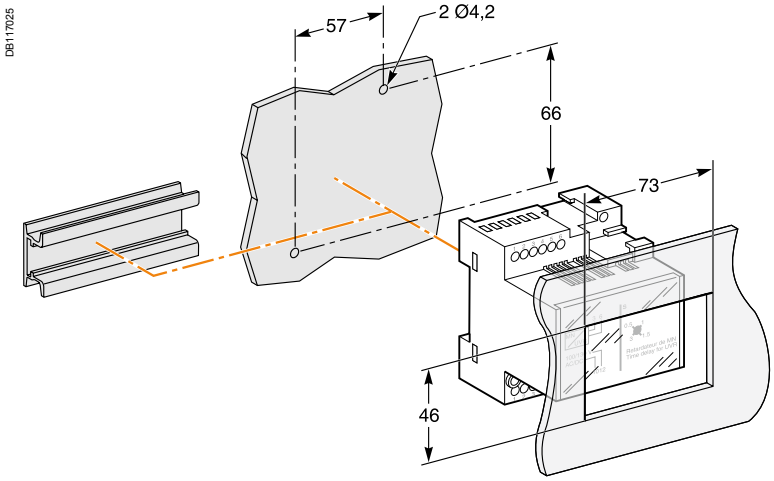


External modules

External sensor for external neutral


Dimensions

400/2000 A (MVS08 to MVS20)

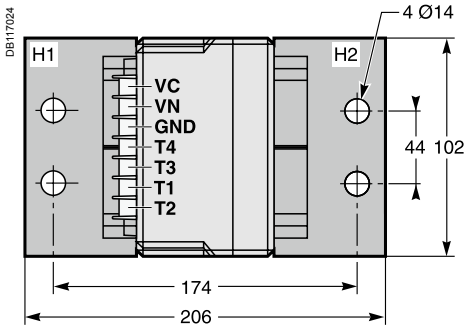

High: 162 mm.


1000/4000 A (MVS25 to MVS40)

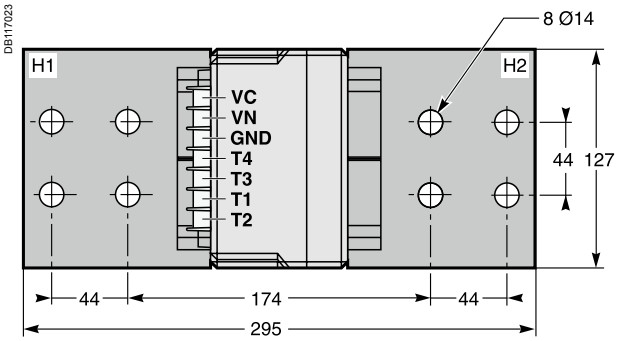


High: 162 mm.

Installation

400/2000 A (MVS08 to MVS20)

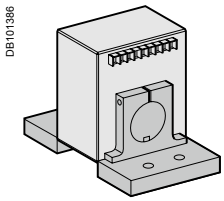

1000/4000 A (MVS25 to MVS40)

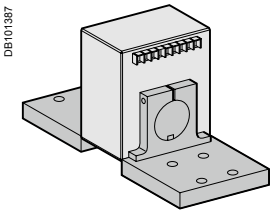

Electrical diagrams

Electrical diagrams

Functions and characteristics *A-1*
Installation recommendations *B-1*
Dimensions and connection *C-1*

EasyPact MVS08 to 40 **D-2**
Fixed and draw-out devices D-2


EasyPact MVS **D-4**
Earth-fault protection/Neutral protection D-4
Zone selective interlocking D-5
24 V DC external power supply AD module D-6

Additional characteristics *E-1*
Catalogue numbers and order form *F-1*


Masterpact MVS08 to MVS40
Fixed and draw-out devices

The diagram is shown with circuits de-energised, all devices open, connected and charged and relays in normal position.

Power

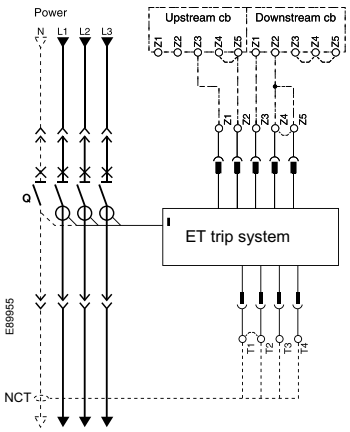


ET/ETA/ETV trip system

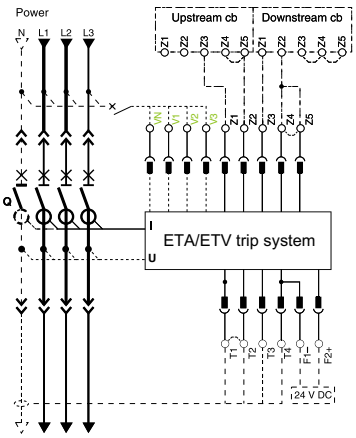

Note: V1...VN Voltage connections are available in ETV trip system.

Remote operation

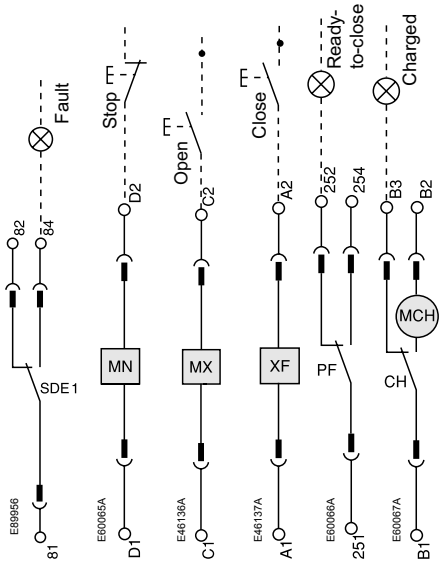

ET trip system

UC1		UC2	
Z5			
Z3	Z4	T3	T4
Z1	Z2	T1	T2

ETA/ETV trip system

UC1		UC2		UC3
Z5				F2+
Z3	Z4	T3	T4	VN
Z1	Z2	T1	T2	F1-

Remote operation

SDE	MN	MX	XF	PF	MCH
84	D2	C2	A2	254	B2
82				252	B3
81	D1	C1	A1	251	B1

ET/ETA/ETV trip system


UC1 :
Z1-Z5 zone selective interlocking
Z1=ZSI OUT SOURCE
Z2=ZSI OUT ; Z3 = ZSI IN SOURCE
Z4 =ZSI IN ST (short time)
Z5 =ZSI IN GF (earth fault)

UC2 :
T1, T2, T3, T4=external neutral

UC3 :
F2+, F1-: external 24 V DC power supply
VN: external voltage connector (must be connected to the neutral CT with a 3P circuit breaker equipped with ETV trip system)

Remote operation

SDE: Fault-trip indication contact (supplied as standard)
MN: Undervoltage release
MX: Shunt release (standard for Electrical breaker)
XF: Closing release (standard for Electrical breaker)
PF: "Ready to close"contact
MCH: Gear motor (standard for Electrical breaker)

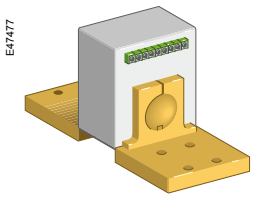


External sensor (CT).

External sensors (Neutral CT)


External sensor for earth-fault protection
The sensors, used with the 3P circuit breakers, are installed on the neutral conductor for:
1. Residual type earth-fault protection(ET/ETA/ETV 6G trip system)

The rating of the sensor (CT) must be compatible with the rating of the circuit breaker:
1. MVS08 to MVS20: CT 400/2000;
2. MVS25 to MVS40: CT 1000/4000;

Indication contacts

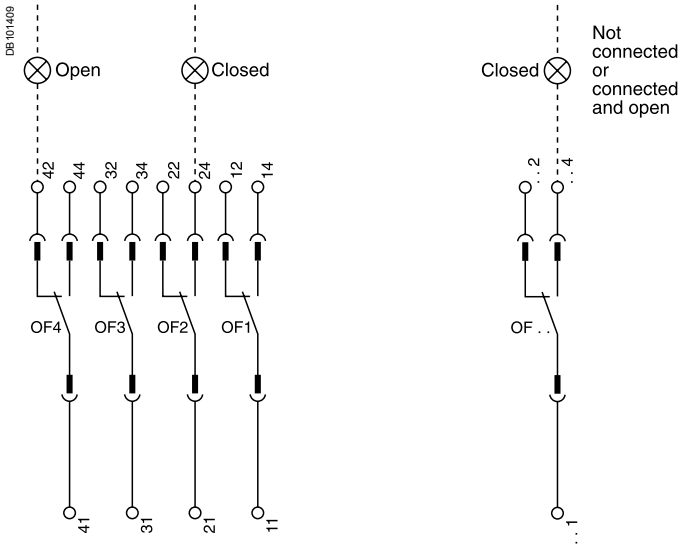

Chassis contacts

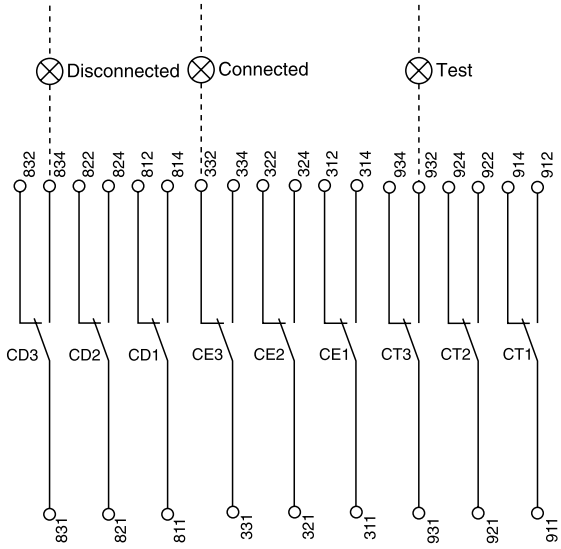

Indication contacts

OF4	OF3	OF2	OF1
44	34	24	14
42	32	22	12
41	31	21	11

Standard

OF14	OF13	OF12	OF11
144	134	124	114
142	132	122	112
141	131	121	111

Optional

Chassis contacts

CD3	CD2	CD1	CE3	CE2	CE1	CT3	CT2	CT1
834	824	814	334	324	314	934	924	914
832	822	812	332	322	312	932	922	912
831	821	811	331	321	311	931	921	911

Optional

Indication contacts

OF 4	Standard
OF 3	ON/OFF
OF 2	Indication contacts
OF 1	

OF 14	Optional
OF 13	ON/OFF
OF 12	Indication contacts
OF 11	

Chassis contacts

CD3 Disconnected	CE3 Connected	CT3 Test
CD2 Position	CE2 Position	CT2 Position
CD1 Contacts	CE1 Contacts	CT1 Contacts

Key:

Draw-out device only

XXX *SDE1, OF1, OF2, OF3, OF4 supplied as standard*

Interconnected connections (only one wire per connection point)

EasyPact MVS
Earth-fault protection
Neutral Protection

External sensor (CT) for residual earth-fault protection

Connection of current-transformer secondary circuit for external neutral

EasyPact MVS equipped with a ET/ETA/ETV 6G:

- Shielded cable with 2 twisted pairs
- T1 twisted with T2
- Maximum length 4 meters
- Cable cross-sectional area 0.4 to 1.5 mm^2
- Recommended cable: Belden 9552 or equivalent


For proper wiring of neutral CT, refer to instruction Bulletin 48041-082-03 shipped with it.

Do not remove factory-installed jumper between T1 and T2 unless neutral CT is connected.

If supply is via the top, follow the shematics.

If supply is via the bottom, control wiring is identical; for the power wiring, H1 is connected to the source side, H2 to the load side.

For four-pole versions, for residual earth-fault protection, the current transformer for the external neutral is not necessary.

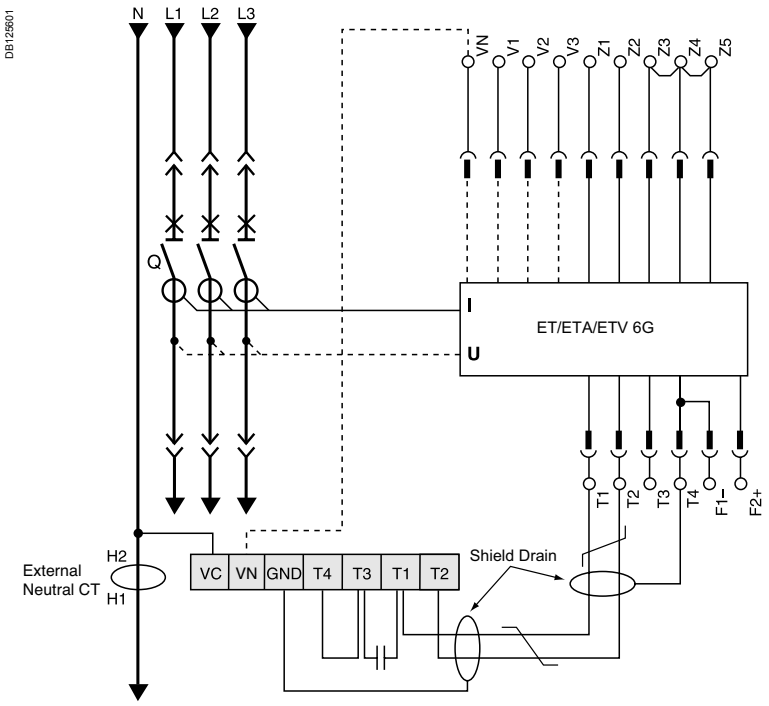

Neutral protection

- ■ Three pole circuit breaker:
  - □ Neutral protection is impossible
- ■ Four pole circuit breaker:
  - □ The current transformer for external neutral is not necessary


Zone selective interlocking

Zone-selective interlocking is used to reduce the electrodynamic forces exerted on the installation by shortening the time required to clear faults, while maintaining time discrimination between the various devices.
A pilot wire interconnects a number of circuit breakers equipped with ET range of trip system, as illustrated in the diagram above.
The control unit detecting a fault sends a signal upstream and checks for a signal arriving from downstream. If there is a signal from downstream, the circuit breaker remains closed for the full duration of its tripping delay. If there is no signal from downstream, the circuit breaker opens immediately, regardless of the tripping-delay setting.

Fault 1.
Only circuit breaker A detects the fault. Because it receives no signal from downstream, it opens immediately, regardless of its tripping delay set to 0.3.

Fault 2.
Circuit breakers A and B detect the fault. Circuit breaker A receives a signal from B and remains closed for the full duration of its tripping delay set to 0.3. Circuit breaker B does not receive a signal from downstream and opens immediately, in spite of its tripping delay set to 0.2.


DB101420

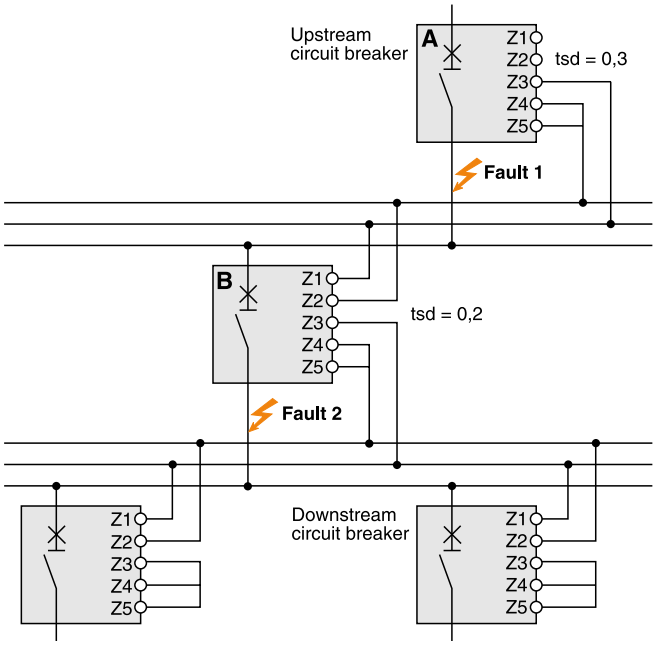

Wiring

- Maximum impedance: 2.7 Ω / 300 m
- Capacity of connectors: 0.4 to 2.5 mm^2
- Wires: single or multicore
- Maximum lenght: 3000 m
- Limits to device interconnection:
  - The common ZSI - OUT (Z1) and the output ZSI - OUT (Z2) can be connected to a maximum of 10 upstream device
  - A maximum of 100 downstream devices may be connected to the common ZSI - IN (Z3) and to an input ZSI - IN CR (Z4) or GF (Z5)

EasyPact MVS
24 V DC external power supply
AD module

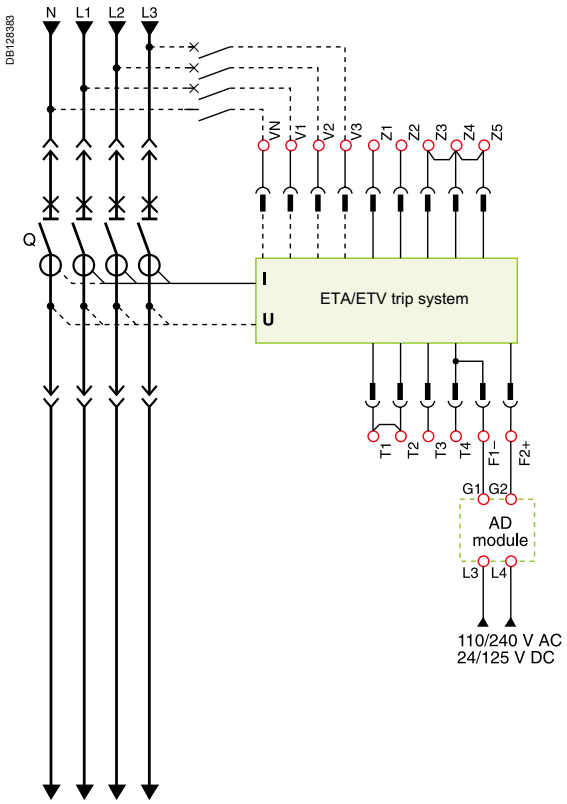

- The 24 V DC external power-supply (AD module) for the ET Trip system (F1- F2+) is not required for basic protections LSIG
- With ETA/ETV, it is recommended to connect 24 V DC external power-supply (AD module) to the Micrologic control unit (F1- F2+) in order to keep available the display and the energy metering, even if Current < 20 % In

Note: *In case of using the 24 V DC external power supply (AD module), maximum cable length between 24 V DC (G1, G2) and the control unit (F1-, F2+) must not exceed 10 meters.*

The internal voltage taps are connected to the bottom side of the circuit breaker.

Connection

The maximum length for each conductor supplying power to the trip unit is 10 m.

Do not ground F2+, F1-, or power supply output:

- The positive terminal (F2+) on the trip unit must not be connected to earth ground
- The negative terminal (F1-) on the trip unit must not be connected to earth ground
- The output terminals (- and +) of the 24 V DC power supply must not be grounded

Reduce electromagnetic interference:

- The input and output wires of the 24 V DC power supply must be physically separated as much as possible
- If the 24 V DC power supply wires cross power cables, they must cross perpendicularly. If this is not physically possible, the power supply conductors must be twisted together
- Power supply conductors must be cut to length. Do not loop excess conductor

Additional characteristics

Additional characteristics


Functions and characteristics *A-1*
Installation recommendations *B-1*
Dimensions and connection *C-1*
Electrical diagrams *D-1*

Tripping curves **E-2**


Catalogue numbers and order form *F-1*

Tripping curves


ET range of trip system - 2I

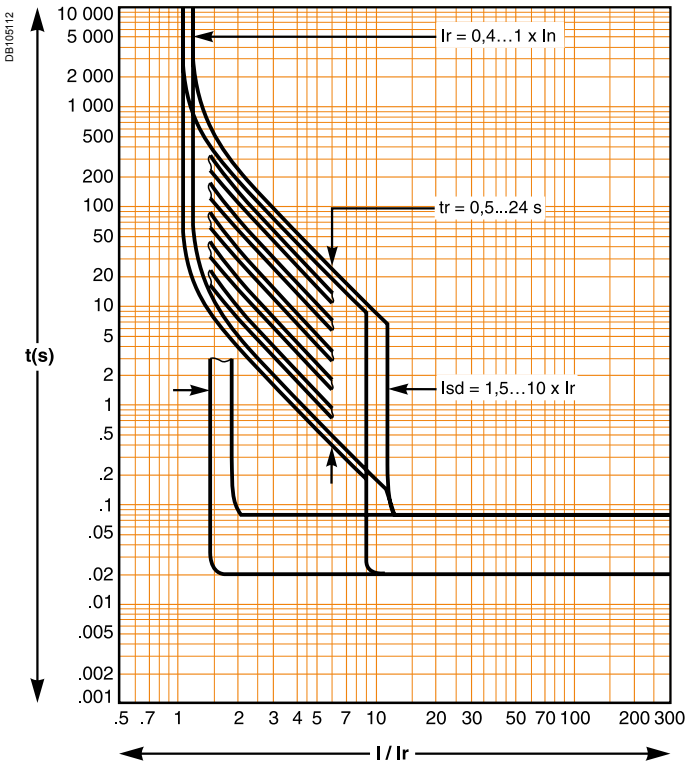

ET range of trip system - 5S, 6G

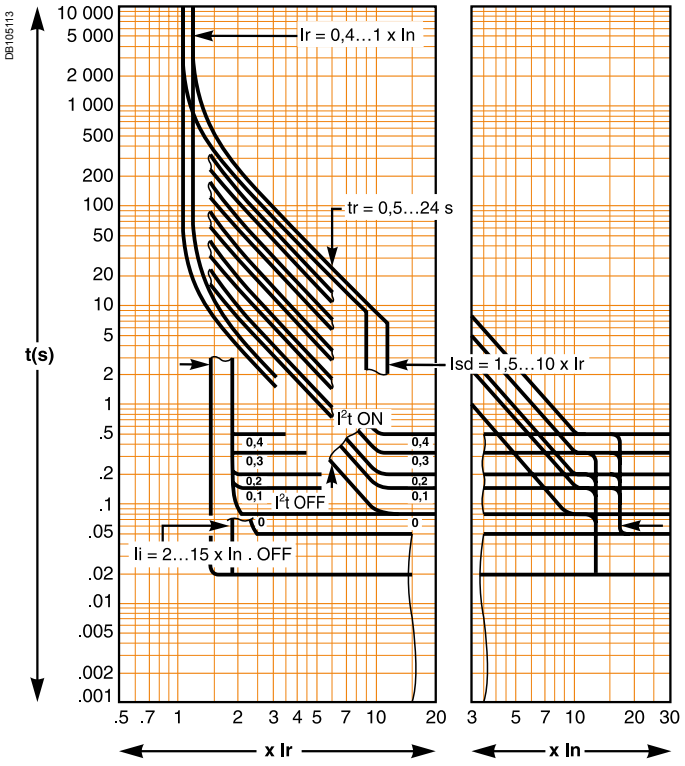

Earth fault protection (ET range of trip system - 6G)

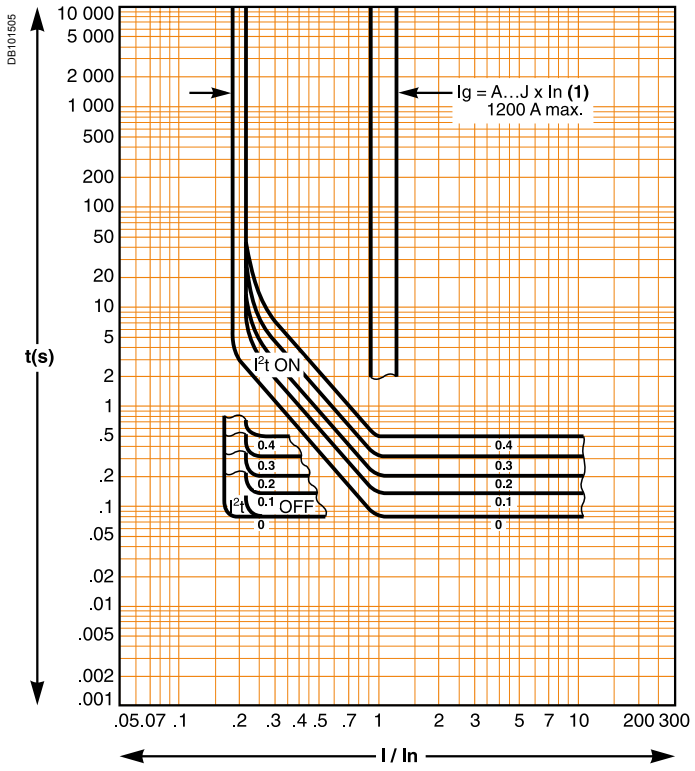

(1)

Ig = In x...	A	B	C	D	E	F	G	H	I
In ≤ 400 A	0.3	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
400 A < In ≤ 1000 A	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
In ≥ 1250A	500	640	720	800	880	960	1040	1120	1200

Catalogue numbers and order form



Catalogue numbers and order form

Functions and characteristics *A-1*
Installation recommendations *B-1*
Dimensions and connection *C-1*
Electrical diagrams *D-1*
Tripping curves *E-2*

Nomenclature **F-2**

EasyPact MVS **F-3**
Connection F-3
ET Trip System & accessories F-4
Remote operation F-5
Chassis locking and accessories F-7
Clusters F-8
Circuit breaker locking and accessories F-9
Mechanical interlocking for source changeover F-10
Indication contacts F-11
Instructions F-12

Order form **F-13**

Nomenclature

Range	Current rating	Type	Pole	Operating mechanism	Installation	Protection No.	Type	
EasyPact MVS (from 800 to 4000A) Icu=Ics=Icw (1 sec)=50kA & 65kA								
MVS	08	N	3	M	F	2	L	
	10	H	4	N	W	5	A	
	12			O		6	V	
	16			P		0	D	
	20			Q				
	25			R				
	32			S				
	40			T				
								11 digits
3	**2**	**1**	**1**	**1**	**1**	**1**	**1**	**Type**
							L	Basic protection
							A	Protection+current metering
							V	Protection+voltage metering
							D	Switch disconnector
							Protections No.	
						2	LI protection	
						5	LSI protection	
						6	LSIG protection	
						0	No protection for switch disconnector	
					Type of installation			
					F	Fixed		
					W	Draw-out		
				Operating mechanism				
				M	Manually operated ACB/SD			
				N	Electrical 200/240 VAC	MCH + XF + MX		
				O	Electrical 110/130 VAC	MCH + XF + MX		
				P	Electrical 380/415 VAC	MCH + XF + MX		
				Q	Electrical 200/250 VDC	MCH + XF + MX		
				R	Electrical 100/125 VDC	MCH + XF + MX		
				S	Electrical 48/60V DC	MCH + XF + MX		
				T	Electrical 24/30V DC	MCH + XF + MX		
			Number of poles					
			3P	3 Poles				
			4P	4 Poles				
		Type based on breaking capacity						
		N	Circuit breaker/ switch disconnector Icu=Ics=Icw(1sec)=50kA					
		H	Circuit breaker/ switch disconnector Icu=Ics=Icw(1sec)=65kA					
		Current rating						
	08	800A						
	10	1000A						
	12	1250A						
	16	1600A						
	20	2000A						
	25	2500A						
	32	3200A						
	40	4000A						

Example 1

MVS32N4EW6L

MVS	32	N	4	E	W	6	L
EasyPact MVS	3200A	50kA	4 Pole	Electrical operated	Draw-out type	LSIG protection	Basic trip unit with LED indications

Example 2


MVS16H3MF0D

MVS	16	H	3	M	F	0	D
EasyPact MVS	1600A	65kA	3 Pole	Manual operated	Fixed	No protection	Switch disconnector

Connection


		3P	4P
Fixed circuit breakers			
Rear connection (vertical or horizontal mounting) / Replacement kit (3 or 4 parts)			
800-2000 A	Vertical	47964	47965
	Horizontal	47964	47965
2500/3200 A	Vertical	47966	47967
	Horizontal	47966	47967
4000 A	Vertical	47968	47969
	Horizontal	47970	47971
Installation manual		MVS21735	

E46445



Vertical mounting.


E46446



Horizontal mounting.


Draw-out circuit breakers			
Rear connection (vertical or horizontal mounting) / Replacement kit (3 or 4 parts)			
800-2000 A	Vertical	47964	47965
	Horizontal	47964	47965
2500/3200 A	Vertical	47966	47967
	Horizontal	47966	47967
4000 A	Vertical	47968	47969
	Horizontal	47970	47971
Installation manual		MVS21735	

E46445



Vertical mounting.

E46446




Horizontal mounting.

Connection accessories

Interphase barriers / Replacement kit (3 parts)			
For fixed rear-connected circuit breaker		48599	48599
For draw-out rear-connected circuit breaker		48600	48600
Installation manual		MVS21735	


E46428



ET trip units & accessories

Battery + cover

E95540

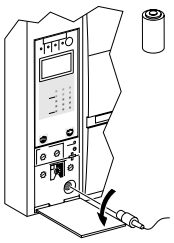


Battery (1 part)		33593
Cover (1 part)		33592

External sensors

External sensor for earth-fault protection (TCE) / 1 part


E46671



Sensor rating	400/2000 A	34035
	1000/4000 A	34036

External power supply module (AD) / 1 part


DB105360

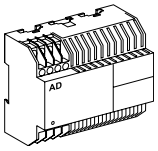

24-30 V DC	54440
48-60 V DC	54441
100-125 V DC	54442
110-130 V AC	54443
200-240 V AC	54444
380-415 V AC	54445

Test equipments / 1 Part

CDB500038

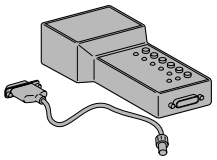


Hand held test kit (HHTK)	33594

Remote operation

Gear motor

E95172

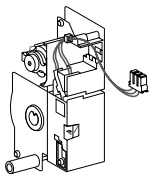


MCH (1 part)		
AC 50/60 Hz	100/130 V	47893
	200/240 V	47894
	380/415 V	47896
DC	24/30 V	47888
	48/60 V	47889
	100/125 V	47890
	200/250 V	47891
Terminal block (1 part)	For fixed circuit breaker	47074
	For draw-out circuit breaker	47849
Installation manual		MVS21736

E95169



Fixed.


E95171



Draw-out.

Closing release (XF)

E95170




Standard coil (1 part)		
AC 50/60 Hz DC	24/30 V DC, 24 V AC	33659
	48/60 V DC, 48 V AC	33660
	100/130 V AC/DC	MVS15511
	200/250 V AC/DC	MVS15512
	380/480 V AC	MVS15513
Terminal block (1 part)	For fixed circuit breaker	47074
	For draw-out circuit breaker	47849
Installation manual		MVS21736

E95169



Fixed.


E95171



Draw-out.

Opening release (MX)

E95170




Standard coil (1 part)		
AC 50/60 Hz DC	24/30 V DC, 24 V AC	33659
	48/60 V DC, 48 V AC	33660
	100/130 V AC/DC	33661
	200/250 V AC/DC	33662
	380/480 V AC	33664
Terminal block (1 part)	For fixed circuit breaker	47074
	For draw-out circuit breaker	47849
Installation manual		MVS21736

E95169



Fixed.


E95171




Draw-out.

Remote operation

Undervoltage release MN




Undervoltage release (1 part)		
AC 50/60 Hz DC	24/30 V DC, 24 V AC	33668
	48/60 V DC, 48 V AC	33669
	100/130 V AC/DC	33670
	200/250 V AC/DC	33671
	380/480 V AC	33673
Terminal block (1 part)	For fixed circuit breaker	47074
	For draw-out circuit breaker	47849

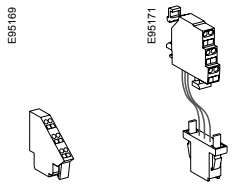

Fixed. *Draw-out.*

Installation manual		MVS21736

MN delay unit

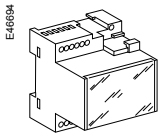


MN delay unit (1 part)			
		R (non-adjustable)	**R**r (adjustable)
AC 50/60 Hz DC	48/60 V AC/DC		33680
	100/130 V AC/DC	33684	33681
	200/250 V AC/DC	33685	33682
	380/480 V AC/DC		33683
Installation manual			MVS21736

EasyPact MVS
Chassis locking and accessories

Chassis locking

"Disconnected" position locking / 1 part


DB117458

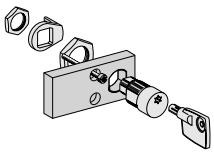

By padlocks		
	VCPO	Standard
By Profalux keylocks		
Profalux	1 lock with 1 key + adaptation kit	64934
	2 locks 1 key + adaptation kit	64935
	Profalux 1 lock+ 1 key (without adaptation kit)	42888
	Profalux 2 locks + 1 key (without adaptation kit)	42878
	Adaptation kit (without key locks)	48564
By Ronis keylocks		
Ronis	1 lock with 1 key + adaptation kit	64937
	2 locks 1 key + adaptation kit	64938
	Ronis 1 lock+ 1 key (without adaptation kit)	41940
	Ronis 2 locks + 1 key (without adaptation kit)	41950
	Adaptation kit (without key locks)	48564
Installation manual		MVS21737

Door interlock / 1 part

E46452




Right and left-hand side of chassis (VPECD or VPECG)		47914
Installation manual		MVS21737

Chassis accessories

Auxiliary terminal shield (CB) / 1 part


E46458

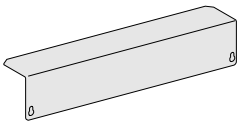

800/4000 A	3P	64942
	4P	48596
Installation manual		MVS21737

Safety shutters + locking block / 1 part

E46459

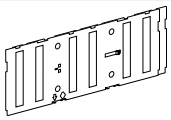

800/4000 A	3P	48721
	4P	48723
Installation manual		MVS21737

Shutter locking block (for replacement) / 1 part

E46460




2 parts for 800/4000 A		48591
Installation manual		MVS21737

Earthing kit for chassis

	3P	4P
Types for N/H/NA/HA		
	48433	48434

Clusters

E95538




1 disconnecting contact cluster for chassis (see table below) (part 1)	33166

Table : number of clusters required for the different chassis models

Chassis rating (A)	EasyPact MVS(3P)				EasyPact MVS(4P)			
	N	H	NA	HA	N	H	NA	HA
800	12	12	12	12	16	16	16	16
1000	12	12	12	12	16	16	16	16
1250	12	12	12	12	16	16	16	16
1600	12	12	12	12	16	16	16	16
2000	12	12	12	12	16	16	16	16
2500	24	12	24	12	32	16	32	16
3200	36	36	36	36	48	48	48	48
4000	42	42	42	42	56	56	56	56

Racking handle

E95561




Racking handle	47944

EasyPact MVS
Circuit breaker locking and accessories

Circuit breaker locking

Pushbutton locking device / 1 part


E46666



By padlocks		48536
Installation manual		MVS21736

OFF position locking / 1 part


E46735

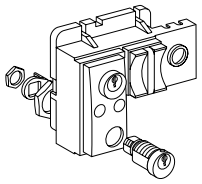

By Profalux keylocks		
Profalux	1 lock with 1 key + adaptation kit	64928
	2 locks 1 keys + adaptation kit	64929
	Profalux 1 lock+ 1 key (without adaptation kit)	42888
	Profalux 2 locks + 1 key (without adaptation kit)	42878
	Adaptation kit (without key locks)	64925
By Ronis keylocks		
Ronis	1 lock with 1 key + adaptation kit	64931
	2 locks 1 keys + adaptation kit	64932
	Ronis 1 lock+ 1 key (without adaptation kit)	41940
	Ronis 2 locks + 1 key (without adaptation kit)	41950
	Adaptation kit (without key locks)	64925
Installation manual		MVS21736

Mechanical operation counter / 1 part


DB125617



Operation counter CDM	48535
Installation manual	MVS21736

Escutcheon and accessories / 1 part


CDB500061



E46669



E46670




Escutcheon Cover Blanking plate

	Fixed	Draw-out
Escutcheon	48601	48603
Transparent cover (IP 54)	-	48604
Escutcheon blanking plate	48605	48605
Installation manual		MVS21736

Front cover (3P / 4P) / 1 part

CDB500058

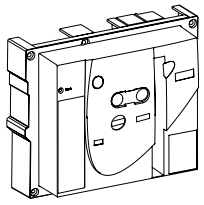

MVS Front cover	MVS21808
Installation manual	MVS21736

Spring charging handle / 1 part


E95536



Spring charging handle	47940
Installation manual	MVS21736

Arc chute for EasyPact MVS / 1 part

CDB500059

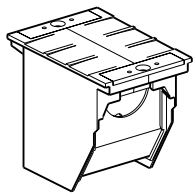


	3P	4P
Type N/NA	3 x MVS21807	4 x MVS21807
Type H/HA	3 x MVS21807	4 x MVS21807
Installation manual		MVS21736

Mechanical interlocking for source changeover

Interlocking of 2 devices using cables [1]

CDB500053

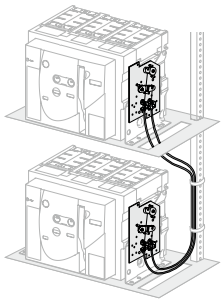


Choose 2 adaptation sets (1 for each device + 1 set of cables)	
1 adaptation fixture for EasyPact MVS fixed devices	47926
1 adaptation fixture for EasyPact MVS draw-out devices	47926
1 set of 2 cables	33209

(1) Can be used with any combination of EasyPact MVS, fixed or draw-out devices.

Installation manual	MVS21738

Interlocking of 3 devices using cables

CDB500060

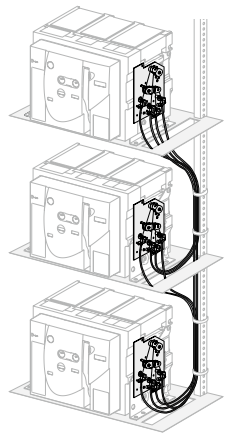


Choose 3 adaptation (including 3 adaptation fixtures + cables)	
3 sources, only 1 device closed, fixed or draw-out devices	48610
2 sources + 1 coupling, fixed or draw-out devices	48609
2 normal + 1 replacement source, fixed or draw-out devices	48608
Installation manual	MVS21738

Indication contacts

ON/OFF indication contacts (OF) / 12 parts


E46689

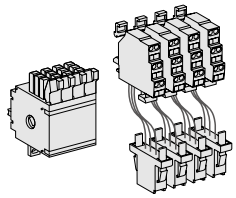

1 additional block of 4 contacts		47887
Wiring	For fixed circuit breaker	47074
	For draw-out circuit breaker	47849
Installation manual		MVS21736

"Ready to close" contact (1 max.) / 1 part


E46438

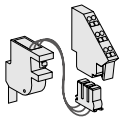

1 changeover contact (5 A - 240 V)		47080
Wiring	For fixed circuit breaker	47074
	For draw-out circuit breaker	47849
Installation manual		MVS21736

"Connected, disconnected, test position" indication contact (carriage switches) / 1 part

E46661



Changeover contacts	6 A - 240 V	33170
Installation manual		MVS21736

Auxiliary terminals for chassis alone

3 wire terminal (1 part)	47849
6 wire terminal (1 part)	47850
Jumpers (10 parts)	47900

Instructions

EasyPact MVS User Manual (English)	MVS21734
Fixed & draw-out circuit breaker	MVS21735
Circuit breaker accessories	MVS21736
Chassis accessories	MVS21737
Interlocking of EasyPact MVS devices	MVS21738

Order ref no:	
Date:	
Product ref no:	
OA No. (to be filled by Order booking team)	

EasyPact MVS

Circuit breaker and Switch-disconnectors Customer Order form

To indicate your choices, check the applicable square boxes ☐

And enter the appropriate information in the rectangles ☐

Circuit breaker or switch-disconnector		**Quantity**
Rating	**A**	
Circuit breaker	**N/ H**	
Switch Disconnector	**NA/HA**	
Number of poles	**3 or 4**	
Type of equipment	Fixed	
	Draw out with chassis	
	Draw out without chassis	
	(moving part only)	
	Chassis alone	
Operating Mechanism	**Manual Operated**	
	Electrical Operated	
MCH - Gear motor	**V**	
XF - Closing coil	**V**	
MX - Shunt/Opening voltage release	**V**	

ET Trip System						
0- Without display	**2I**	☐	**5S**	☐	**6G**	☐
A - Current Metering	**2I**	☐	**5S**	☐	**6G**	☐
V - Voltage Metering	**2I**	☐	**5S**	☐	**6G**	☐
LR - Long-time rating plug	**Standard**		**0.4 to 1 Ir**			

Connection				
Horizontal	Top	☐	Bottom	☐
Vertical	Top	☐	Bottom	☐

Trip System functions:
2I : Basic protection (long time + inst.)
5S : Selective protection (long time + short time + inst.)
6G : Selective + earth-fault protection
(long time + short time + inst. + earth-fault)

Indication contacts			
OF - ON/OFF indication contacts			
Standard	1 block of 4 OF	10 A-240/380V AC	
Additional	1 block of 4 OF	6 A-240/380V AC	☐
SDE - "fault-trip" indication contact			
Standard	1 SDE	5A -240/380V AC	
Optional			
Carriage switches		8 A-240/380V AC	
CE - "Connected" position	Max. 3	qty	☐
CT - "Test" position	Max. 3	qty	☐
CD - "Disconnected" position	Max. 3	qty	☐
Remote tripping	**MN -** Under voltage release	**V**	☐
	R - Delay unit (fixed time delay)	0.25s	☐
	Rr - Adjustable delay unit	0.5s……3s	☐
AD - External power-supply module		**V**	☐
TCE - External sensor (NCT) for neutral of 3 Phase-4 Wire systems		400/2000A	☐
TCE - External sensor (NCT) for neutral of 3 Phase-4 Wire systems		1000/4000A	☐
PF - "Ready to close" contact		5A-240/380V AC	☐

Locks					
VBP - ON/OFF pushbutton locking (by transparent cover using padlock)					☐
VSPO - Device locking in OFF position by key lock (Only one key lock per ACB possible)					
	Key lock kit (w/o key lock)	Profalux	☐	Ronis	☐
	1 key lock	Profalux	☐	Ronis	☐
	2 identical key locks, 1 key	Profalux	☐	Ronis	☐
Chassis locking in "Disconnected" position:					
VSPD - by key locks	Key lock kit (w/o key lock)	Profalux	☐	Ronis	☐
	1 key lock	Profalux	☐	Ronis	☐
	2 identical key locks, 1 key	Profalux	☐	Ronis	☐
Door Interlock - VPEC		On left-hand side of chassis (LH)			☐
		On right-hand side of chassis (RH)			☐

Mechanical Interlocking of ACBs with Cable	
1 Normal source & 1 replacement source (2 devices)	☐
2 normal + 1 replacement source, fixed or draw-out devices	☐
2 sources with coupler on busbars (3 devices)	☐
3 sources, only 1 device closed, fixed or draw-out devices	☐

Accessories		
VO - Safety shutters on chassis	**Standard**	
CDP - Escutcheon	**Standard**	
Safety Shutter locking blocks		☐
CP - Transparent cover for escutcheon		☐
OP - Blanking plate for escutcheon		☐
CDM - Mechanical operation counter for MVS		☐
CB - Auxiliary terminal shield fitted on chassis		☐
EIP - Interphase barriers		☐
HHTK - Hand held test kit		☐

Notes:
Customer can provide only the reference no. of the product for the listed references. Kindly refer to product catalogue for list of references.
Customer to fill this order form for non-listed references.
All breakers will be provided with 1 OF (4 c/o contacts), 1 SDE (trip contact), Escutcheon (Panel sealing frame) as standard.
All draw-out breakers/switches will be supplied with Chassis & safety shutter.
For Electrical operated breakers/ switches, indicate the voltage ratings of MCH,XF & MX
Refer to product catalogue for available voltage ratings of MCH/XF/MX/MN & AD Module
The orientation of customer connecting terminals can be changed at site from Horizontal to vertical or vice-versa.

Schneider Electric Industries SAS
35, rue Joseph Monier
CS 30323
F- 92506 Rueil Malmaison Cedex

RCS Nanterre 954 503 439
Capital social 896 313 776 €
www.schneider-electric.com

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.

This document has been printed on ecological paper

Design: Schneider Electric
Photos: Schneider Electric
Printed:

© 2014 - Schneider Electric - All rights reserved.