

Instruction Bulletin

BOLT-LOC® Type BP 800-2000 Amp Switch

Fire Pump Padlock-On Provision Installation

Class 9810

INTRODUCTION:


This bulletin contains instructions for the installation of provisions to lock the BOLT-LOC® Type BP 800-2000 Amp Switches manufactured by Square D in the ON (Closed) position. **This procedure is to be performed only by Square D Field Service Department or other properly trained representatives who are qualified electrical personnel according to OSHA 1910.331 through 1910.335.**

Tools Required:

1 – Flat screw driver 1 – 7/32" Allen wrench (included)

BPLO20 (Kit Includes)

1 – 44005-653-01	Padlock Bracket	1 – 44005-657-01	7/32" Spl. Allen Wrench
2 – 44005-656-01	3/8-16 x 1" Tamperproof Screw	1 – 44005-654-01	Label
2 – 23701-00240	Lockwasher 3/8"	1 – 44005-655-01	Installation instructions

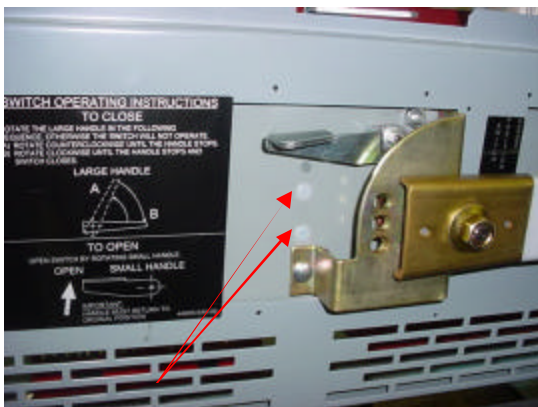


White hole plugs

Step #1

Remove the two white nylon hole plugs
With flat screw driver.

Manual Trip Lever

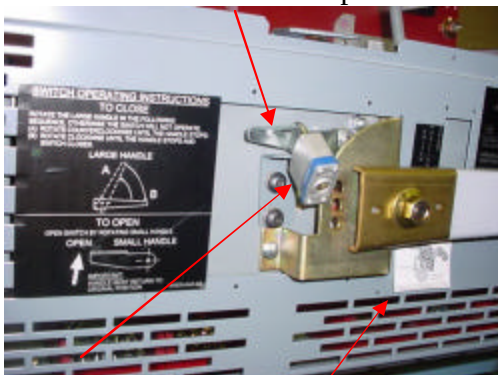

Padlock


Label

Step #3

Install Padlock (not included in kit) around trip lever and through slot in Padlock Bracket. Affix label to front panel in space available adjacent to Manual Trip Lever

IMPORTANT:

This feature only prevents the switch from manually opening when padlocked. If the switch is equipped with an Electric-Trip it will not prevent the switch from being opened by electrical means.

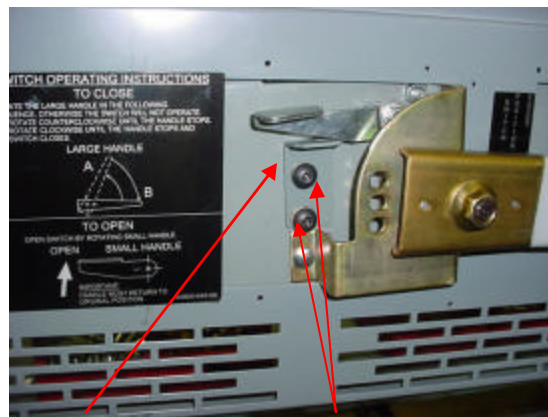

Padlock Bracket

3/8 Screw & Lockwasher

Step #2

Install Padlock Bracket using 3/8-16 Tamperproof
Screws and lock washers provided. Tighten to 100-200 lb-in.

