



FOR EZ METER-PAK[®] RIGHT TRANSITION SECTION



HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E.
- This kit must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying the equipment where this kit will be installed, before working on or inside the equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Replace all devices, doors, and covers after installing this kit and before turning on power to the equipment.

Failure to follow these Instructions will result in death or serious injury.

INSTALLATION

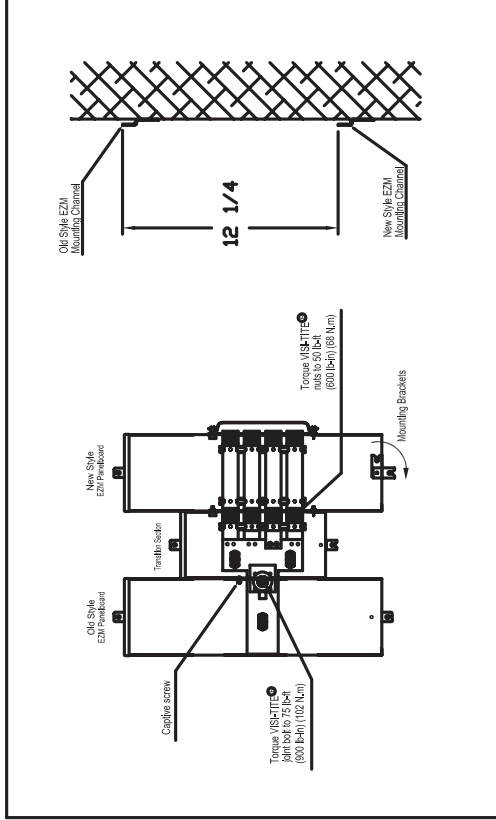


Figure 1: Mounting Diagram

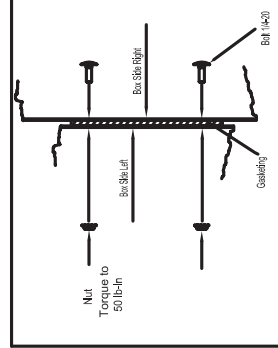


Figure 2: Installing Screw and Nut 1/4-20

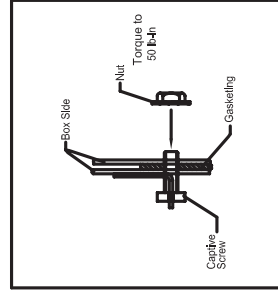


Figure 3: Installing the Nut onto the CapScrew

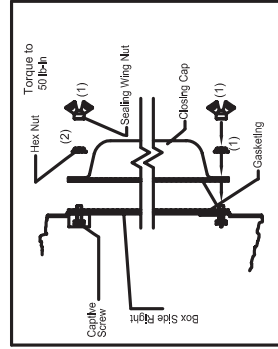


Figure 4: Installing the Closing Cap Right

INSTRUCTIONS.

INSTALLING RIGHT TRANSITION SECTION.

- 1.- Remove the front cover of the old style EZM panelboard.
- 2.- Remove the two hex nuts that hold the closing cap on the right side of the enclosure. Remove and discard the closing cap.
- 3.- Remove the front cover of the transition section.
- 4.- Rotate the mounting brackets out from behind the box (refer to figure 1).
- 5.- Place the transition section so that the window and the holes located in the left side of the box align with the window and the holes located in the right side of the old style EZM panelboard (refer to figure 1). Fasten the enclosure together with two 1/4-20 screws and two hex nuts provided in the bag assembly (refer to figure 2). Slide the 1/4-20 capScrew in the right side of the old style EZM panelboard through the hole in the box side and gasketing until the threads engage in the 1/4-20 hex nut provided in the bag assembly (refer to figure 3). All three screws and nuts must be tightened to 50 lb-in for adequate bonding. Do not overtighten.
- 6.- Secure the transition section to the wall with the mounting brackets.
- 7.- Position the slider joint-pak of the old style EZM panelboard by aligning the index mark with the inside wall of the box (refer to figure 1), and tighten the VSI-TITE joint bolt until the outer head twists off. If the red disk is visible, the joint is not tight. For maintenance or relocation, tighten to 75 lb-ft (900 lb-in) (102 N-m) with a torque wrench.
- 8.- Remove from inside the cabinet and discard the broken outer head of the VSI-TITE[®] bolt and red disk.

INSTALLING NEW STYLE EZM PANELBOARDS.

- 9.- Remove the 1/4-20 hex nuts that hold the closing cap of the transition section. Remove and retain this closing cap in order to place it subsequently in the right side of the last panelboard of the meter center.
- 10.- Secure the mounting channel of the new style EZM panelboard to the wall at a distance of 12 1/4 inches below the position of the mounting channel of the old style EZM panelboard. Use the top of both channels as reference (refer to figure 1).
- 11.- Rotate the mounting brackets of the new style EZM panelboard out from behind the box to the mounting position (refer to figure 1). Hang the new style EZM panelboard on the mounting channel.
- 12.- Remove the tenant circuit breaker cover and meter covers.
- 13.- Loosen the VSI-TITE[®] nuts located on the right side of the transition section. Slide the transition section and the new style EZM panelboard together to interconnect the main cross bus.
- 14.- Slide the three 1/4-20 capScrews in the right side of the transition section through the holes in the box side and gasketing until the threads engage in the 1/4-20 nuts provided in the bag assembly (refer figure 3). All three screws and nuts must be tightened to 50 lb-in for adequate bonding. Do not overtighten.
- 15.- Secure the new style EZM panelboard to the wall with the mounting brackets.
- 16.- Connect the horizontal cross bus by tightening the VSI-TITE[®] nuts until the outer head twists off. If the red disk is visible, the joint is not tight. For maintenance or relocation, tighten to 50 lb-ft (600 lb-in) (68 N-m) with a torque wrench.
- 17.- Remove from inside the cabinet and discard the broken outer heads of the VSI-TITE[®] nuts and red disks.
- 18.- Repeat steps 10 through 17 for each of the new style EZM panelboards that will be added to the meter center. Refer to instruction sheet included with each device.
- 19.- Place the closing plate provided with the transition section so that the holes of the closing plate align with the holes of the right side of the last new style EZM panelboard of the meter center. Slide the three 1/4-20 capScrews in the right side of the panelboard through the holes in the box side and gasketing until the threads engage in the 1/4-20 nuts provided in the bag assembly. All three screws and nuts must be tightened to 50 lb-in. Do not overtighten. Sealing wing nuts are provided in a bag assembly in the transition section. Use one at top and one at bottom of closing cap when required (refer to figure 4).
- 20.- Replace all outer covers.