


Simplicity in One Touch

02/07/2009

Version 1.1


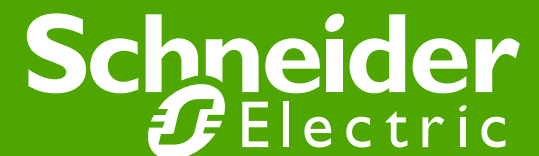


Introduction

- **Contents:**

- A. Getting Started
- B. Registering an Administrator
- C. Adding an User
- D. Operational Mode
- E. Partial Deletion
- F. Total Reset
- G. Tips

Easy-to-read Instructions

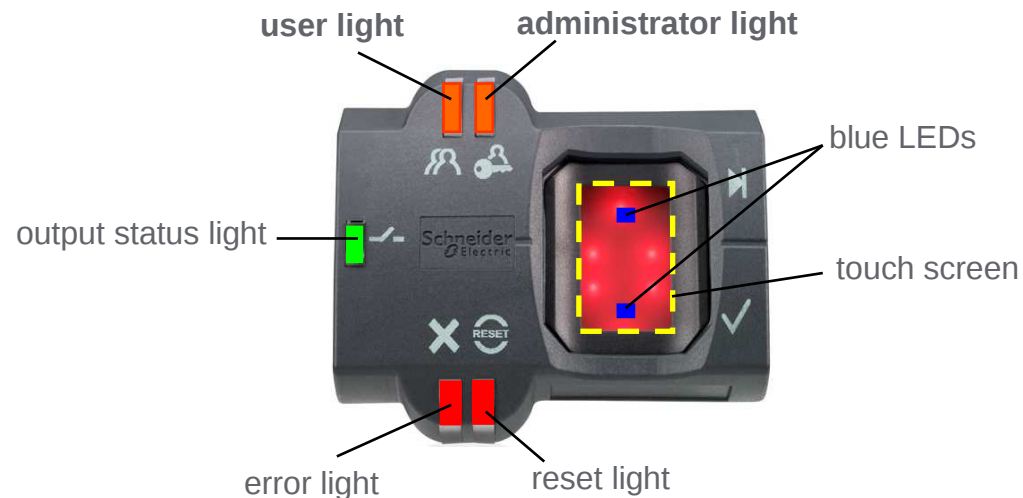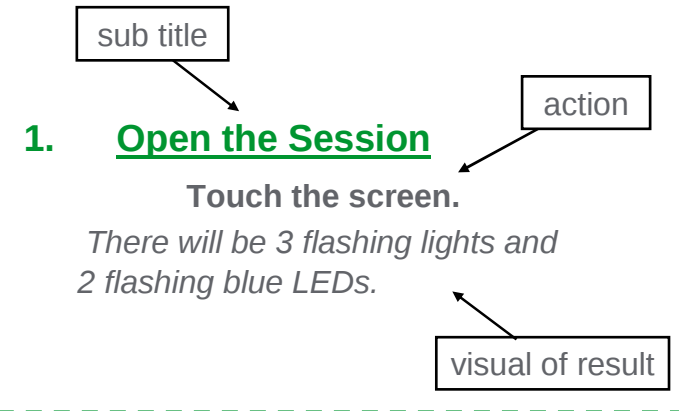

- **Definition:**

- **Administrator** – person who can only manage the biometric push button but cannot operate the device
- **User** – person who can operate the device but cannot manage the push button

- **For detailed information, please consult the product Instruction Sheet.**


A. Getting Started

1. Power On

Turn on the power for the biometric

The fingerprint screen will turn red, 2 blue LEDs and the “administrator light” will flash

Note: If not in this status, there is an administrator already recorded

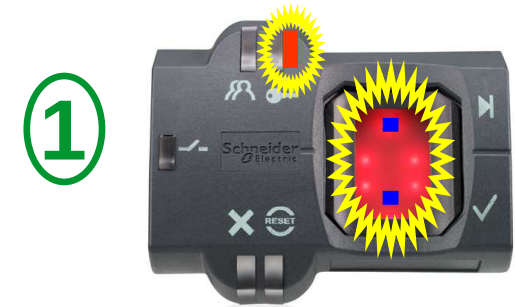

B. Registering an Administrator

An administrator MUST be registered before doing anything else.




NOTE: The first person programmed will become an administrator

1. Record Fingerprint


Touch the fingerprint screen 3 times for 1-2 seconds, pausing for 1-2 seconds in between each touch

Administrator light and 2 blue LEDs will be flashing

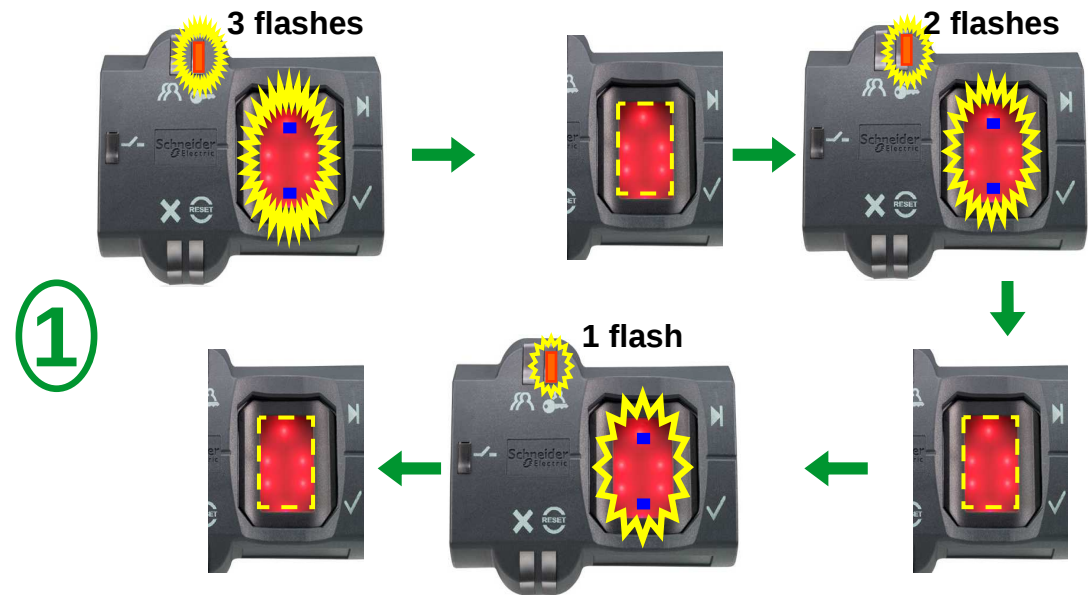

2. Administrator Registered

Administrator light will be solid and screen will turn blue for 1 second. All indicator lights will turn off and be in standby mode

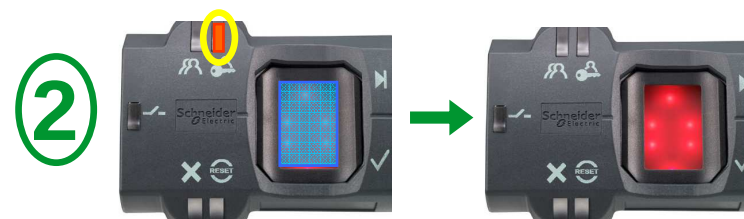

C. Adding an User *




* Only an **administrator** can add an user/administrator. An **administrator** must log-on by touching the screen once.

1. Open the Session

Administrator will touch the screen

There will be 3 solid lights and 2 flashing blue LEDs

①

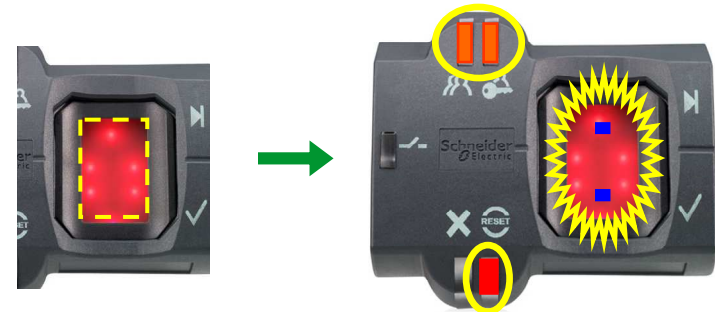


2. Select “User”

Touch the top half of the screen

*“User light” will be solid, blue
LEDs will continue to flash*

②

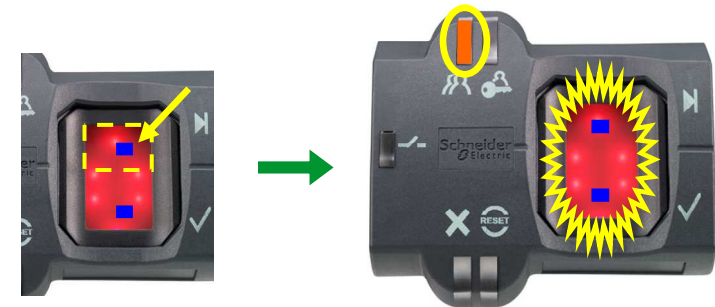


3. Confirm Choice

Touch the bottom half of the screen to confirm the add user option

Screen will turn blue for 1 second

③

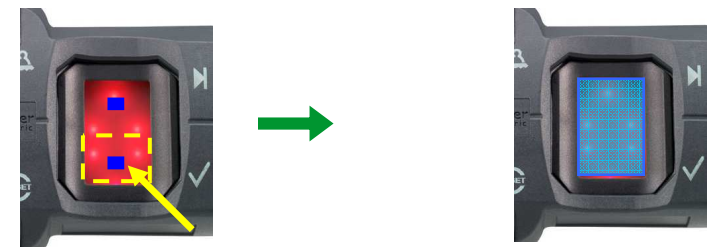

C. Adding an User (continued)

4. Record the User

Two blue LEDs and the “user light” will flash.

USER’S finger will touch the screen 3 times for 1-2 seconds, pausing for 1-2 seconds in between each touch



Screen will turn blue for 1 second

5. Close the Session

ADMINISTRATOR will touch the bottom half of the screen to accept

Screen will turn solid red

Note: An additional administrator can be recorded in the same way except in Step C2 the “administrator light” should be selected

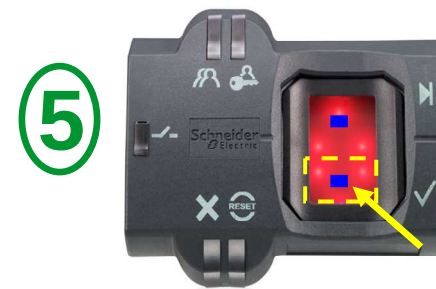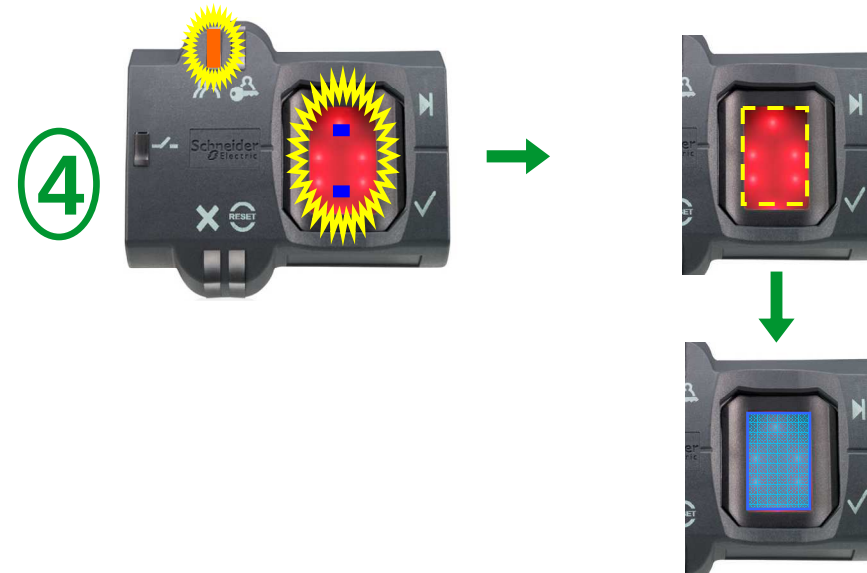


D. Operational Mode

1. Operator Access

Touch USER finger on screen

Output status light will turn green

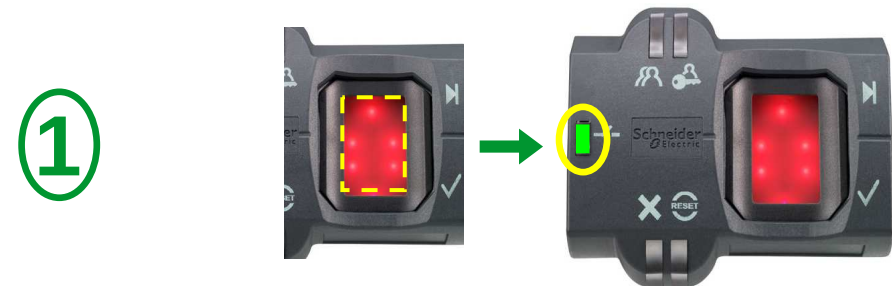

E. Partial Deletion *




* Only an **administrator** can delete. An **administrator** must log-on by touching the screen once.

1. Open the Session

Administrator will touch the screen

There will be 3 solid lights and 2 flashing blue LEDs

①

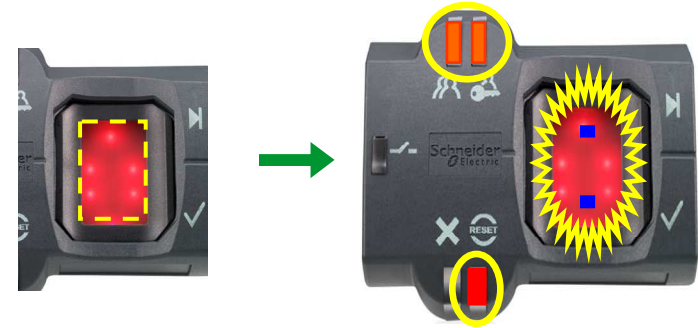


2. Select “Reset”

Touch the top half of the screen 3 times

“Reset light” will turn red

②

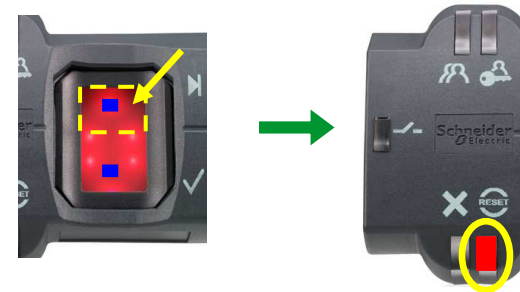


3. Confirm Deletion

Touch the bottom half of the screen

Screen will turn blue for 1 second

③

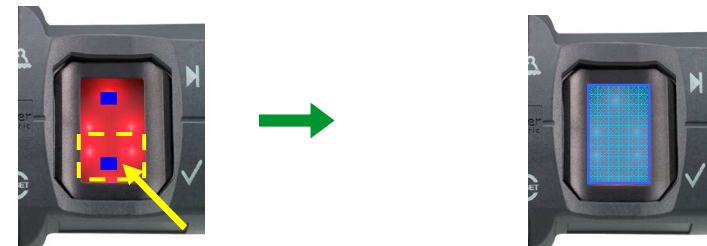

E. Partial Deletion (continued)

4. Select Partial Deletion


Top 2 lights will be solid and “reset light” will be flashing

Touch the top half of the screen once for partial (user) deletion [or twice for partial (administration) deletion]

“User light” and “reset light” will be solid

Touch the bottom half of the screen once to confirm user

Screen will turn blue for 1 second

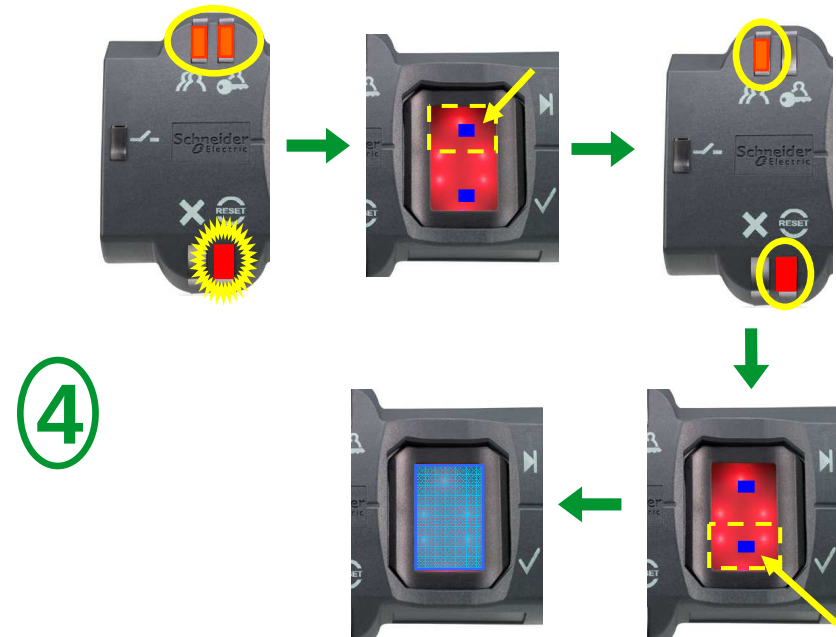

5. Un-record the User

“User light” will be flashing and “reset light” will be solid

USER’S finger will touch the screen 3 times for 1-2 seconds, pausing 1-2 seconds between each touch


Top 2 lights will be solid, “reset light” and 2 blue LEDs will be flashing



6. Close the Session

ADMINISTRATOR will touch the bottom half of the screen

Screen will turn solid red

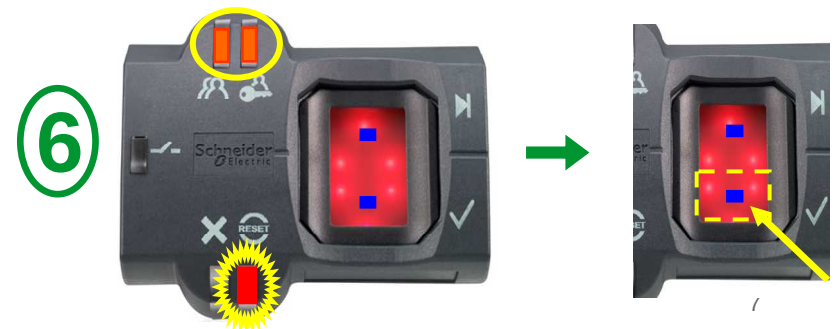

F. Total Reset *




* Only an **administrator** can reset unit. An **administrator** must log-on by touching the screen once.

1. Open the Session

Administrator will touch the screen

There will be 3 solid lights and 2 flashing blue LEDs

①

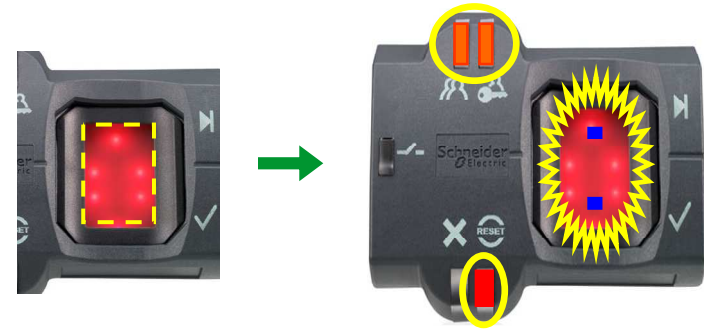


2. Select “Reset”

Touch the top half of the screen 3 times

“Reset light” will turn red

②

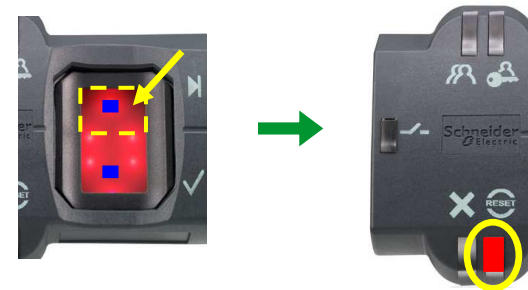

3. Confirm Deletion

Touch the bottom half of the screen

Screen will turn blue for 1 second

③



F. Total Reset (continued)

4. Select Total Reset

Top 2 lights will be solid and “reset light” will be flashing


Touch the top half of the screen 3 times for total reset

Bottom “reset light” will be solid

Touch the bottom half of the screen once to confirm reset

Screen will turn blue for 1 second

④

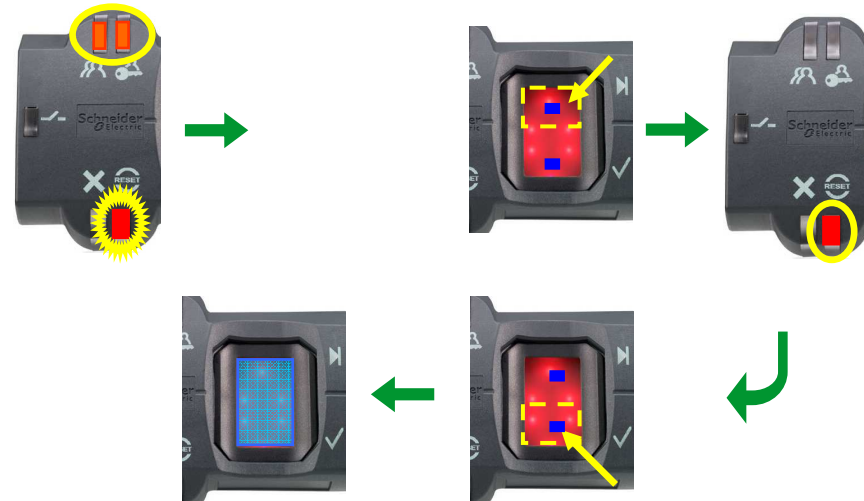


5. Execute Total Reset

“Reset light” and screen will flash in 3 pulse intervals

Touch the screen 3 times for 1-2 seconds, pausing 1-2 seconds between each touch

⑤

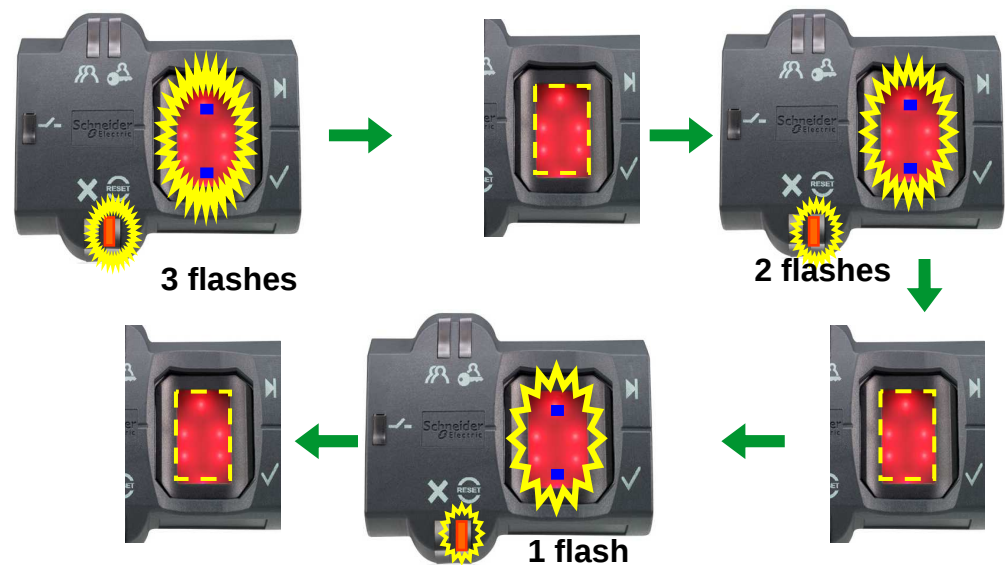

6. Total Rest Complete

Screen will go blank then return to the mode in A1

⑥



G. Tips



The unit **MUST** always have **at least 1 administrator**. The product will not allow deletion of the last administrator except by total reset.



If the **administrator** also wants to become an **user** then he/she must use **another finger**



A good idea is to record 2 fingers for one user (right hand / left hand) in case the user cannot always operate with the recorded finger (injury, dirty, etc.)



Lost? Wait 30 seconds...

No action for 30 seconds returns the product to standby mode



If the screen is having difficulty reading the “touch,” clean the window with a dry cloth (**no solvents**)



If the screen is having difficulty recognizing one’s “touch,” the same finger can be recorded several times – the best record will be selected.



Remember that one person can “open” the operation and different person can “close” that operation.



Perform a total reset before giving the product to someone else



In the case that the only administrator is gone, contact the =S= Help Desk to get instructions on how to perform a total reset of the memory