

Setting Mode

⚠ CAUTION

HAZARD OF NO PROTECTION OR NUISANCE TRIPPING

Modifying the protection functions must be done only by qualified electrical personnel.

Failure to follow these instructions can result in injury or equipment damage.


The protection function settings can be set:

- By a dial and fine-tuned on the keypad for the main protection functions
- On the keypad for all protection functions

The up arrow on the display indicates the protection function currently being set.

Setting Using a Dial

Figure 2 – Protection Switches

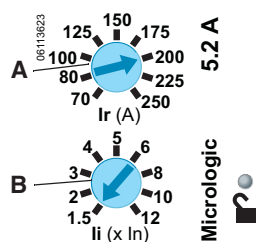

Use a dial to set (or preset) the I_r (A) and I_i (B) pickups.

Turning a dial results simultaneously in:

- Selection of the screen for the protection function assigned to the dial
- Unlocking (if necessary) the padlock (the navigation interface is in protection function setting mode)
- Setting the protection function assigned to the dial to the value indicated on the dial and on-screen.

Setting Using the Keypad


Use the keypad to fine-tune the protection function.

- The setting value cannot exceed that indicated by the dial.
- All the protection function settings are accessible on the keypad.

Press the **Mode** button successively to scroll through the protection function screens. Scrolling is cyclical.

Navigate through the protection function settings with the **→**, **↑** and **↓** navigation buttons.

- Use the **→** button to select the function to set:
 - The up arrow indicates the selected function
 - The down arrow indicates phase. Multiple down arrows indicate all phases set to the same value (except for the neutral protection setting)
 - Scrolling is cyclical
- Set the protection functions on the keypad with the **↑** and **↓** buttons.

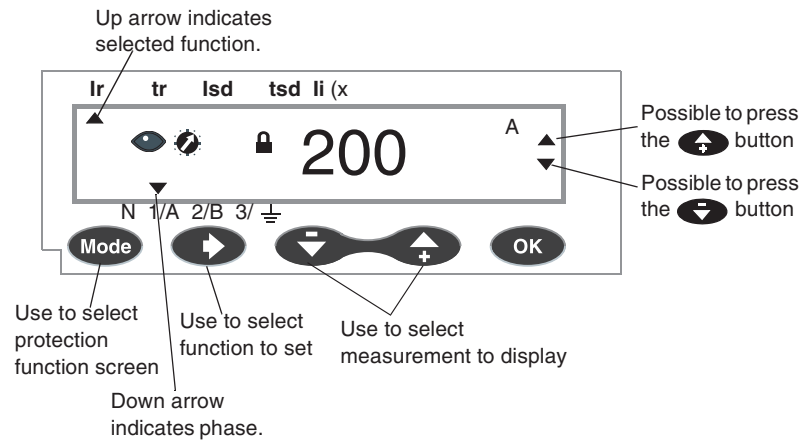Figure 3 – Protection Function Screen**Confirmation of Setting**

The value of a protection function set on the keypad must be:

1. Entered by pressing the OK key once (the OK pictogram blinks on the display)
2. Then confirmed by pressing the OK key again (the text OK displays for 2 seconds)

NOTE: Setting using a dial does not require any enter/confirm action.